

PARTS LIST


BY: _____ SID _____
 CHK'D: _____



FINISH: _____
 DATE: _____

AS SPECIFIED
 10-23-01

815-VB

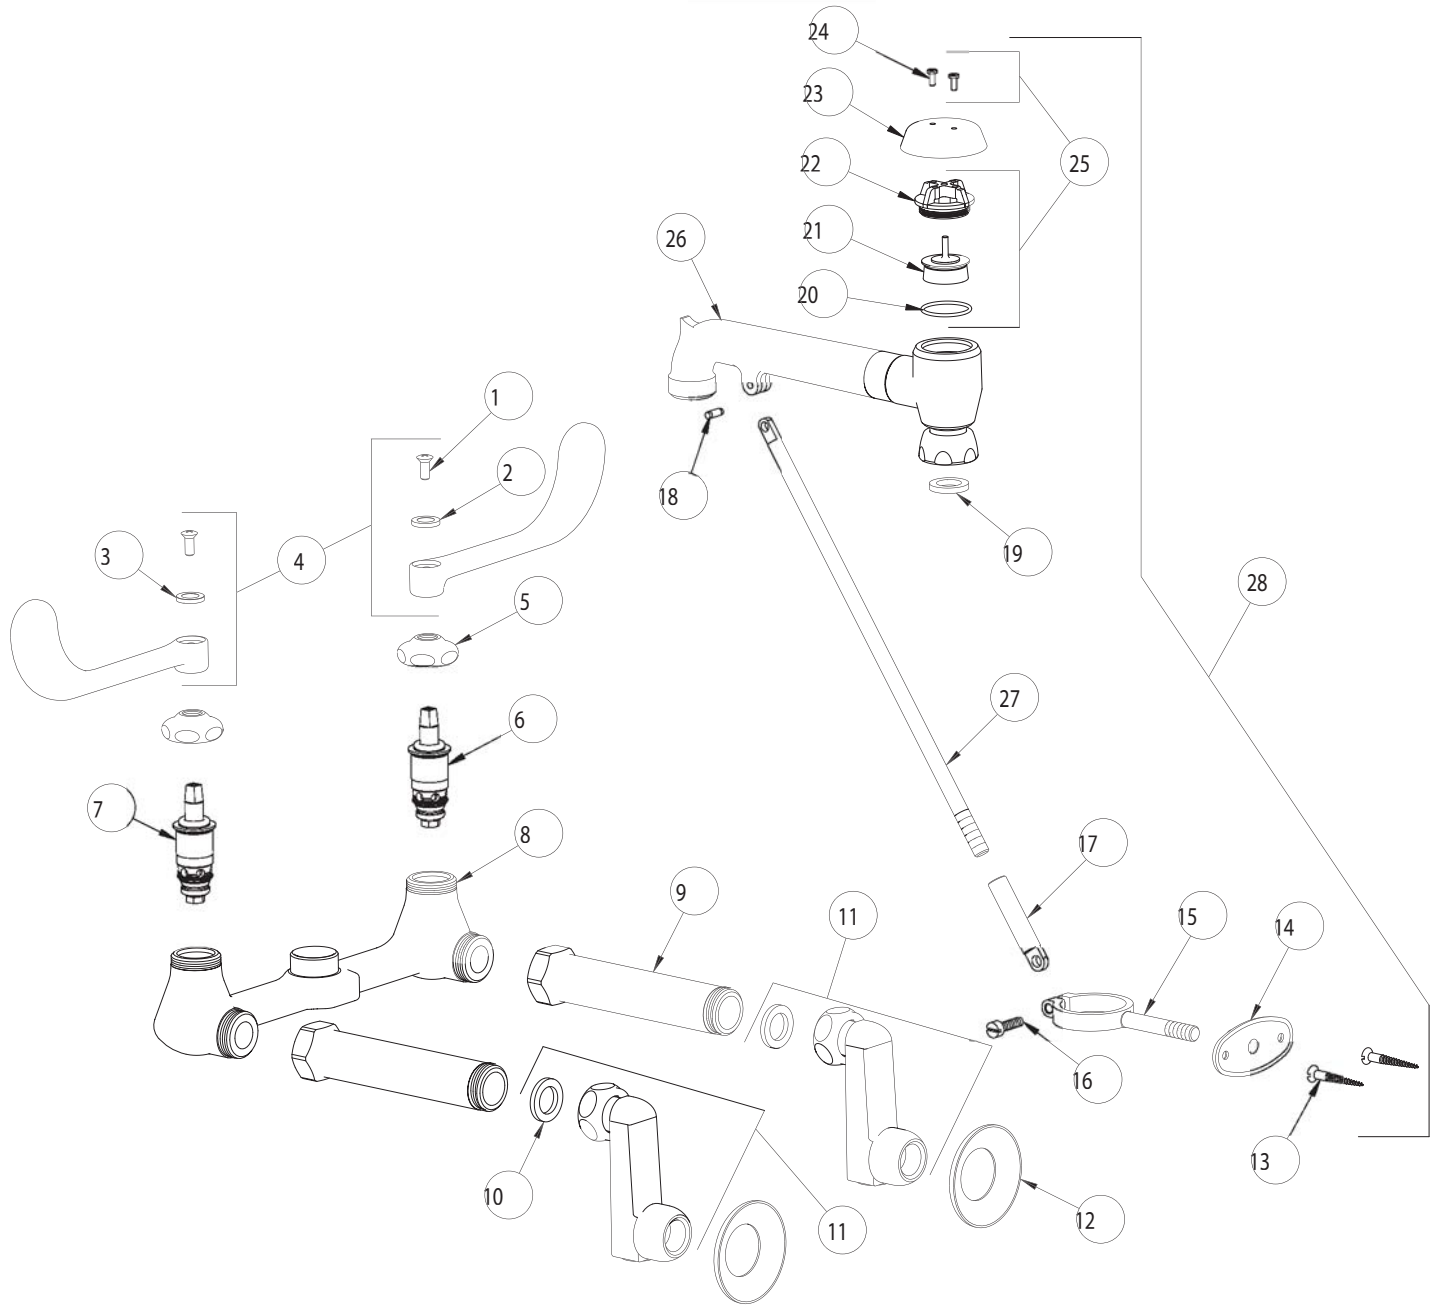

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
1	420-010	SCREW	16	173-012	SCREW
2	633-023	INDEX BUTTON (RED)	17	173-026	SLEEVE
3	633-123	INDEX BUTTON (BLUE)	18	50-007	PIN
4	319PR	WRISTBLADE HANDLE ASSEMBLY	19	340-004	CELCON WASHER
5	1-214	CAP	20	80-007	O-RING
6	1-100XT	QUATURN UNIT (LH)	21	892-032K	VACUUM BREAKER DISC ASSEMBLY
7	1-099XT	QUATURN UNIT (RH)	22	892-202	VACUUM BREAKER SEAT
8	-----	VALVE BODY (NOT SOLD SEPARATELY)	23	892-154	VACUUM BREAKER COVER
9	173-225	EXTENSION	24	333-321	VACUUM BREAKER TORX SCREW
10	1-011	WASHER	25	892-202K	VACUUM BREAKER REPAIR KIT
11	R	SUPPLY ARM	26	-----	SPOUT ASSEMBLY
12	1-055	FLANGE	27	815-001	BRACE ROD 15 7/8"
13	173-006	FLAT HEAD WOOD SCREW	28	815SVB	V.B. SPOUT ASSEMBLY
14	173-109	FLANGE			
15	173-010	PIPE SUPPORT			