Classy Ca/ns

Classy Caps Mfg. Inc. Kingsville, Ontario, Canada info@fencecaps.com / www.fencecaps.com

Classy Caps

Mod. SL177 SL178 SL179

Lighting Instructions

How your solar Powered Deck and Wall light works

- -The solar panel converts sunlight energy into electricity during the day. The photocell automatically turns the light on at night with the electricity stored in the batteries. It requires no wiring, because it runs off the sunlight energy to recharge the batteries so there is no cost to run the solar cap.
- The number of hours the light stays on depends on your geographical location, weather conditions and seasonal sunlight availability.
- Easy do it yourself installation.

Each Classy Cap Includes:

- 1 solar deck & wall light
- 2 mounting screws
- 1 AA Ni-MH rechargeable battery

Installation

- 1) Turn the auto/off switch to on.
- 2) Secure solar fixture to desired location using two mounting screws provided (pre-drill pilot holes to easily fasten screws).
- 3) Allow at least 12 hours of sunlight to fully charge the battery.

To Replace The Batteries (battery replacement is about 1-2 years)

- 1) Remove the 2 mounting screws.
- 2) Turn the switch to off & remove the 3 screws located on the back of the fixture.
- 3) Replace the battery with a new AA size 1.2v Ni-MH rechargeable battery.
- 4) Re-assemble and turn auto-off switch to on
- 5) Allow the fixture to receive a full 12 hours of sunlight to allow the rechargeable battery to reach maximum capacity.

Troubleshooting

If the light does not turn on at dusk after 12 hours of charging:

- Check the batteries to make sure they are making secure contact with the terminal.
- Be sure the solar fixture is in a relatively sunny location.
- Make sure the light's photocell is not affected by other light.

Maintenance

Periodically clean light fixture with soft cloth and warm soapy water.

Two Year Limited Warranty

Classy Caps Mfg. Inc. products are warranted to be free from defects in workmanship or materials at the time of purchase for a period of two years, (excluding batteries). Should a defect occur, please contact our customer service line

at 1-866-460-4604 for service. Should any evidence of defects in material or workmanship appear within the warranty

period after the date of purchase, Classy Caps Mfg. Inc. will either repair or replace the product at its option. Classy Caps Mfg. Inc. is not responsible for injury, property damage, or other consequential damages or damages to third parties arising directly or indirectly from an actual or alleged defect in material or workmanship of the product.





