



2 SHELF KIT (3 FT.)

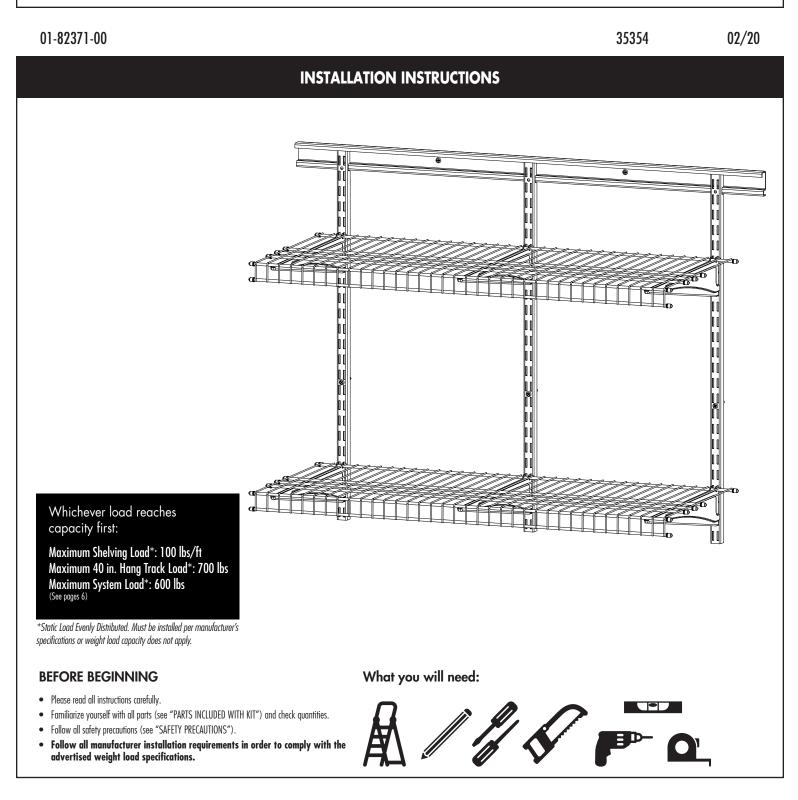

PARTS INCLUDED WITH KIT

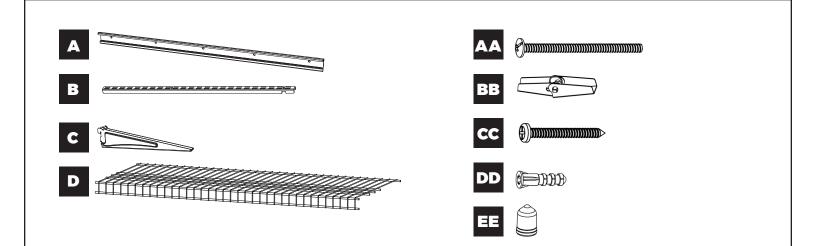


	Name	Size (Qty)	Part Number
A	Hang Track	40 in. (1)	75835
В	Standard	30 in. (3)	32231
с	Shelf Bracket	(6)	82369
D	Wire Shelf	36 in. (2)	53718
AA	Screw	3/16 in. (9)	90274
BB	Toggle Bolt	3/16 in. (9)	270
сс	Panhead Screw	#12 x 2 in. (9)	90688
DD	Anchor	1/4 in. (9)	650
EE	End Cap	(24)	90603



SAFETY PRECAUTIONS

- Unit **MUST** be installed as per the installation instructions beginning on page 5 to satisfy published weight load capacity.
- This unit contains small parts which could be a choking hazard for small children. Children should be under adult supervision at all times or serious injury could occur.
- Always unload unit prior to moving the unit. The weight of personal belongings can cause the unit to become unstable and either tip or collapse. Serious bodily injury and/or damage to personal belongings may occur.
- Do not overload unit. If any shelf, top, or bottom of unit bows or bends, it is overloaded. The shelf, top, or bottom could collapse and cause serious bodily injury and/or damage to personal belongings.
- Do not drop items on shelves.

- Do not climb or step on the unit. The unit may become unstable and either tip or collapse. Serious bodily injury and/or damage to personal belongings may occur.
- Do not mount or attach anything to the sides, rear, or front of the unit as this can create a force which can cause the unit to tip. Serious bodily injury and/or damage to personal belongings may occur.
- Follow proper safety procedures if using power tools and ladders.
- We recommend you protect your work surface during assembly to prevent scratching or damage to table tops, wood floors, etc.
- We recommend you tighten screws by hand. Use care not to overtighten if using power tools.

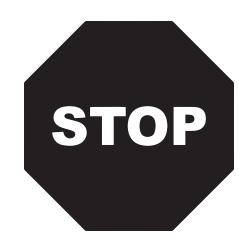

FOLLOW INSTRUCTIONS CAREFULLY

Please do not return product to the retail store. For product assistance and warranty information please call Consumer Affairs at 1-800-874-0008.

Manufacturer Warranty

Manufacturer will replace any missing or damaged part due to manufacturer defect for one year after purchase. Please have proof of purchase for warranty claims.


ICLOSETMAID®


MEASURE AND FIT (WIDTH)

This organizer, and its components as purchased, require a wall space with a minimum width of 40 in. It can also be easily installed on a space wider than 40 in. However, if the wall space is smaller than 40 in., the hang track and possibly the shelves will require cutting.

Measure the width of the wall space. The hang track can be centered on the wall or flush to one side. If you want it to be centered, determine the center point of the wall by dividing the overall width by two, or if you want to have it flush to one side, position the hang track against one wall.

CAUTION: To avoid personal injury, use care and a safe, sturdy stepping stool to position hang track.

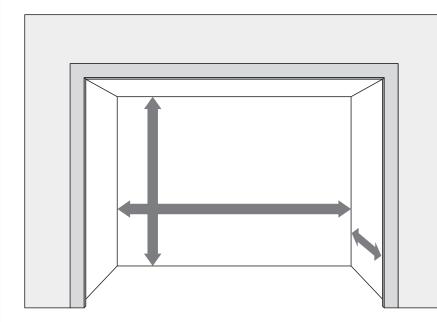


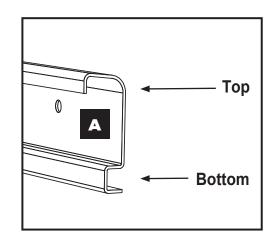



SAFETY PRECAUTIONS RECOMMENDED INSTALLATION

The following installation is required to satisfy the weight capacity rating indicated for this product. In order for the weight load specifications to be valid, you <u>MUST</u> install the components in this organizer per the following installation instructions. Before moving on to the system installation instructions, please take the time to review the installation requirements below.

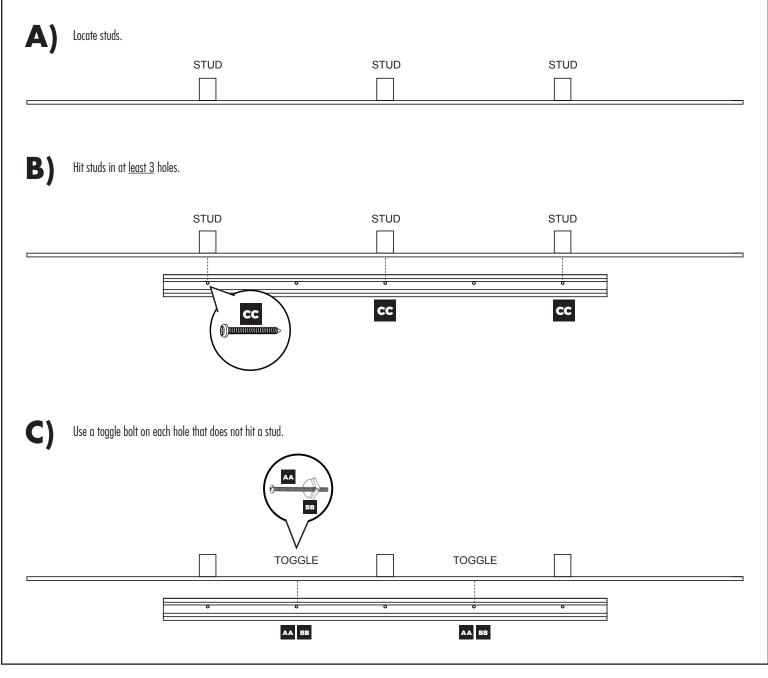


ICLOSETMAID[®]



MARK HANG TRACK LOCATION




- A) The hang track can be installed at any height, keeping in mind the overall height of your standards once installed. Be aware that the hang track is the highest point in the system, meaning no shelving can be placed above it.
- B) Measure hang track to desired height and use a level to assure hang track is straight before marking holes and making a level line.
- C) When track is at desired height and level, mark each screw hole on the wall using a pencil.
- **D**) For this kit, the minimum hang track installed height is 35 in. from the top of your baseboard.

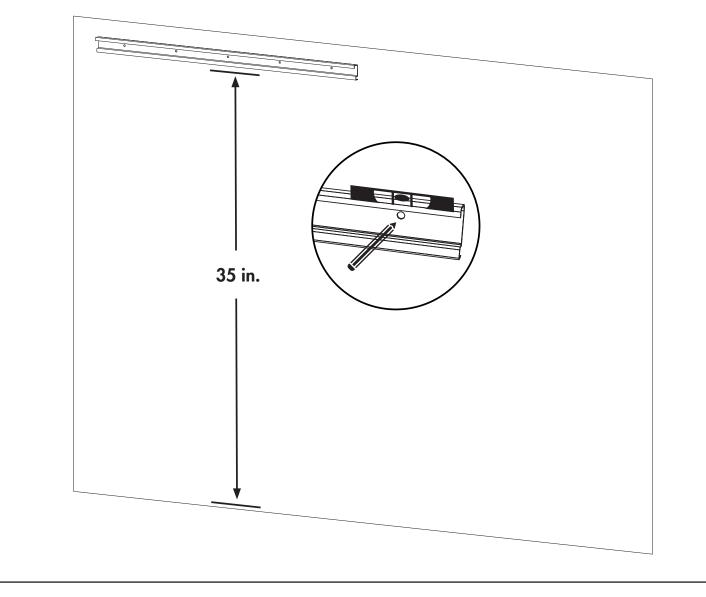




FOR DRYWALL INSTALLATION



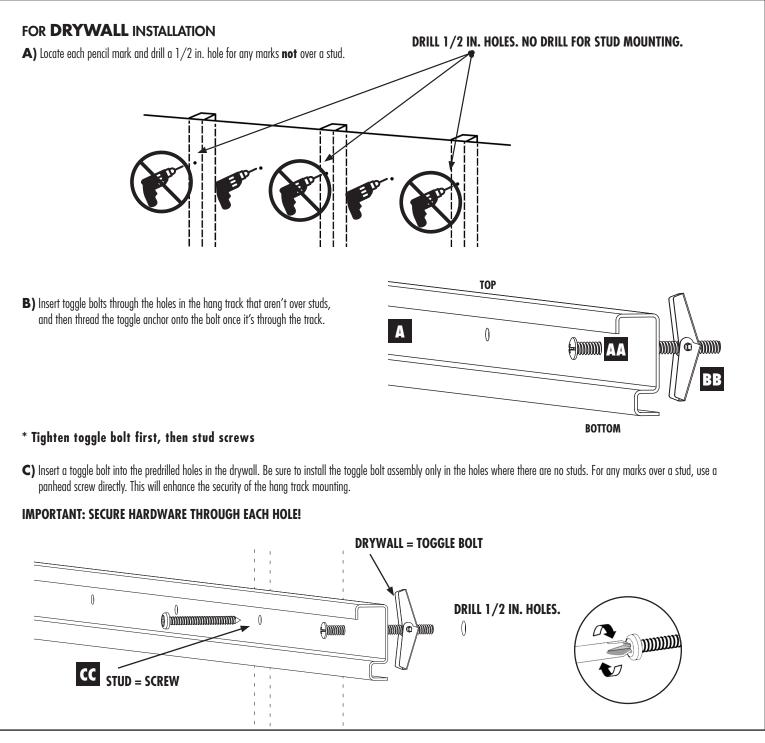

ICLOSETMAID[®]

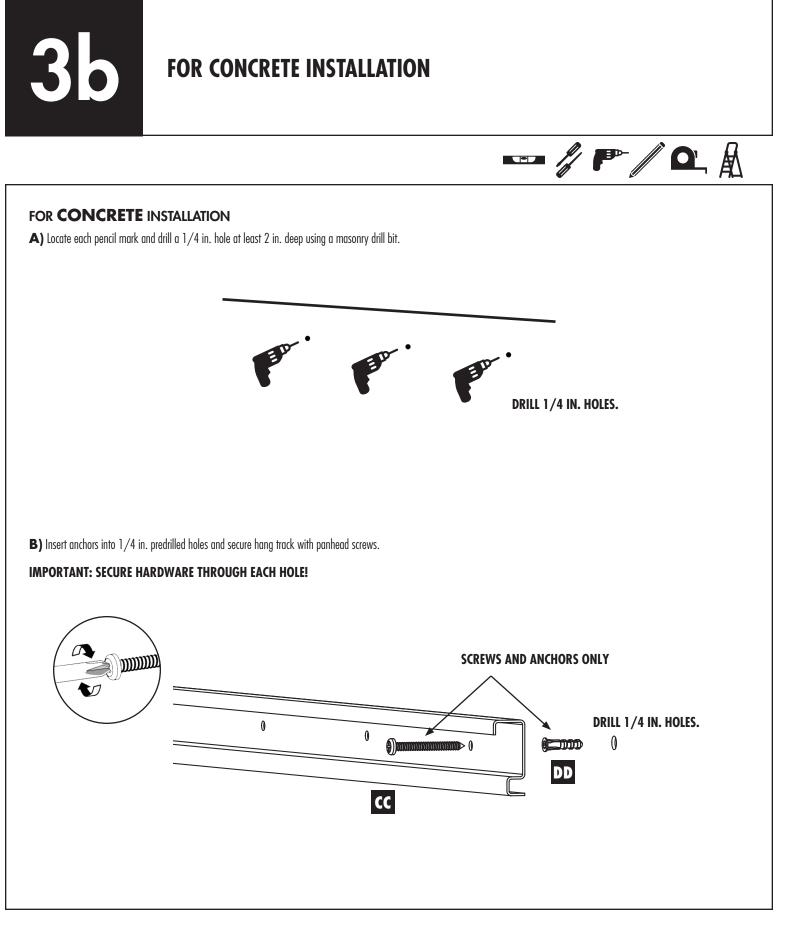





INSTALL STANDARDS ONTO HANG TRACK

Attach standards to the hang track by placing each standard into the top groove as shown below. Measure from CENTER of one standard to CENTER of next standard. Space standards NO MORE than 16 in. apart and a MINIMUM of 2 in. in from end of hang track.


Adjust standards evenly for your specific closet width.

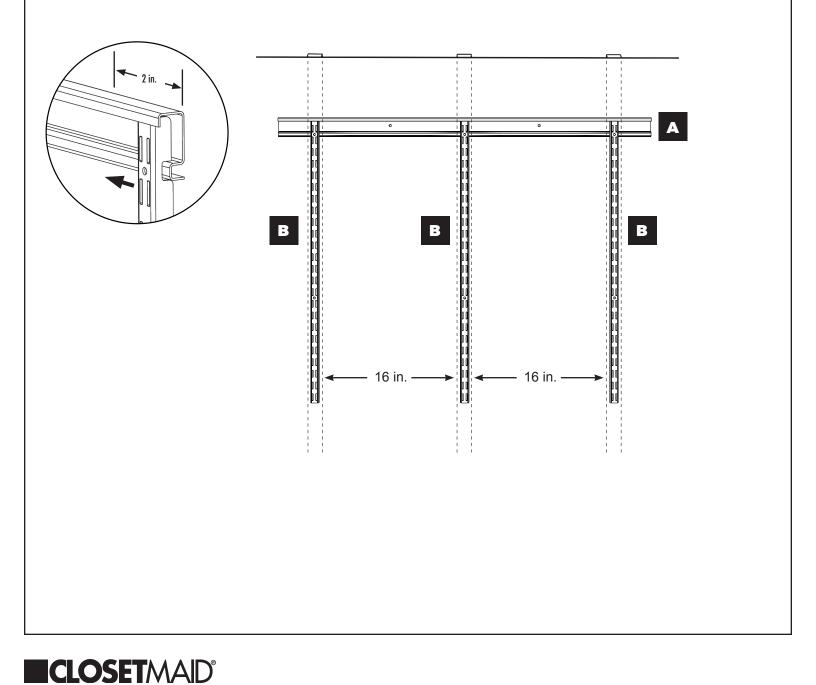

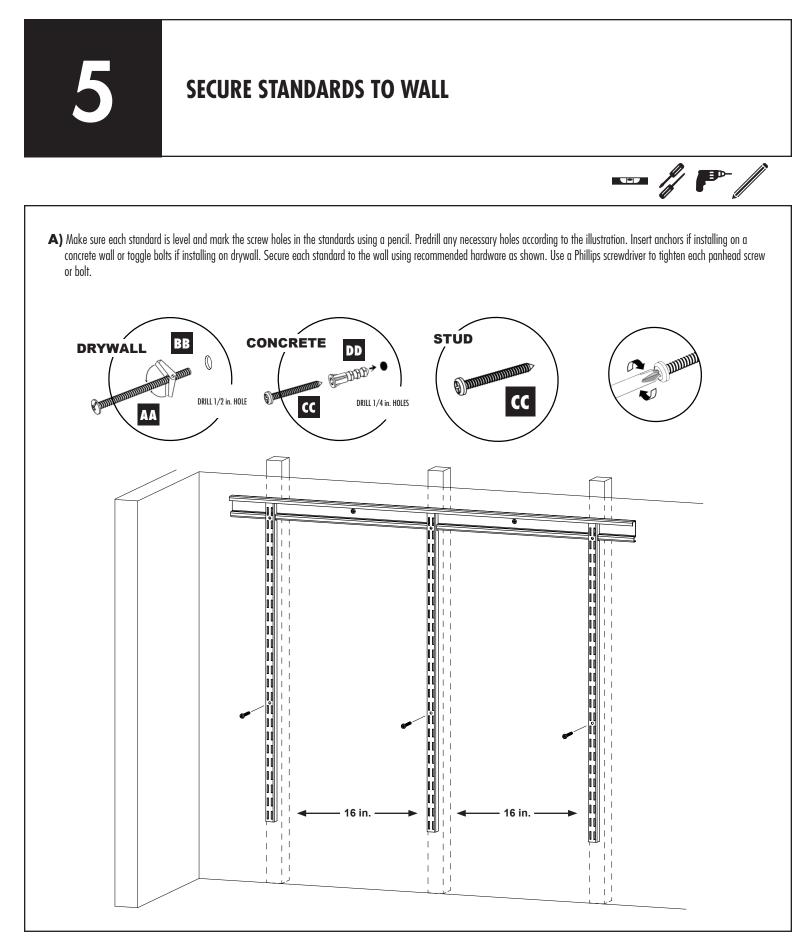



INSTALL BRACKETS

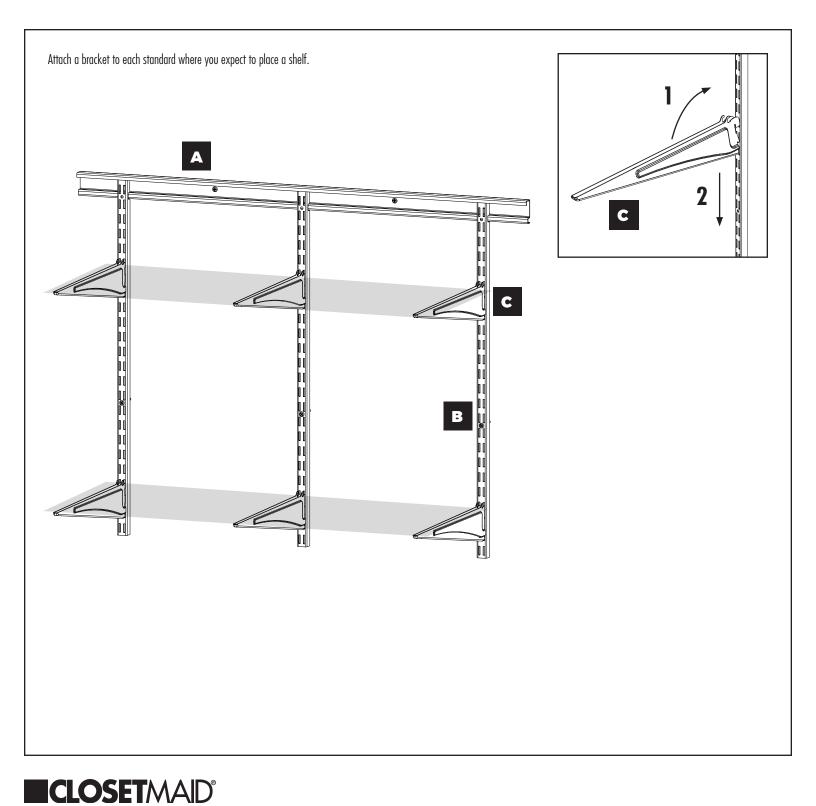


7

FOR SHELVES THAT REQUIRE CUTTING





Place shelf on brackets. Allow an equal overhang (from brackets) on both sides. Measure amount to be cut. Remove shelf and cut with hacksaw or bolt cutter. Do not make cuts where vertical spacers are on front lip of shelf.

Never allow more than a 6 in. overhang.

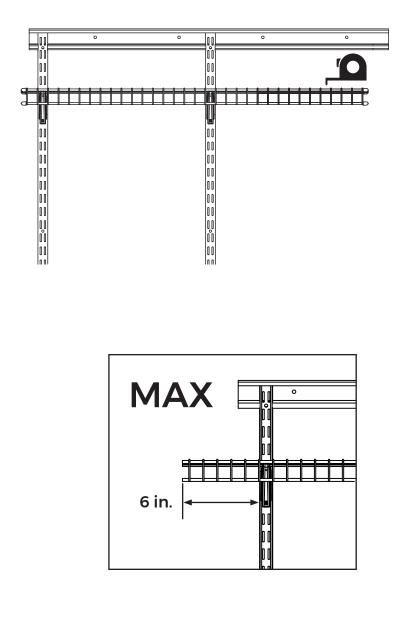

INSTALL SHELVES

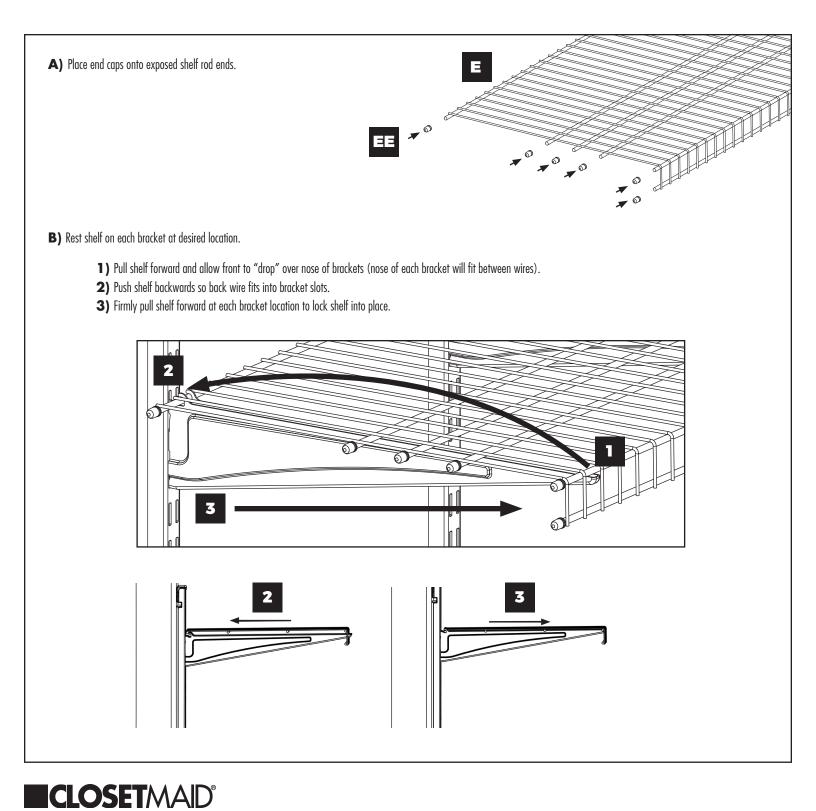

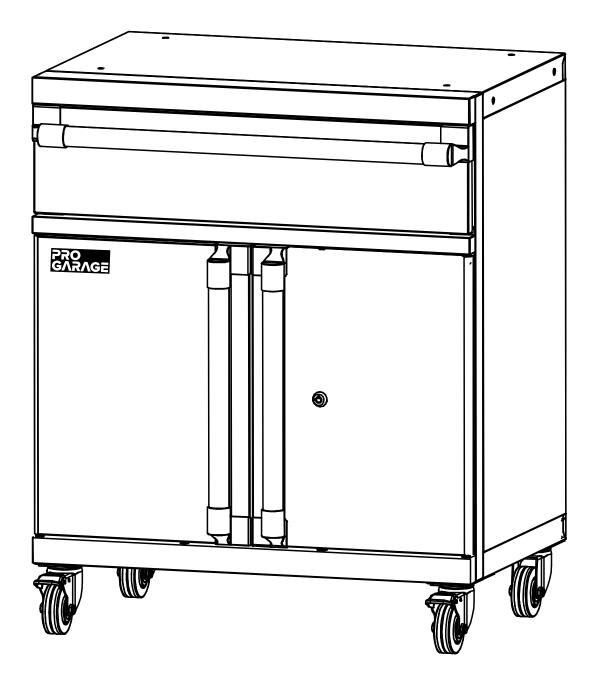

10842



06/20

BEFORE BEGINNING

- Please read all instructions carefully.
- · Familiarize yourself with all parts (see "PARTS") and check quantities.
- Follow all safety precautions (see "SAFETY PRECAUTIONS").

A WARNING

- CHOKING HAZARD FOR SMALL CHILDREN. This unit contains small parts which could be a choking hazard for small children. Children should be under adult supervision at all times or serious injury could occur.
- DO NOT OVERLOAD UNIT. If any shelf, top, or bottom of unit bows or bends, it is overloaded. The shelf, top, or bottom could collapse and cause serious bodily injury and/ or damage to personal belongings. Evenly distribute loads.
- DO NOT PUT MORE THAN 5 LBS OF WEIGHT IN THE DRAWER WITHOUT ADDING ADDITIONAL WEIGHT IN THE LOWER CABINET. The unit may become unstable and tip over when the drawer is pulled out.
- DO NOT CLIMB OR STEP ON THE UNIT. The unit may become unstable and either tip or collapse. Serious bodily injury and/or damage to personal belongings may occur.
- DO NOT USE THIS UNIT AS A TELEVISION STAND. Serious bodily injury and/or damage to personal belongings may occur.

- DO NOT HANG THIS UNIT ON THE WALL. The product structure is not designed for wall hanging. Serious bodily injury, damage to personal belongings, and/or damage to the wall may occur.
- DO NOT STACK UNITS. Stacking of units can cause an unsafe tip-over hazard which may cause serious bodily injury and/or damage to personal belongings.
- DO NOT MOUNT OR ATTACH ANYTHING TO THE SIDES, REAR, OR FRONT OF THE UNIT. This can create a force which can cause the unit to tip. Serious bodily injury and/or damage to personal belongings may occur.
- **PROTECT YOUR WORK SURFACE DURING ASSEMBLY.** This can prevent scratching or damage to table tops, wood floors, etc.
- UNIT DOES NOT PROVIDE PROTECTION AGAINST ELECTRICAL SHOCK.



FOLLOW INSTRUCTIONS CAREFULLY

Please do not return product to the retail store. For product assistance and warranty information please call Consumer Affairs at 1-800-874-0008.

Manufacturer Warranty

Manufacturer will replace any missing or damaged part due to manufacturer defect for one year after purchase. Please have proof of purchase for warranty claims.

- Do not let any sharp objects touch or rub the surface of the product.
- When assembling, do not let children play around the working area.
- Please confirm all parts are correct before starting the assembly process.
- DO NOT OVERTIGHTEN. DO NOT USE POWER TOOLS. Power tools can overtighten screws and strip threads.


We recommend you hand-tighten screws. Please note location of predrilled holes.

PARTS

Call 1-800-874-0008 for parts and service. For faster service, have the style number ready when calling.

TOOLS REQUIRED

#3 Phillips Screwdriver

 





HARDWAREPROVIDED


	Name	Qty.
AA	Left Drawer Glide	1
BB	Right Drawer Glide	1
сс	ST6.3 x 12 mm. Screw	28 + 2
DD	Electrical Bushing	1
EE	M6-1.0 x 12 mm. Bolt	4
FF	Key	2

ICLOSETMAID[®]

PARTS

Call 1-800-874-0008 for parts and service. For faster service, have the style number ready when calling.

PRODUCT

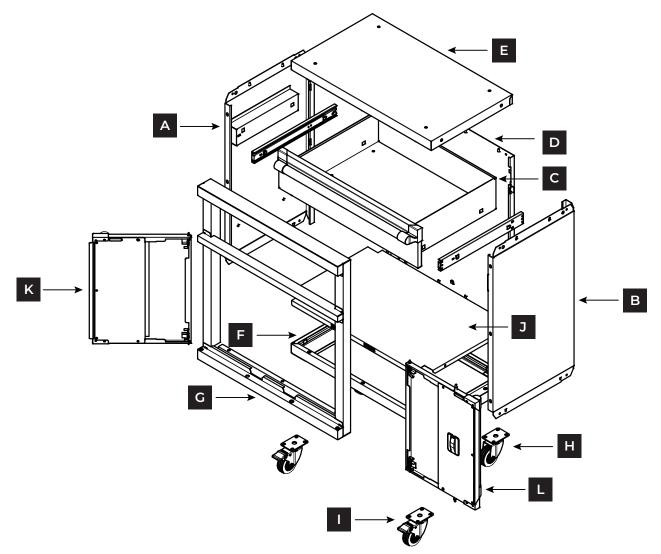


	Name	Qty	Part #		Name	Qty	Part #
Α	Left Side Panel	1	35857	G	Door Frame	1	35864
В	Right Side Panel	1	35858	н	Caster Without Brake	2	20624
С	Drawer	1	35861		Caster With Brake	2	20624
D	Back Panel	1	35859	J	Bottom Shelf	1	35860
Е	Top Panel	1	35854	ĸ	Left Door	1	35862
F	Bottom Panel	1	35856	L	Right Door	1	35863


For the left drawer glide (AA), extend the inner glide (AAI) from the outer glide (AA2). Push down on the locking tab to unlock the inner glide. Pull the inner glide out to remove.

For the right drawer glide (BB), extend the inner glide (BB1) from the outer glide (BB2). Push up on the locking tab to unlock the inner glide. Pull the inner glide out to remove.



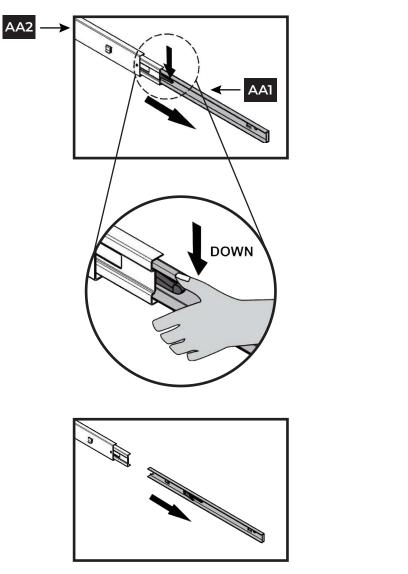


^{*}Please note location of predrilled holes on each part.

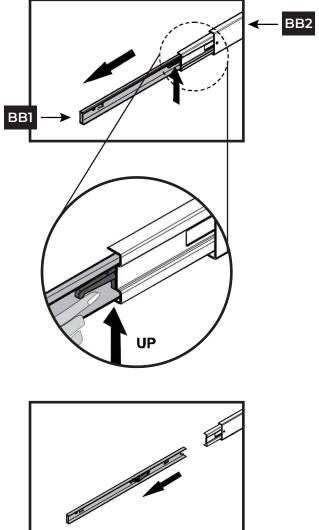

Align the metal tabs on the outer left glide (AA2) with the holes on the interior of the left side panel (A). With the tabs in the holes, pull the glide to the right to secure the right tab in place, and then pull down to secure the left tab.


Repeat steps for the outer right glide (BB2) and right side panel (B).

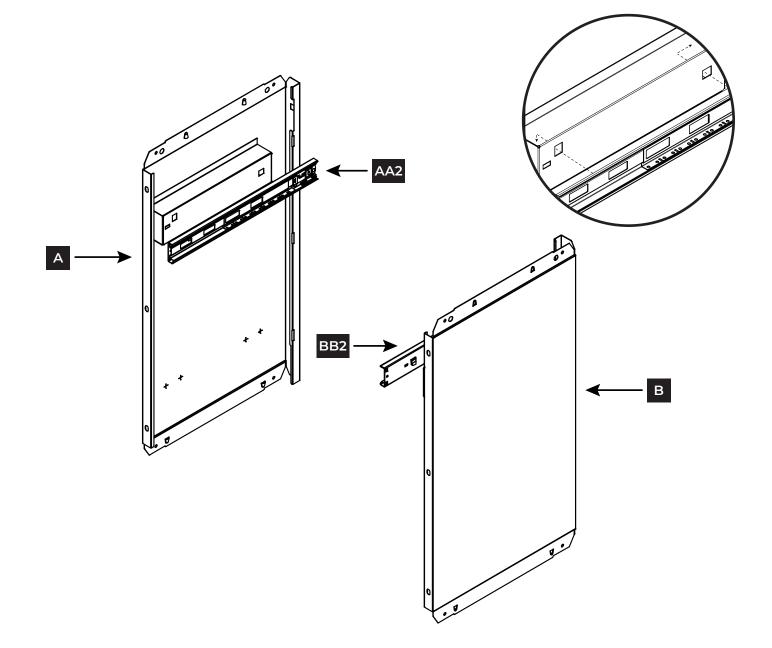



Align the metal tabs on the inner left glide (AAI) with the holes on the left exterior of the drawer (C). With the tabs in the holes, pull the glide to the left to secure the left tab in place, and then pull up to secure the right tab.


Repeat steps for the inner right glide (BB1) on the opposite side.

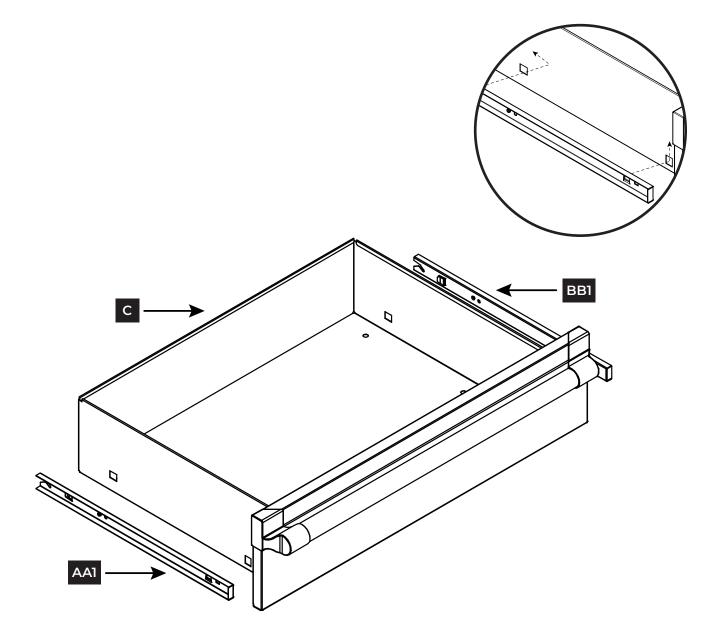



Align both side panels (A & B) with the back panel (D) as shown.


Slide the metal tabs on the back panel (D) into the matching slots on the side panels (A & B). Pull the side panels down to secure the tabs in place.

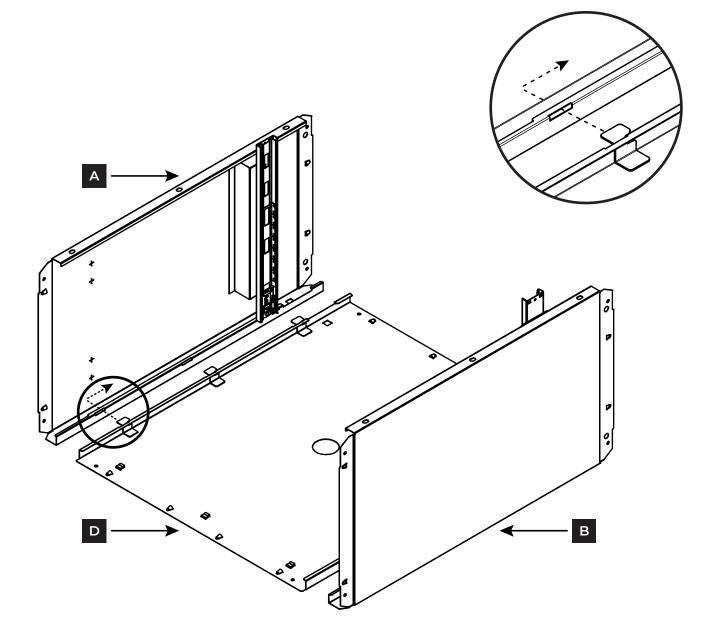



Align top panel (E) with the top of the unit as shown.


Push down to secure into place. Make sure that all the triangular tabs on the back and side panels completely snap into place in the square holes on the top panel.

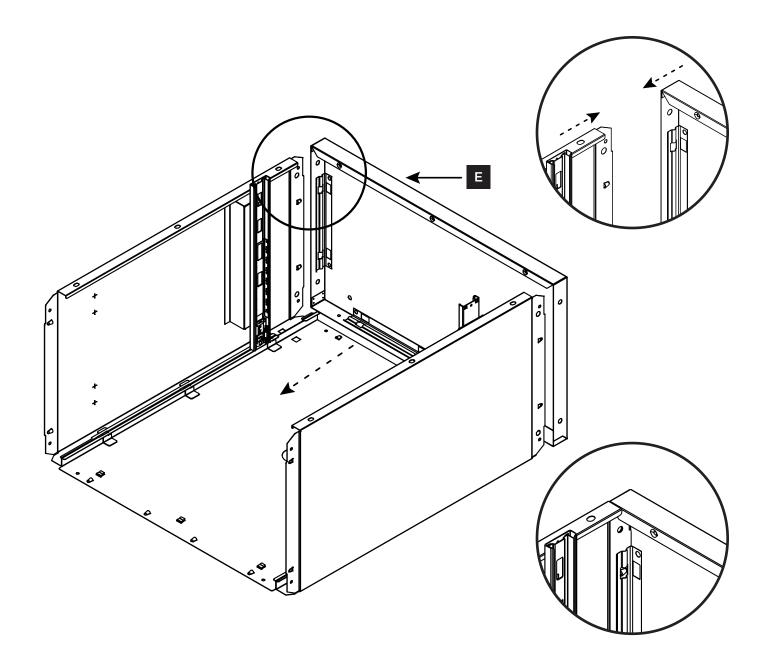



Align bottom panel (F) with the bottom of the unit as shown.


Push down to secure into place. Make sure that all the triangular tabs on the back and side panels completely snap into place in the square holes on the bottom panel.

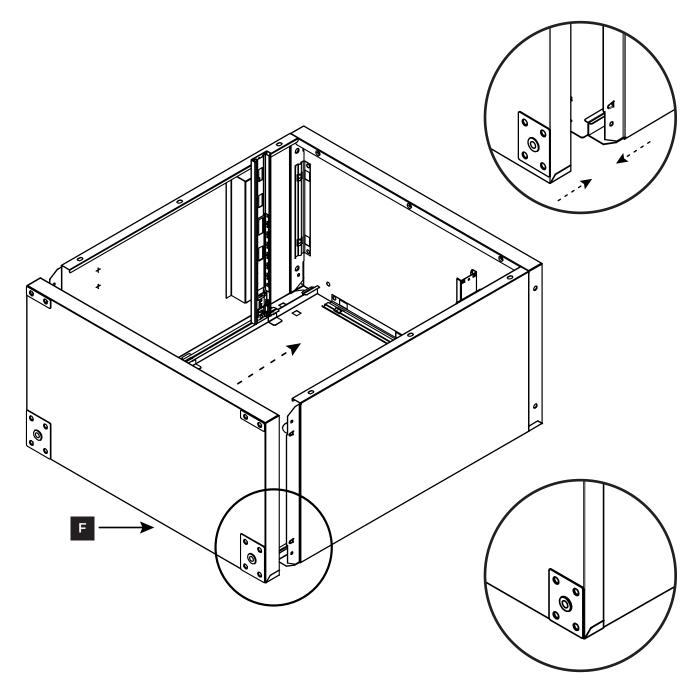



Align the door frame (G) with the front of the unit as shown. Please note that the holes on the bottom of the door frame will match up with the upper holes on the bottom panel.


Use a #3 Phillips screwdriver to secure the door frame to the unit using twelve ST6.3 x 12 mm. screws (CC).

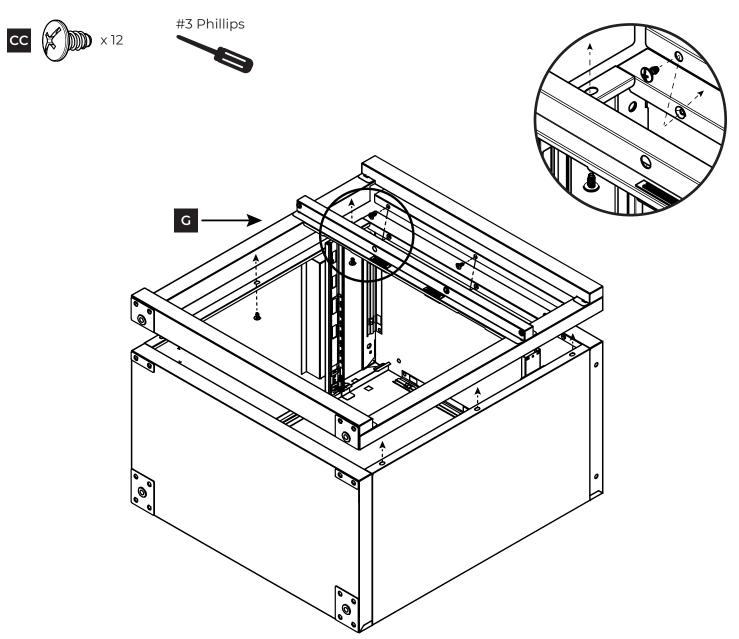



Align two casters without brakes (H) with the lower holes on the bottom panel (F). Use a #3 Phillips screwdriver to secure the casters to the unit using eight ST6.3 x 12 mm. screws (CC).


Align two casters with brakes (I) with the upper holes on the bottom panel (F). Use a #3 Phillips screwdriver to secure the casters to the unit using eight ST6.3 x 12 mm. screws (CC).

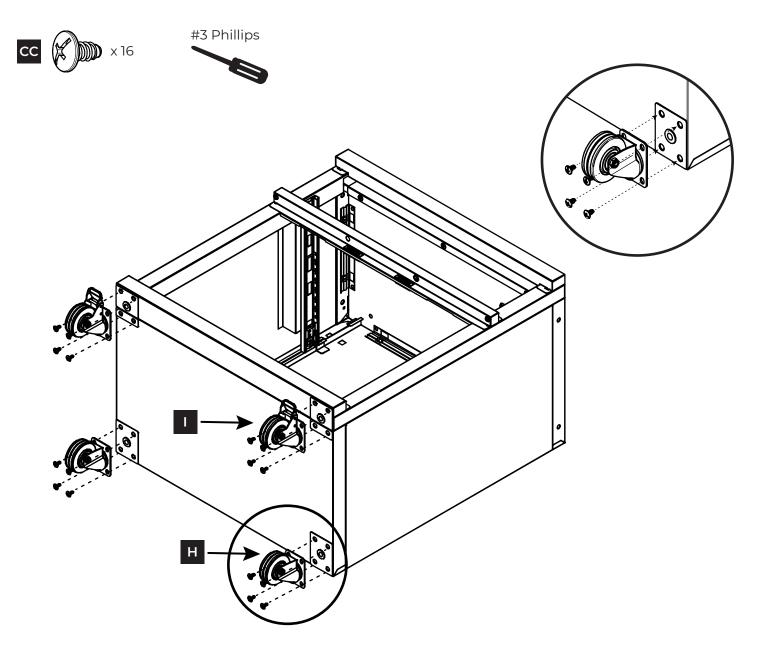



Stand the unit up on the casters.

Place the bottom shelf (J) inside the unit at the bottom. Push down to secure into place, making sure all metal tabs are connected. Please note that the bottom shelf will rest on the lowest three metal tabs on the back panel.

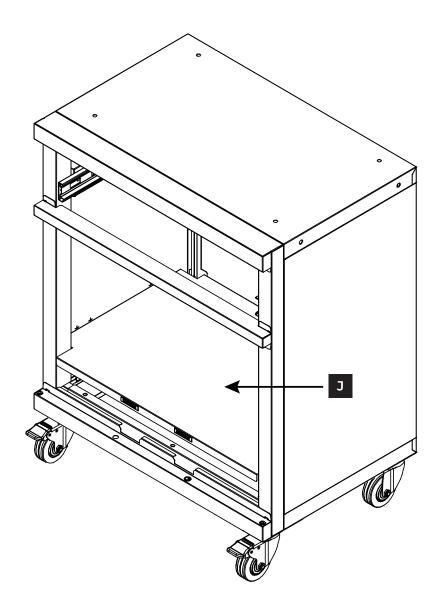




(Optional) Attach unit to workbench top.

Note: This step is only if you are planning to attach a workbench top (sold separately). If not, skip to next step.


Place cabinets next to each other and align workbench top with the top of the units. For each cabinet, use a 10 mm. wrench to attach four M6-1.0 x 12 mm. bolts (EE) through the top panel into the workbench top.

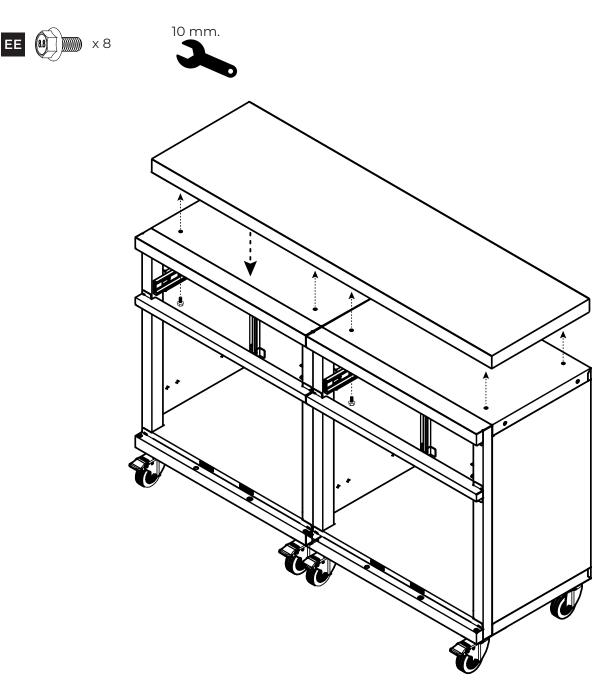



Align the electrical bushing (DD) with the large circle on the back of the unit. Push in to secure.




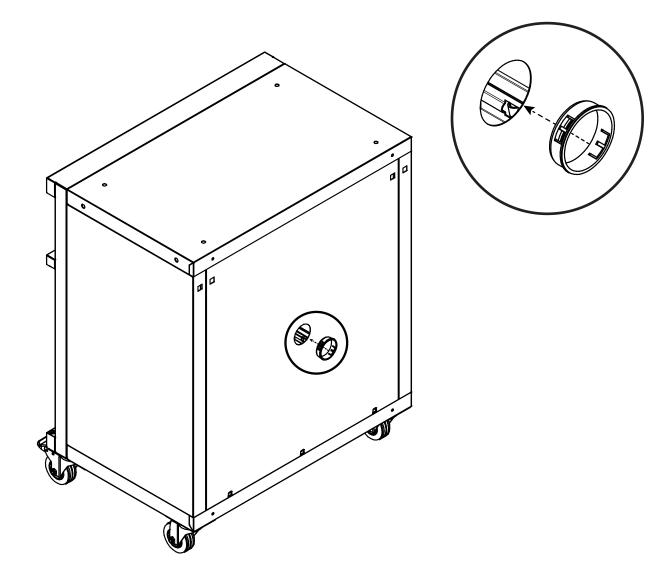



STEP 12	Insert drawer.		
---------	----------------	--	--

Align the inner glides of the drawer (C) with the outer glides inside the top of the unit. Push in to attach drawer.

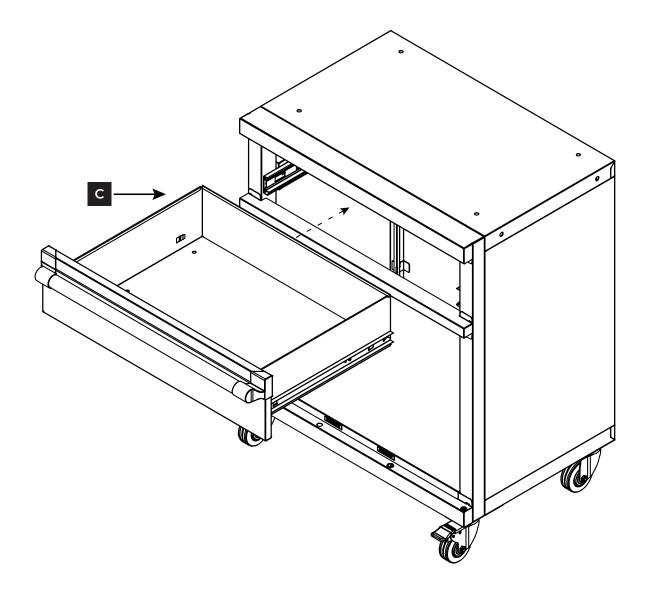

*Please note location of predrilled holes on each part.

L




STEP 13 Attach doors.


Align the right door (L) with the right side of the unit. Place the bottom lock of the door in the hole on the bottom of the door frame. Pull the top lock down, align it with the hole on the top of the door frame, and push up to lock into place. Push the bottom lock down to completely secure the door. Make sure both locks are turned inward toward the door as shown below. Please note that the right door has the slot for the key lock.

Repeat steps for the left door (K) on the left side of the unit.

Double check that all locks are in position and secure.

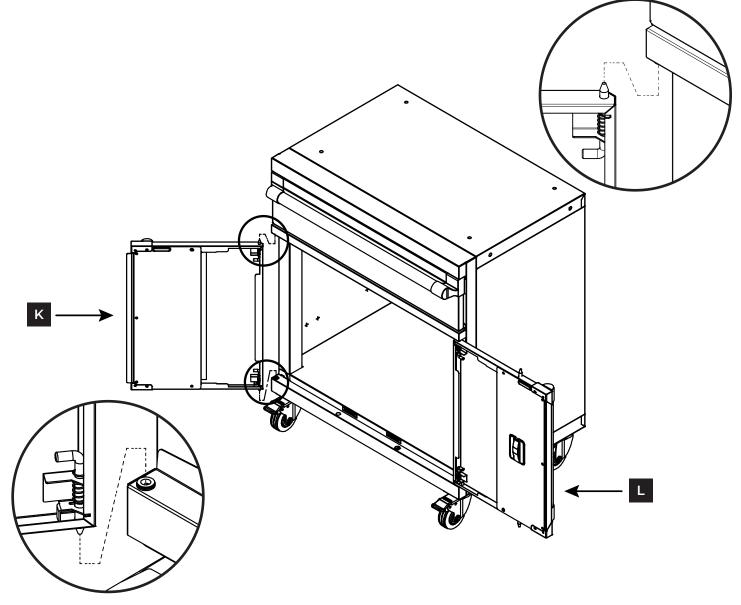



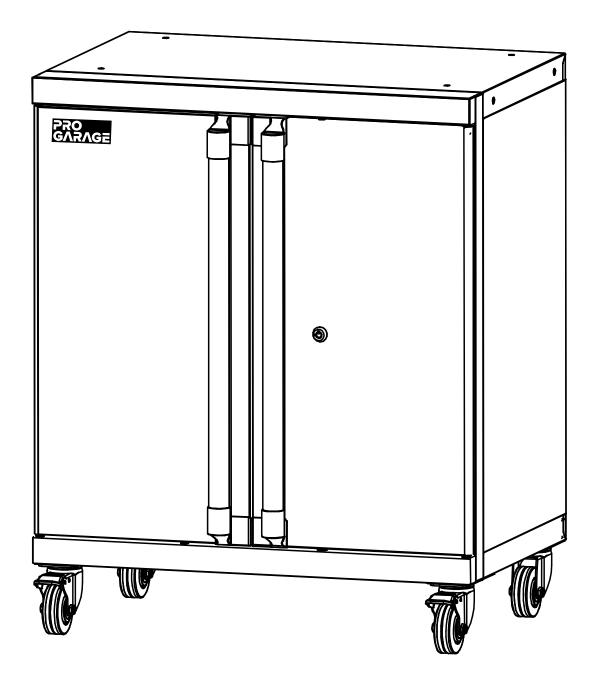

10843

Medium Cabinet

INSTALLATION INSTRUCTIONS

06/20

ICLOSETMAID[®]

BEFORE BEGINNING

- Please read all instructions carefully.
- · Familiarize yourself with all parts (see "PARTS") and check quantities.
- Follow all safety precautions (see "SAFETY PRECAUTIONS").

A WARNING

- CHOKING HAZARD FOR SMALL CHILDREN. This unit contains small parts which could be a choking hazard for small children. Children should be under adult supervision at all times or serious injury could occur.
- DO NOT OVERLOAD UNIT. If any shelf, top, or bottom of unit bows or bends, it is overloaded. The shelf, top, or bottom could collapse and cause serious bodily injury and/ or damage to personal belongings. Evenly distribute loads.
- DO NOT CLIMB OR STEP ON THE UNIT. The unit may become unstable and either tip or collapse. Serious bodily injury and/or damage to personal belongings may occur.
- DO NOT HANG THIS UNIT ON THE WALL. The product structure is not designed for wall hanging. Serious bodily injury, damage to personal belongings, and/or damage to the wall may occur.

- DO NOT USE THIS UNIT AS A TELEVISION STAND. Serious bodily injury and/or damage to personal belongings may occur.
- DO NOT STACK UNITS. Stacking of units can cause an unsafe tip-over hazard which may cause serious bodily injury and/or damage to personal belongings.
- DO NOT MOUNT OR ATTACH ANYTHING TO THE SIDES, REAR, OR FRONT OF THE UNIT. This can create a force which can cause the unit to tip. Serious bodily injury and/or damage to personal belongings may occur.
- **PROTECT YOUR WORK SURFACE DURING ASSEMBLY.** This can prevent scratching or damage to table tops, wood floors, etc.
- UNIT DOES NOT PROVIDE PROTECTION AGAINST ELECTRICAL SHOCK.



FOLLOW INSTRUCTIONS CAREFULLY

Please do not return product to the retail store. For product assistance and warranty information please call Consumer Affairs at 1-800-874-0008.

Manufacturer Warranty

Manufacturer will replace any missing or damaged part due to manufacturer defect for one year after purchase. Please have proof of purchase for warranty claims.

- Do not let any sharp objects touch or rub the surface of the product.
- When assembling, do not let children play around the working area.
- Please confirm all parts are correct before starting the assembly process.
- DO NOT OVERTIGHTEN. DO NOT USE POWER TOOLS. Power tools can overtighten screws and strip threads.


We recommend you hand-tighten screws. Please note location of predrilled holes.

PARTS

Call 1-800-874-0008 for parts and service. For faster service, have the style number ready when calling.

TOOLS REQUIRED

#3 Phillips Screwdriver

 


HARDWARE PROVIDED

	Name	Qty.
AA	ST6.3 x 12 mm. Screw	28 + 2
BB	Electrical Bushing	1
сс	M6-1.0 x 12 mm. Bolt	4
DD	Key	2

PARTS

Call 1-800-874-0008 for parts and service. For faster service, have the style number ready when calling.

PRODUCT

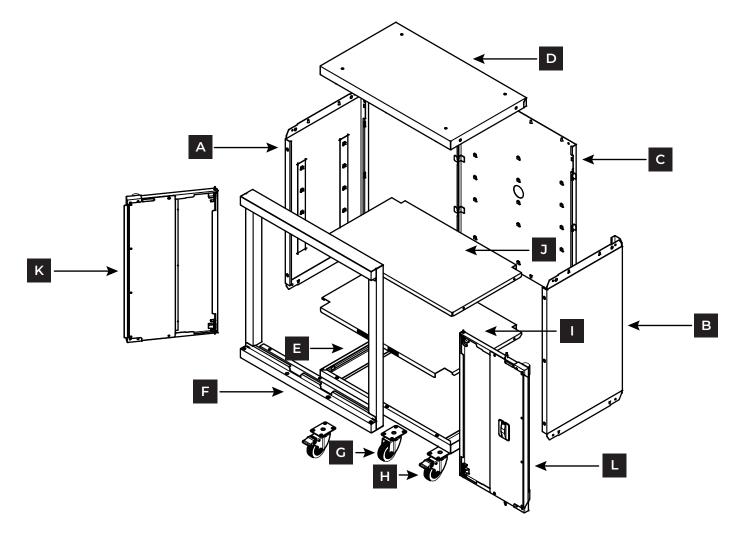


	Name	Qty	Part #		Name	Qty	Part #
Α	Left Side Panel	1	35857	G	Caster without Brake	2	20624
В	Right Side Panel	1	35858	н	Caster with Brake	2	20624
С	Back Panel	1	35859	I	Bottom Shelf	1	35860
D	Top Panel	1	35854	J	Inner Shelf	1	35867
Е	Bottom Panel	1	35856	ĸ	Left Door	1	35868
F	Door Frame	1	35865	L	Right Door	1	35869



Align both side panels (A & B) with the back panel (C) as shown.


Slide the metal tabs on the back panel (C) into the matching slots on the side panels (A & B). Pull the side panels down to secure the tabs in place.

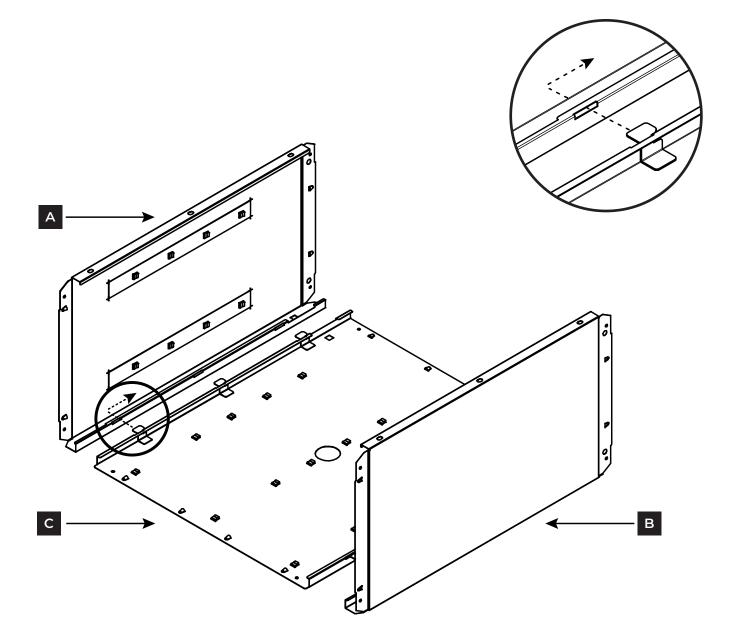



Align top panel (D) with the top of the unit as shown.


Push in to secure into place. Make sure that all the triangular tabs on the back and side panels completely snap into place in the square holes on the top panel.

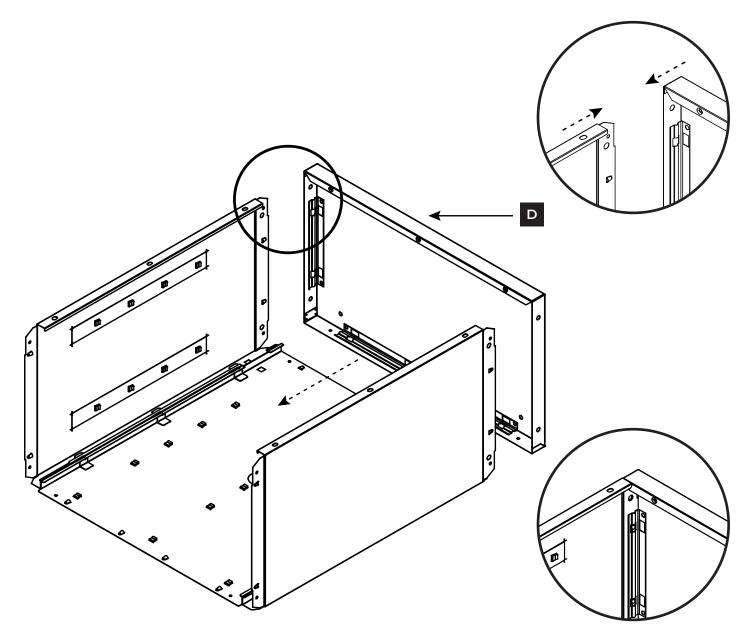



Align bottom panel (E) with the bottom of the unit as shown.


Push in to secure into place. Make sure that all the triangular tabs on the back and side panels completely snap into place in the square holes on the bottom panel.

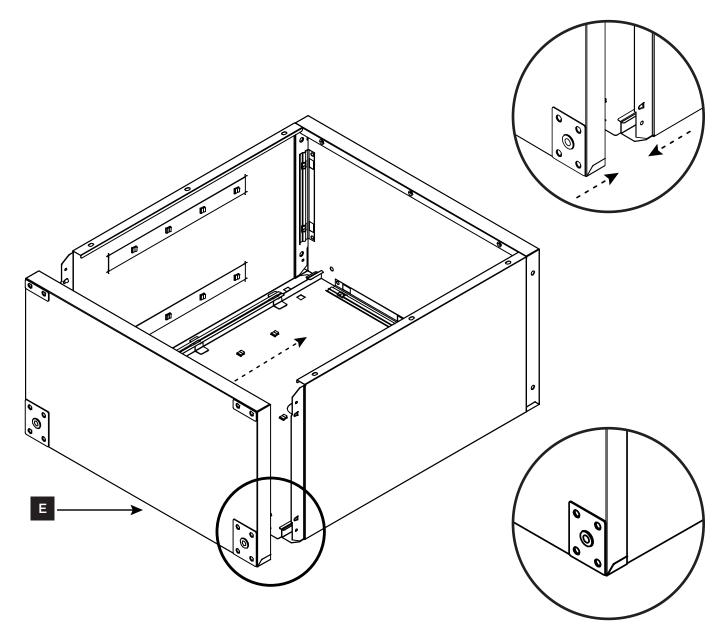



Align the door frame (F) with the front of the unit as shown. Please note that the holes on the bottom of the door frame will match up with the upper holes on the bottom panel.

Use a #3 Phillips screwdriver to secure the door frame to the unit using twelve ST6.3 x 12 mm. screws (AA).

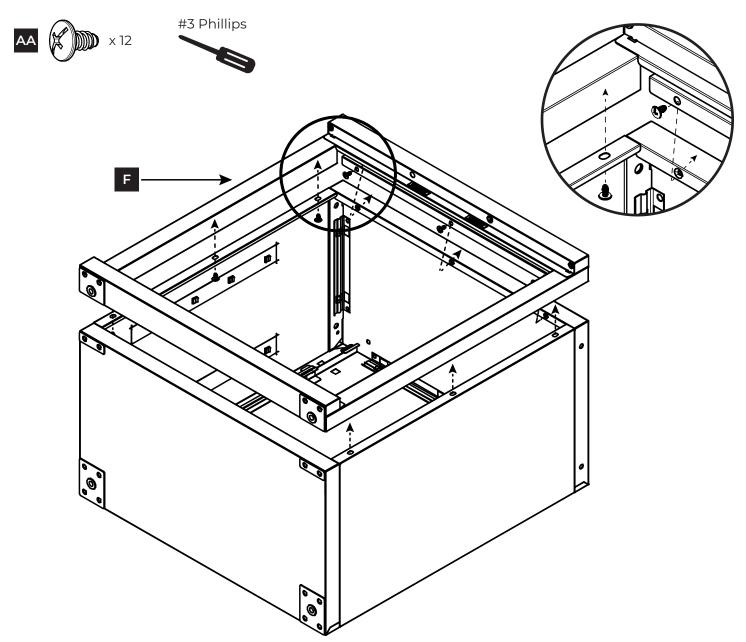




STEP 5 Attach casters.

Align two casters without brakes (G) with the lower holes on the bottom panel (E). Use a #3 Phillips screwdriver to secure the casters to the unit using eight ST6.3 x 12 mm. screws (AA).

Align two casters with brakes (H) with the upper holes on the bottom panel (E). Use a #3 Phillips screwdriver to secure the casters to the unit using eight ST6.3 x 12 mm. screws (AA).

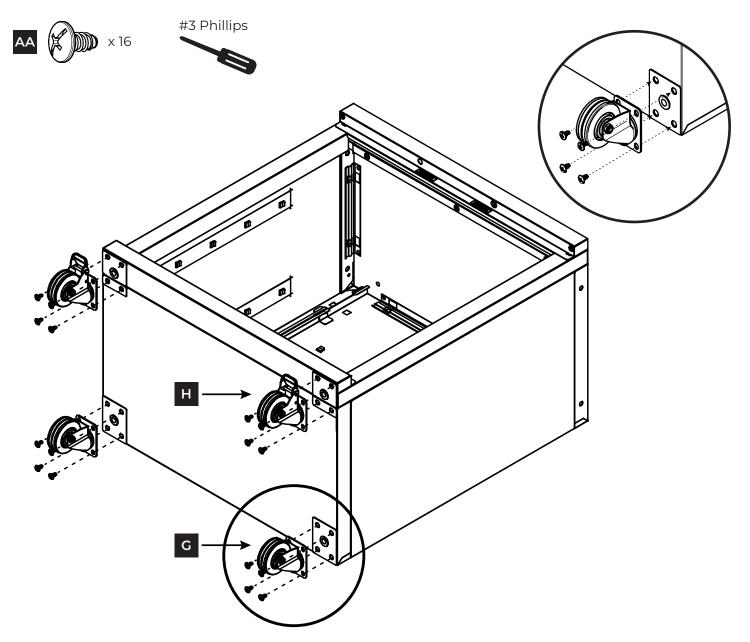




STEP 6	Attach shelves.	
--------	-----------------	--

Stand the unit up on the casters.

Place the bottom shelf (I) inside the unit at the bottom. Push down to secure into place, making sure all metal tabs are connected. Please note that the bottom shelf is larger than the inner shelf and will rest on the lowest three metal tabs on the back panel.

Determine where you want to position the inner shelf (J). Place the shelf above the tabs on the inner side tracks of the unit and push down to secure, making sure all metal tabs are connected.

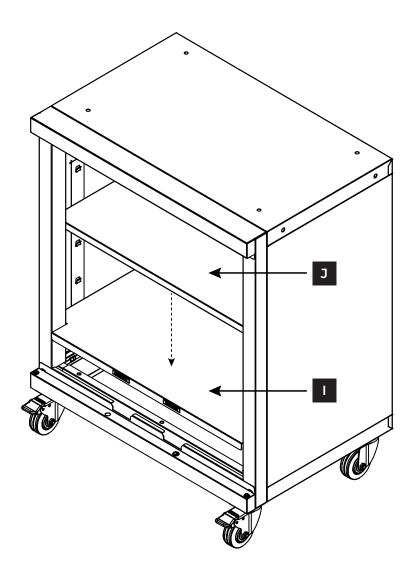



(Optional) Attach unit to workbench top.

Note: This step is only if you are planning to attach a workbench top (sold separately). If not, skip to next step.


Place cabinets next to each other and align workbench top with the top of the units. For each cabinet, use a 10 mm. wrench to attach four M6-1.0 x 12 mm. bolts (CC) through the top panel into the workbench top.


10 mm. CC х8



Align the electrical bushing (BB) with the large circle on the back of the unit. Push in to secure.



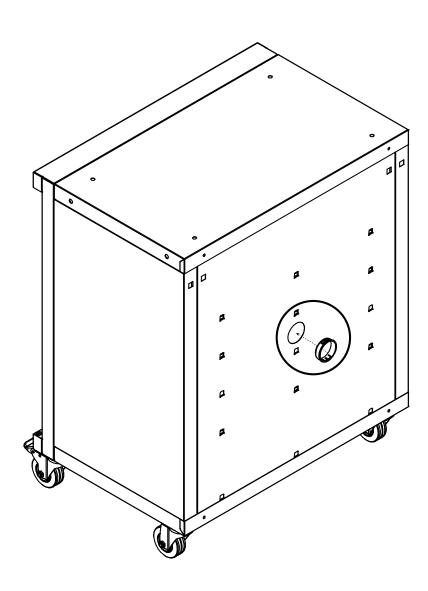

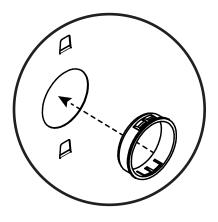

STEP 9 Attach doors.

Align the right door (L) with the right side of the unit. Place the bottom lock of the door in the hole on the bottom of the door frame. Pull the top lock down, align it with the hole on the top of the door frame, and push up to lock into place. Push the bottom lock down to completely secure the door. Make sure both locks are turned inward toward the door as shown below. Please note that the right door has the slot for the key lock.

Repeat steps for the left door (K) on the left side of the unit.

Double check that all locks are in position and secure.

