

**USER GUIDE** 



## YOUR FAUCET, YOUR WAY

### Choose from $Touch_20^{\circ}$ with $Touchless^{m}$ or $Touch_20^{\circ}$ only.

Touch<sub>2</sub>O<sup>®</sup> and Touchless<sup>™</sup> Technology use capacitive sensing technology, like your touch smartphone, to recognize human presence within 4 inches of the surface.

## SCAN TO VIEW VIDEO TUTORIALS







Installation

How to Use

Troubleshooting

#### FIND VIDEO TUTORIALS AT:

https://www.youtube.com/@deltafaucet

## **1** $TOUCH_2O^{\circ}$ WITH TOUCHLESS<sup>TM</sup> TECHNOLOGY



- Turn the faucet handle to the on position
- Place your hand within 4 inches of the faucet to turn water on and off
- Touchless Technology is most sensitive under the arc of the spout
- Faucet senses humans, not objects, everywhere but the pull-down wand

## **2** TOUCH<sub>2</sub>0° TECHNOLOGY



- Turn the faucet handle to the on position
- Tap anywhere on the spout, base or handle
- Tap with wrist, forearm or finger to turn the faucet on and off

Recommend installing accessories such as soap dispensers and beverage faucets at least five inches from the faucet.

## **CHANGING MODES**



#### **CURRENT MODE:**

HIGH SENSITIVITY I TOUCH<sub>2</sub>O<sup>®</sup> WITH TOUCHLESS<sup>®</sup> TECHNOLOGY

#### **TO CHANGE MODES:**

- 1. Turn the faucet handle to the off position
- 2. Grab the faucet base and hold for 6 seconds
- 3. LED indicator will flash to signal what mode the faucet is in (See chart below)
- 4. Turn the faucet handle to the on position

Faucet will turn on and off using the handle regardless of mode or connection to power.

MODE	LED INDICATION	BEST FOR*
High Sensitivity	🔆 5 Blue Flashes	Stainless Steel Sinks Granite Countertops
Low Sensitivity	🔆 4 Purple Flashes	Porcelain or Acrylic Sinks Quartz, Formica® (Laminate), or Corian® Countertops
Touchless Off	🔆 3 Red Flashes	Touch <sub>2</sub> O <sup>®</sup> or manual only operation

\*Your sink or counter material may affect the faucet's touchless sensing ability.

Please use the chart above to cycle through the modes so your faucet is in the right sensitivity setting to work best in your kitchen.

# PLACE THIS STICKER ON THE INSIDE OF YOUR CABINET FOR REFERENCE.

#### **TO CHANGE FAUCET MODES:**

- 1. Turn the faucet handle to the off position
- 2. Grab the faucet base and hold for 6 seconds
- 3. LED indicator will flash to signal what mode the faucet is in (See chart below)
- 4. Turn the faucet handle to the on position

MODE	LED INDICATION	∎¢X≣ Kakata How to
High Sensitivity	🔆 5 Blue Flashes	Use Video
Low Sensitivity	🔆 4 Purple Flashes	FIND VIDEO TUTORIALS AT: https://www.youtube.com/@deltafaucet
Touchless Off	🔆 3 Red Flashes	844.923.5368



115444 10/23