


Models/Modelos/Modèles

39876LF▲


Series/Series/Seria

RP104022▲
Sprayer & Hose Assembly
Ensamblaje de pulverizador y manguera
Douchette et tuyau souple

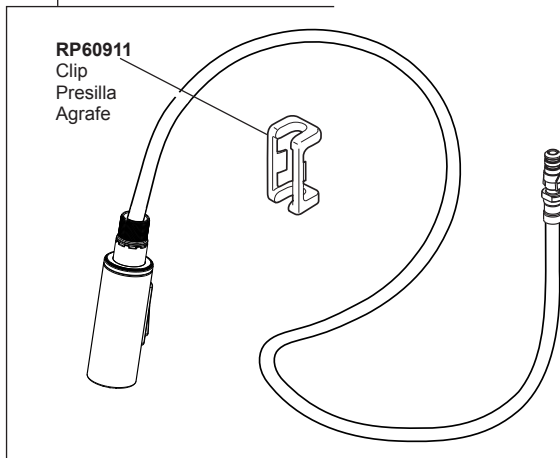


RP60911
Clip
Presilla
Agrafe

RP104013
Retainer
Funda
Douille

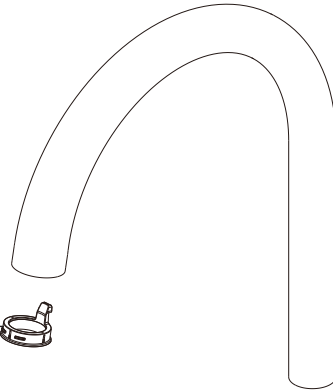


RP104019▲
Handle Assemblies
Ensamble de las Manijas
Assemblage de Manette

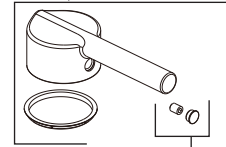


RP104020▲
Set Screw & Button
Tornillo de Ajuste y botón
Vis de calage et bouton

RP104021
Stem Unit Assembly, Seat
& Spring, Bonnet Nut
Ensamble de la Unidad del
Vástago, Asiento, Resorte
y Bonete Obturateur,
siège et ressort et écrou à
Chapeau

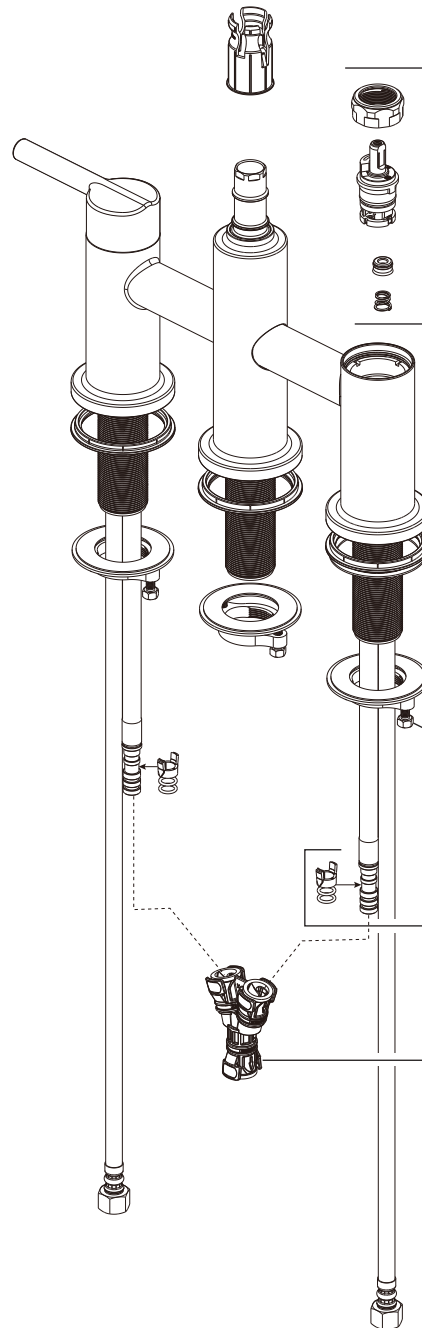

RP100956
Aerator & Wrench
Aerador y Llave
Aérateur et Clé

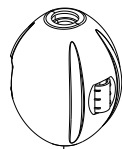

RP104018
Steel Weight Assembly
Ensamble de la Pesa
de Acero
Masselotte en acier

RP101016
Mounting Nut & Washer
Tuerca para la Instalación
Écrou de montage

RP101671
Clip (1), O-Rings (2)
Gancho (1), Juntas tóricas (2)
Agrafe (1), Joints toriques (2)

RP104026
Connector
Conector
Connecteur