



MASON 10" SWAG LIGHT SKU# 579409 / 579319

## ASSEMBLY / INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them at a later date.

### CAUTION

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

### GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards.

If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician. Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions. Tools are required when install this fixture.

### REQUIRED TOOLS

Philips screwdriver

### ASSEMBLY AND INSTALLATION

Turn off the power at fuse or circuit breaker. Carefully unpack the fixture, lay out all parts on a clean surface.


#### There are two options for you to install the swag light:

##### Option 1: Portable wire installation.

Note: Cut off the fixture ground wire at the top of fixture body.

##### A. For plaster or plaster board ceilings

1. Drill a hole in the ceiling to the same diameter as closed FLAPS of the enclosed TOGGLE BOLT assembly(A).
2. Thread the TOGGLE BOLT into HOOK (A).
3. Insert the FLAPS into the ceiling with the TOGGLE BOLT and HOOK protruding through the ceiling and screw the HOOK with TOGGLE BOLT until HOOK is tighten against the ceiling surface as shown.
4. Drape your CHAIN to second HOOK or let it hang straight.

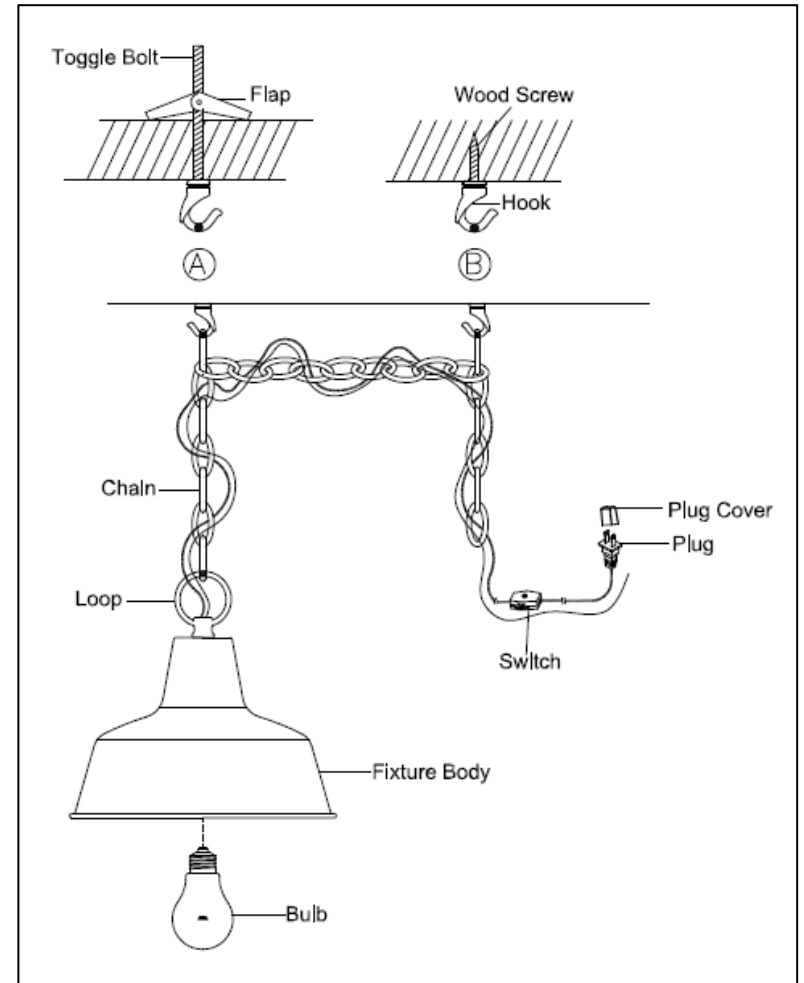


## B. For wood or acoustic board ceilings (minimum thick size is 1-1/2 Inch)

1. Select a place on the ceiling where a wood beam exists.
2. Thread the WOOD SCREW into HOOK (B).
3. Screw the assembly into the wood beam.
4. Drape your CHAIN to second HOOK or let it hang straight.
5. Install the BULB (Not included).
6. Once CHAIN & wire are arranged, plug into outlet & turn on the SWITCH and enjoy.

### Option 2: Fixed wire installation

1. Cut off the PLUG and SWITCH at point "A" by wire cutters.
2. Attach the MOUNTING STRAP to OUTLET BOX using provided the OUTLET BOX SCREWS.
3. Unscrew the RING from SCREW COLLAR LOOP.
4. Weave electrical wires and ground wire up CHAIN, through the SCREW COLLAR LOOP, through the NIPPLE and through the CANOPY and into the OUTLET BOX.
5. Tie the ground wire from OUTLET BOX and from fixture to the GROUND SCREW on the MOUNTING STRAP.  
Connect white fixture wire to white supply wire (neutral wire). Connect black fixture wire to black supply wire (live wire). Cover connections using provided WIRE CONNECTORS.
6. Raise the CANOPY against the ceiling and screw the NIPPLE down in SCREW COLLAR LOOP, tighten RING.
7. Install the BULB (Not included).

Turn on the power at fuse or circuit breaker.

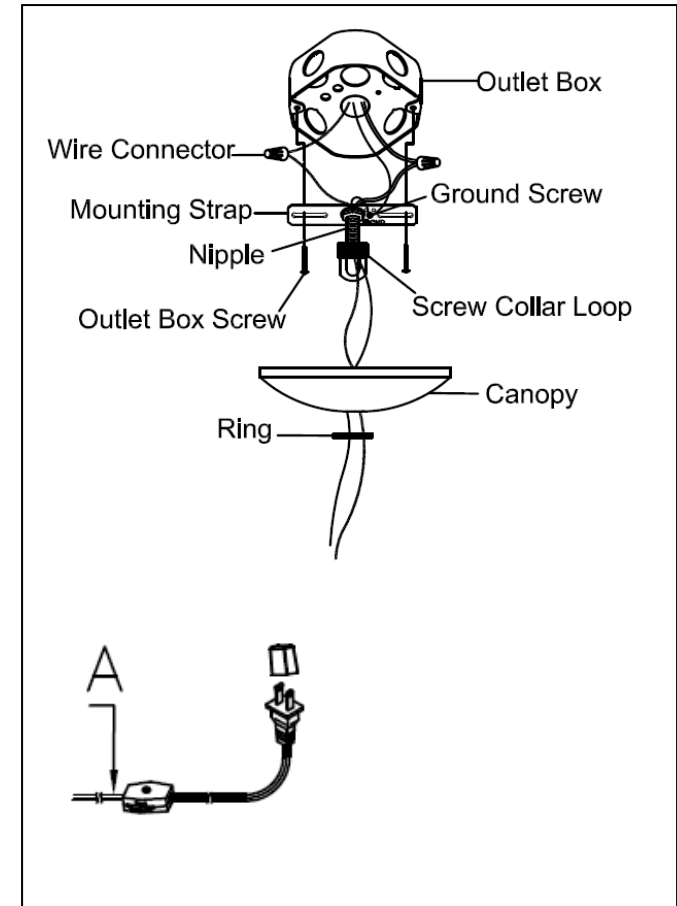

**ITEM# 579409 / 579319**

***IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,  
CONSULT A LICENSED ELECTRICIAN.***

***Customer Service: 1-800-558-8700***