

MADISON 3LT GLASS PENDANT SKU#579458

ASSEMBLY / INSTALLATION INSTRUCTIONS

Please read carefully and save these instructions, as you may need them at a later date.

CAUTION

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards.

If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician. Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions. Tools are required when install this fixture.

REQUIRED TOOLS

Philips screwdriver, Socket Ring Driver (Included)


ASSEMBLY AND INSTALLATION

Turn off the power at fuse or circuit breaker

1. Attach the MOUNTING STRAP to OUTLET BOX using 2 OUTLET BOX SCREWS provided.
2. Tie ground wire from OUTLET BOX and from fixture to the GROUND SCREW on the MOUNTING STRAP.
Connect white wire from fixture to white wire (neutral wire) from supply circuit. Connect black wire from fixture to black wire (live wire) from supply circuit. Cover connections using provided WIRE CONNECTORS.
3. Raise the CANOPY against the ceiling and fasten it using the FINIAL.
4. Screw 3 TUBES onto 3 SWIVELS. Screw each additional TUBE onto other TUBE.
5. Place the TOP SHADE onto the TOP SOCKET and secure with SOCKET RING using the SOCKET RING DRIVER.
6. Place the CENTER SHADE onto the CENTER SOCKET and secure with SOCKET RING using the SOCKET RING DRIVER.
7. Place the BOTTOM SHADE onto the BOTTOM SOCKET and secure with SOCKET RING using the SOCKET RING DRIVER.
8. Make sure to follow the graph to position each GLASS SHADE.
9. Install BULBS (not included).

Turn on the power at fuse or circuit breaker.

ATTENTION: Using mild soapy water and warm water, hand wash each glass shade. Use a soft, lint-free cloth to dry the shades before installation. Use care when handling during installation to prevent fingerprint marks. Occasional hand washing may be needed to keep the clear glass free of dirt marks and fingerprints

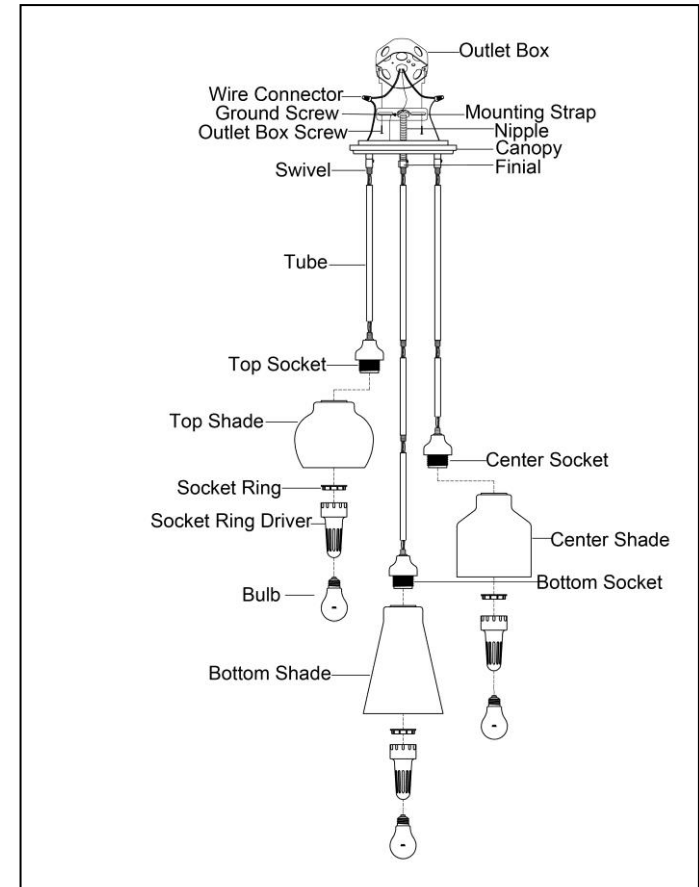

ITEM#579458

***IF IN DOUBT ABOUT ELECTRICAL INSTALLATION,
CONSULT A LICENSED ELECTRICIAN.***

Customer Service: 1-800-558-8700