
#### FIRE ALARM PANEL (-FAP) OPTION

IMPORTANT: FAP option wires must be run and connected before sign housing is attached to canopy. FAP option connects to 24 volt AC or DC (purple wires).

Flash Rate: .5 seconds on, .5 seconds off.

#### DC REMOTE (-DC) OPTION

IMPORTANT: DC Remote option wires must be run and connected before sign housing is attached to canopy. DC Remote option connects to 6-24 volt DC [yellow (–), blue(+)].

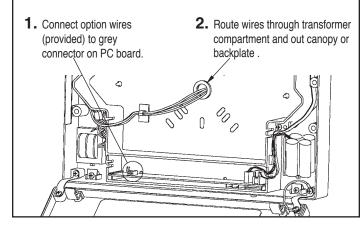


#### **DUAL CIRCUIT OPTION**

Connect transformers to separate AC utility sources using quick connect terminals provided for each circuit.

**120VAC** - connect black and white leads. **277VAC** - connect red and white leads.

Building ground connection.

CAUTION: Never remove or loosen transformer ground wire connections.

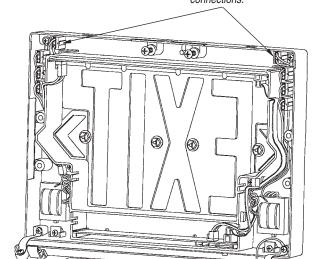


#### VANDAL/TAMPER RESISTANT APPLICATION (IF PROVIDED)

- 1. Remove directional arrows (if required) as outlined in this instruction guide.
- 2. Before mounting the exit sign, install the .093 polycarbonate vandal resistant shield onto the exit face(s) using four #8 x 3/8" tamper resistant screws and nuts supplied (see below). Tighten hardware using the spanner head screwdriver provided.

Install the exit sign following the mounting instructions in this instruction guide. After mounting the exit sign, install the two #8 x 3/8" tamper resistant screws into the sides of the exit as shown below. Tighten screws using spanner head screwdriver provided.

**NOTE:** On end mounted models, install only one tamper resistant screw into the side opposite the mounting canopy.

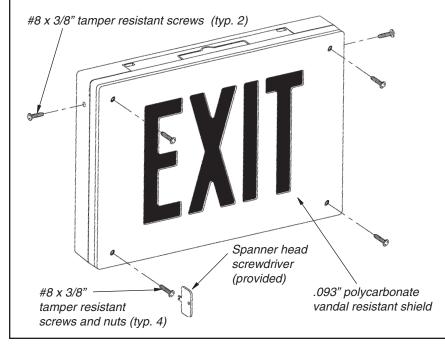

### TROUBLE SHOOTING

#### Unit does not light

· Check wiring connections.

#### Emergency circuit does not work

- Batteries are shipped uncharged and disconnected.
   Connect power pack leads and charge before testing.
- · Make sure charger board is properly seated.
- Check wiring connections.

#### **MAINTENANCE**

Signs should be tested and maintained in accordance with National Electrical Code and NFPA 101 Life Safety Code requirements. It is recommended that emergency exit signs be tested for 30 seconds once a month and for 90 minutes once a year.

#### **RECYCLING INFORMATION**


All thermoplastic parts are recyclable. All cartons contain recycled materials. Please recycle responsibly.

#### NOTICE:

Emergency model exit signs contain rechargeable nickel-cadmium batteries which must be recycled or disposed of properly.



# Cast Aluminum LED Exit Signs Installation Instructions

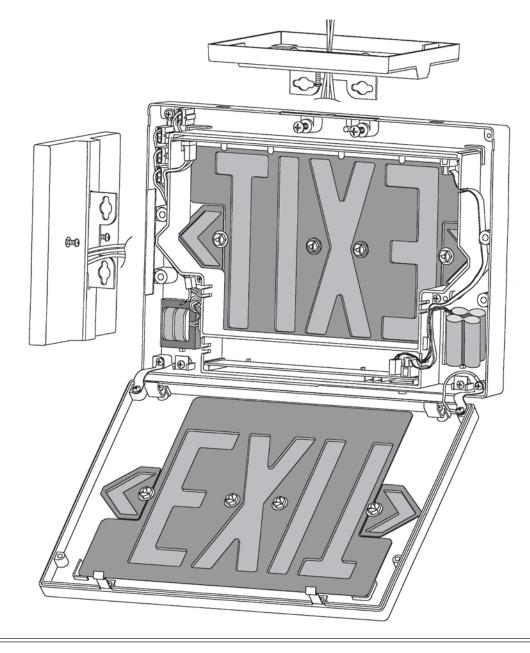

# **IMPORTANT SAFEGUARDS**

When using electrical equipment, basic safety precautions should always be followed including the following:

## **READ AND FOLLOW ALL SAFETY INSTRUCTIONS**

- 1. Do not use outdoors.
- 2. Do not mount near heaters or hot surfaces.
- 3. Equipment should be mounted in locations and at heights where it will not readily be subjected to tampering by unauthorized personnel.
- 4. The use of accessory equipment not authorized by the manufacturer may cause an unsafe condition.
- 5. Do not use this equipment for other than its intended purpose.
- 6. Service of this equipment should be performed by qualified service personnel.

# **SAVE THESE INSTRUCTIONS**



Hubbell Lighting, Inc.

# INSTALLATION INSTRUCTIONS

screw locations.

#### **IMPORTANT**

In order to avoid interference between canopy mounting screws and certain 4" electrical box covers, the canopy mounting plate may have to be installed

For raised single device covers, refer to mounting orientation illustrated in Figure 1.

For raised round opening covers, off-centering of the canopy mounting plate will have to be performed by the installer where necessary. Refer to mounting orientation illustrated in Figure 2.

NOTE: Plate not required in wall mounting applications.

