

# THROUGH-THE-WALL DATA

Room Size (Sq Ft)	Cooling BTUs	Heating BTUs (optional)
300-350	8,000	4,200
400-450	10,000	10,600
450-550	12,000	10,600
550-700	14,000	10,600

## HOW TO MEASURE A ROOM

**LENGTH (IN FEET) x WIDTH (IN FEET)  
= AREA (IN SQ FT)**

**ENGINEERED FOR COMFORT®**