

WINDOW DATA

Room Size (Sq Ft)	Cooling BTUs	Heating BTUs (optional)
300-350	8,000	3,500
400-450	10,000	N/A
450-550	12,000	11,000
700-1,000	18,800	16,000
1,200-1,400	23,000	16,000

HOW TO MEASURE A ROOM

**LENGTH (IN FEET) x WIDTH (IN FEET)
= AREA (IN SQ FT)**

ENGINEERED FOR COMFORT®