
Randall® Widespread Lavatory Faucet

Cross Handle Model D3510284C **Lever Handle** Model D3510280C

Thank you for selecting DXV. To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.

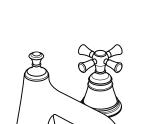






RECOMMENDED TOOLS AND MATERIALS

Most of the procedures require the use of common tools and materials, which are available from hardware and plumbing supply stores. It is essential that the tools and materials be on hand before work is begun.



ROUGHING-IN DIMENSIONS:

• For reference

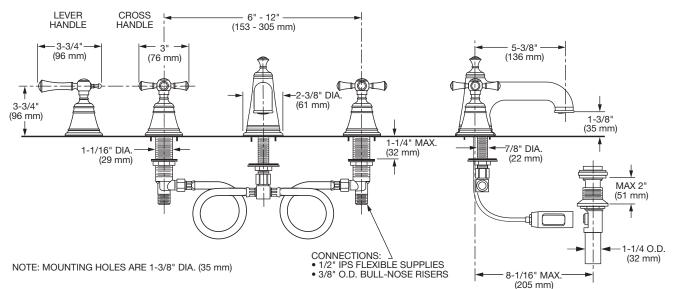

In the United States:

One Centennial Avenue Piscataway, New Jersey 08855 Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 227-2734 www.DXV.com

In Canada:

DXV 5900 Avebury Road Mississauga, Ontario L5R 3M3 Canada

Toll Free: 1-800-387-0369 Local: 905-306-1093 Fax: 1-800-395-1498 www.DXV.ca

In Mexico: DXV

Via Morelos 330 Col. Santa Clara Coatitla Ecatepec, Estado de México 55540

Toll Free: 01-800-8391200 www.DXV.mx

Ш S Ш α α Ш

SPOUT ASSEMBLY

Insert SPOUT (1) and CABLE
 CONNECTOR (2) through center hole,
 making sure SEAL WASHER (3) is
 properly seated in SPOUT BASE (4)
 groove.
 Assemble RUBBER
 WASHER (5), BRASS


CAUTION Turn off hot and cold water supplies before beginning.

Assemble RUBBER
WASHER (5), BRASS
WASHER (6) and LOCKNUT (7)
onto SPOUT SHANK (8) from under
side of sink. Make sure SPOUT (1)
is centered in the mounting hole
and the slot in the BRASS
WASHER (6) faces toward
the rear of the sink.

Tighten LOCKNUT (7) firmly.



• Thread TEE BODY (1) COUPLING NUT (2) to SPOUT SHANK (3).

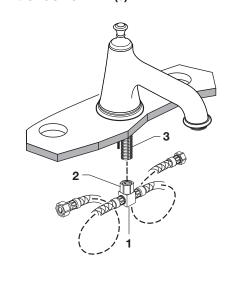

3 HOSE ASSEMBLY

- HANDLE ASSEMBLIES (1) are installed on VALVE BODIES (2) and must be removed to install VALVE BODIES (2) from under lavatory or mounting surface.
- To remove HANDLE ASSEMBLY (1), unthread HANDLE BASE (3) with LEVER (4) from VALVE BODY (2). Pull HANDLE ASSEMBLY (1) off VALVE STEM (5).

SLOT


- Unthread and remove MOUNTING RING (6) and SPACER (7).
- Thread LOCKNUT (8) to bottom of VALVE BODY (2). Make sure FIBER WASHER (9) and RUBBER WASHER (10) are installed.
 Insert VALVE BODY (2) through mounting hole from underside of lavatory or mounting surface.

Note: VALVE BODY marked with Red Dot is installed in the left mtg.hole, VALVE BODY marked with Blue Dot in the right when facing front of fitting. Maximum mounting surface thickness is 1-1/4" (32 mm).

- From top install SPACER (7) onto VALVE BODY (2). Thread MOUNTING RING (6) on VALVE BODY (2) until seated tightly against SPACER (7).
 Set VALVE BODIES (2) so that their outlets are facing toward SPOUT TEE (11) and thentighten LOCKNUT (8) using 35 mm or adjustable wrench.
- Tighten COUPLING NUT (12) on SUPPLY HOSE (14) to OUTLET (13) making water tight connection.
 Important: Loop SUPPLY HOSES (14) as shown so they do not kink.


INSTALL HANDLES (LEVER and CROSS)


• Turn VALVE BODIES (2) to off position. Align HANDLES as shown or as desired and install HANDLE ASSEMBLY (1, 1A) onto VALVE STEM (5). Thread HANDLE BASE (3) onto VALVE BODY (2) until seated tightly against mounting surface.

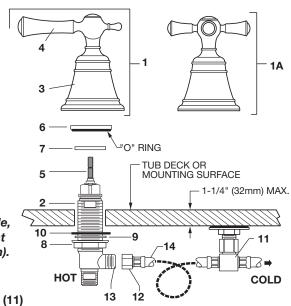

4 POP-UP DRAIN


- Remove CLEAR PLASTIC COVER (1). Fig. A.
- Remove CARDBOARD SPACER (2) from under DRAIN POP-UP (3). Fig. A.
- Tighten TAILPIECE (4) on DRAIN BODY before installing DRAIN BODY. Fig. B.

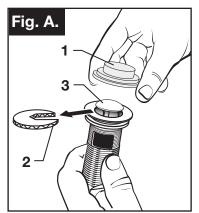


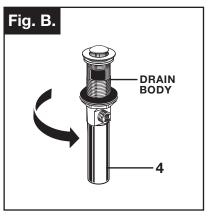

5 REMOVE FLANGE

- Thread FLANGE (1) counter-clockwise and remove FLANGE (1) and FOAM GASKET (2) from drain body. Fig. A.
- Thread LOCKNUT (3) clock-wise to bottom of drain body. Push GASKET (4) down against LOCKNUT (3). Fig. B.

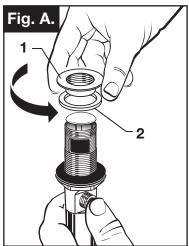

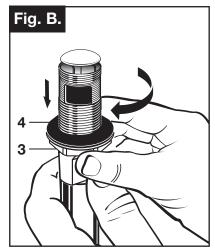


6 INSTALL DRAIN FROM BELOW FIXTURE

• From under side of SINK install DRAIN BODY (1) up through drain outlet.


Note: No plumber's putty or caulk is required. The CABLE ATTACHMENT POINT (2) must face towards the rear of the SINK.

 Install FOAM GASKET (3) and FLANGE (4) onto drain body from above SINK and tighten FLANGE (4) firmly.

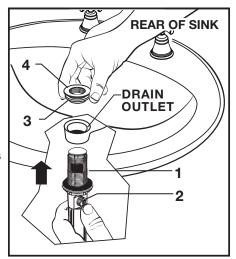


7 TIGHTEN LOCKNUT


• Tighten LOCKNUT (1) firmly with Adjustable Wrench or Channel Locks.

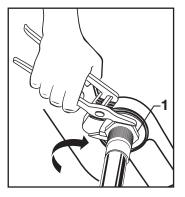

8 FLANGE GASKET AND POP-UP KNOB

- Check DRAIN FLANGE in SINK to ensure that WHITE FOAM GASKET (3) is fully compressed and not visible. Fig. A.
- POP-UP KNOB (1) must be fully down. Fig. B.

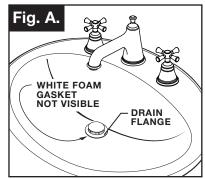


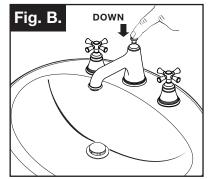

9 ATTACH CABLE CONNECTOR

- Thread CABLE CONNECTOR (1) clockwise onto DRAIN BODY CONNECTION (2) and hand tighten. Fig. A.
- Your new POP-UP DRAIN installation is now complete. **Fig. B.**


Note: Tailpeice on pop-up drain is 1-1/4" (32 mm) O.D. **Fig. B.**

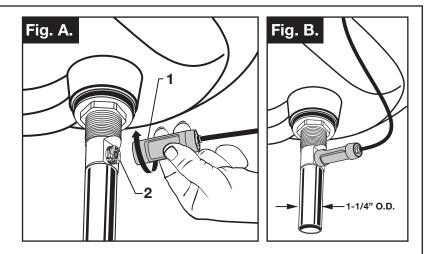

10 CHECK OPERATION OF POP-UP

• Operate LIFT KNOB (1) to verify that STOPPER (2) opens and closes.

Note: If STOPPER **(2)** does not open and close properly then refer to the "troubleshooting section" of these instructions.

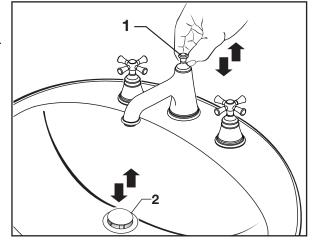


3/8 COMPRESSION CONNECTION

MAKE WATER SUPPLY AND WASTE CONNECTIONS NOTE: FLEXIBLE SUPPLIES OR BULL-NOSE RISERS NOT INCLUDED AND MUST BE PURCHASED SEPARATELY. • Connect water supply to VALVE BODIES (1,1A) with 1/2" (12.7 mm) IPS FLEXIBLE SUPPLIES (2) or 3/8" (9.5 mm) O.D. BULL-NOSE RISERS (3). Use adjustable wrench to tighten connections. Do not over tighten. Be careful not 1A to kink copper supply when bending. Use tubing cutter to cut to proper length. Connect HOT water supply to inlet of left SHANK and COLD water supply to right SHANK using sealant, COUPLING appropriate connectors, and COUPLING NUTS. waste outlet. 3 1/2" (12.7 mm) 3/8" (9.5 mm) O.D. BULL-NOSE PIPE THREAD COMPRESSION **FERRULE** FLEXIBLE SUPPLIES

12 CONNECT DRAIN

• Connect 1-1/4" (32 mm) O.D. tailpiece on POP-UP DRAIN to waste outlet.

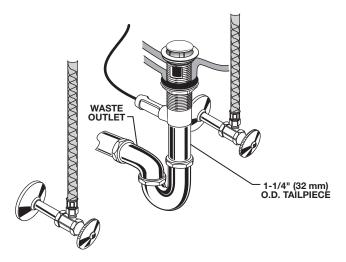

13 TEST INSTALLED FITTING

- With HANDLES (1) in OFF position, turn on WATER SUPPLIES (2) and check all connections for leaks.


 →
- Remove AERATOR (3).
- Operate both HANDLES (1) to flush water lines thoroughly.
- Replace AERATOR (3).

14 CHECK DRAIN CONNECTIONS

- Operate POP-UP KNOB (5) and fill Sink with water. Check that DRAIN STOPPER (4) makes a good seal and retains water in Sink. If STOPPER (4) does not seal properly, please refer to "Troubleshooting Guide" in these instructions.
- Push POP-UP KNOB (5) down and check all drain connections and "P" trap for leaks. → Tighten if necessary.

TO CLEAN AERATOR

- AERATOR (3) may accumulate dirt causing distorted and reduced water flow. Unscrew and remove AERATOR (3) and rinse clean.
- Replace AERATOR (3) and operate handles several times from OFF to ON position. Do not force, handles turn only 90°.

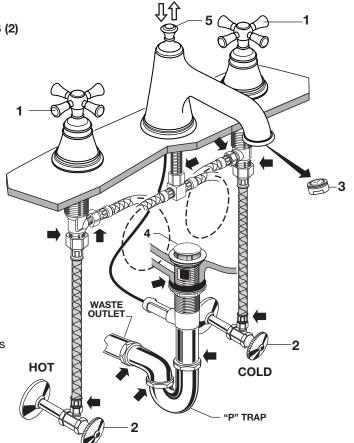

Speed Connect® Drain Troubleshooting Guide

If sink does not hold water even though Stopper is in the "down" position:

• Follow CABLE ADJUSTMENT PROCEDURE.

If Stopper does not raise up fully or sink drains too slowly:

• Follow CABLE ADJUSTMENT PROCEDURE.

If you need to remove the Stopper:


• Follow STOPPER REMOVAL PROCEDURE.

If you would like the ability to remove your Stopper simply by lifting it out of the drain:

• Follow STOPPER INSTALLATION PROCEDURE for "Unlocked" mode.


CABLE ADJUSTMENT PROCEDURE

- Disconnect the Cable from the Drain by threading the Cable Connector (1) counter-clockwise. Fig. A.
- Look at the area on the Drain Body where the Cable was attached and locate the component labeled as "Cam" in the illustration. **Fig. B.**
- Use a small screwdriver to rotate the Cam in the clockwise direction as far as it will go. At this point the Stopper should be in the UP position. **Fig. B, C.**
- Push DOWN on the Lift-Knob to make sure it is fully down. Fig. C.
- Re-attach the Cable to the Drain Body Connection (2) by threading the Cable Connector (1) clockwise onto the Drain Body Connection (2) and hand-tighten. Fig. A.

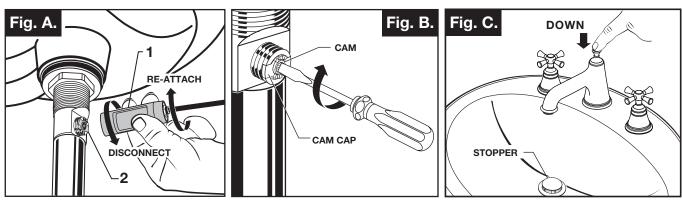

STOPPER REMOVAL PROCEDURE

- Disconnect the Cable from the Drain by threading the Cable Connector (1) counter-clockwise. Fig. A.
- Look at the area on the Drain Body where the Cable was attached and locate the component labeled as "Cam" and "Cam Cap" in the illustration. Fig. B.
- Use fingers or small screwdriver under either side of the Cam Cap to pry it out from the Drain. Fig. D.
- Remove the Cam by pulling it straight out while wiggling gently to loosen the Rubber Seal. Fig. E.
- The Stopper can now be removed by lifting it out of the Drain. Fig. F.

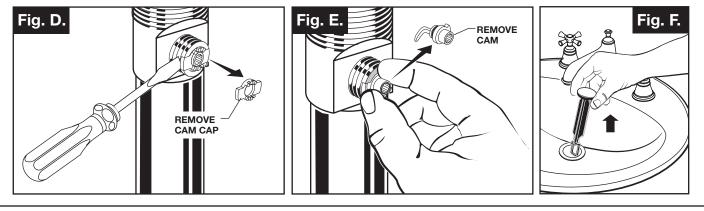

STOPPER INSTALLATION PROCEDURE


The Stopper can be installed two ways, "Locked" Mode (Stopper cannot be removed) or "Unlock" Mode (Stopper is removable).

LOCKED MODE:


- Look at the Plastic Loop at the bottom of the Stopper and notice that the Loop is on one side of the Stopper. **Fig. G.**
- To install the stopper in "Locked" mode, insert the Stopper into the Drain so that the Plastic Loop is facing toward the rear of the Sink. Rotate Stopper slightly if necessary so that the Stopper slides all the way down. Fig. G.
- Re-install the Cam into the Drain, rotating the Cam if necessary to make sure it is fully inserted. **Fig. J.**
- Re-install the Cam Cap, making sure the guide teeth are facing outward. If the Cam Cap does not "snap" into place, then rotate the Cam to make sure it is fully inserted. Fig. K.
- Re-attach Cable. See "CABLE ADJUSTMENT PROCEDURE" in Troubling Shooting Guide to complete installation. Stopper will be in "Locked" mode and not be removable.

UNLOCKED MODE:


- Look at the Plastic Loop at the bottom of the Stopper and notice that the Loop is on one side of the Stopper. **Fig. H.**
- To install the stopper in "Unlocked" mode, insert the Stopper into the Drain so that the Plastic Loop is facing toward the front of the Sink. Rotate Stopper slightly if necessary so that the Stopper slides all the way down. Fig. H.
- Re-install the Cam into the Drain, rotating the Cam if necessary to make sure it is fully inserted. Fig. J.
- Re-install the Cam Cap, making sure the guide teeth are facing outward. If the Cam Cap does not "snap" into place, then rotate the Cam to make sure it is fully inserted. Fig. K.
- Re-attach Cable. See "CABLE ADJUSTMENT PROCEDURE" in "Troublingshooting Guide" to complete installation. Stopper will be in "Unlocked" mode and removable.

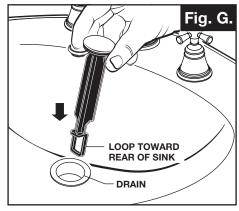


Locked Mode (Vandal Proof)

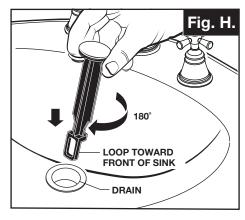

Unlocked Mode

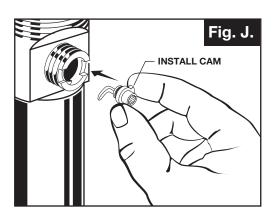

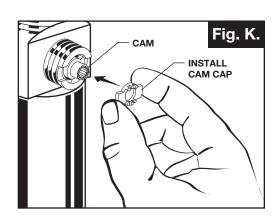



Cross Handle D3510284C Replace the "YYY" with appropriate finish code Lever Handle D3510280C POLISHED CHROME 100 **BRUSHED NICKEL** 144 PLATINUM NICKEL 150 A860682.XXX H960622.XXX **SATIN BRASS** 427 HANDLE CAP POP-UP KNOB M964764-YYY0A POP-UP ROD A860682.XXX HANDLE CAP A860681.XXX LEVER HANDLE SET A860680.XXX CROSS HANDLE SET H960625.XXX **ROSETTE & WASHER** M964737-YYY0A AERATOR ASSEMBLY H960295.191 SPOUT MOUNTING KIT H960628.191 DECK ADAPTOR KIT M952430-0070A SPEED CONNECT CABLE ASSEMBLY H960136.191 1/2" COLD CARTRIDGE H960279.191 MOUNTING KIT (CLOCK-WISE ON) M953006-0070A H960104.191 TEE & HOSE H960742.191 1/2" HOT CARTRIDGE **ASSEMBLY** 1/2" SIDE VALVE ROUGH (COUNTER CLOCK-WISE ON) (COUNTER CLOCK-WISE ON) H960741.191 1/2" SIDE VALVE ROUGH (COUNTER CLOCK-WISE ON) M952425.XXX DRAIN ASSEMBLY

Randall®
Widespread
Lavatory Faucet
MODEL NUMBERS