
# **INSTALLATION INSTRUCTIONS**

## **Lyndon<sup>®</sup>** Widespread Lavatory Faucet

## Model D35109800

Thank you for selecting DXV. To ensure that your installation proceeds smoothly, please read these instructions carefully before you begin.

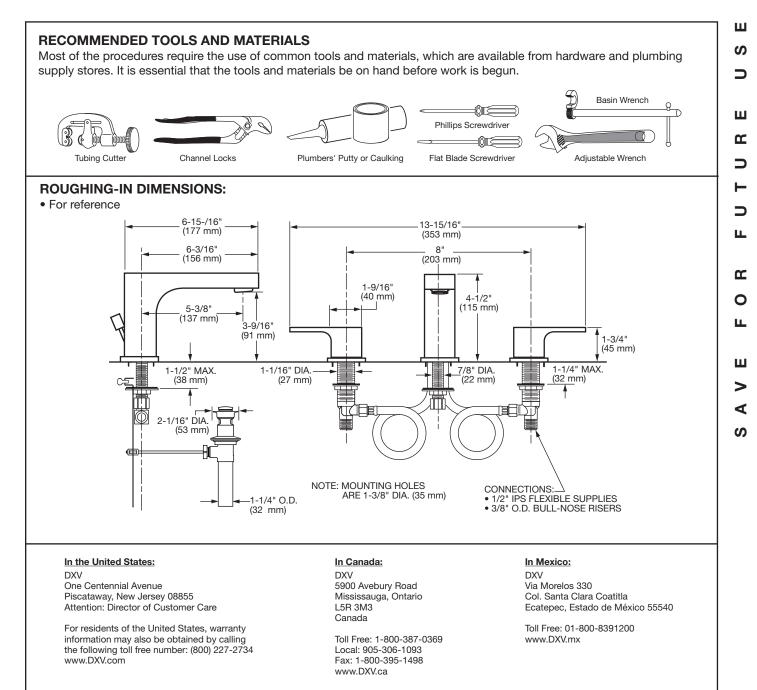




M965850 (8/17)

## SPOUT ASSEMBLY

CAUTION Turn off hot and cold water supplies before beginning.

- Insert SPOUT SHANK (1) through center hole of sink or mounting surface. Make sure RUBBER WASHER (2) is seated into groove in SPOUT ESCUTCHEON BASE (3).
- Assemble RUBBER WASHER (4), BRASS WASHER (5) and LOCKNUT (6) onto threads of SPOUT SHANK (1) from underside of lavatory or mounting surface.
- Align SPOUT (7) and tighten LOCKNUT (6). Insert LIFT ROD (8) through SPOUT (7).

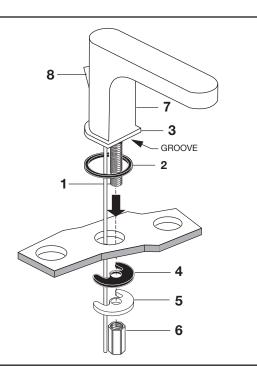

### REMOVE HANDLE ASSEMBLIES FROM VALVE BODIES

• Thread LOCKNUT (1) to bottom of VALVE BODY (2). Make sure RUBBER WASHER (3) is installed. Insert VALVE BODY (2) through mounting hole from underside of lavatory or mounting surface.


Note: VALVE BODY marked Hot is installed in the left mounting. hole, VALVE BODY marked Cold in the right when facing front of fitting. Maximum mounting surface thickness is 1-1/4".

• From top install SPACER (4) and HANDLE (6) onto VALVE BODY (2). Set VALVE BODIES (2) so that their outlets are facing toward SHANK (5) and then tighten LOCKNUT (1) using wrench or other approprite wrench to secure

VALVE BODIES (2) to mounting surface.

2

3

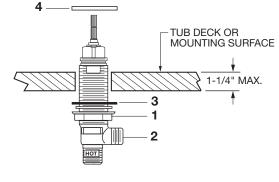

INSTALL HANDLES AND SUPPLY HOSES


#### **INSTALL HANDLES**

- Turn VALVE STEMS (1) to off position. Align LEVERS (2) as shown or as desired and install HANDLE ASSEMBLY (4) onto VALVE STEM (1).
- Thread HANDLE BASE (3) clock-wise onto VALVE BODY THREADS (5a) until seated tightly against mounting surface and aligned with the dotted line in the illustration.


#### **INSTALL SUPPLY HOSES**

• Thread supply hose COUPLING NUTS (6) onto outlets on VALVE BODIES (5). Tighten with an adjustable wrench making a water tight connection.

Important: Loop SUPPLY HOSES (7) as illustrated so they do not kink.

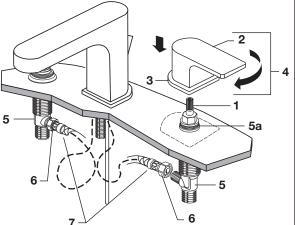


23

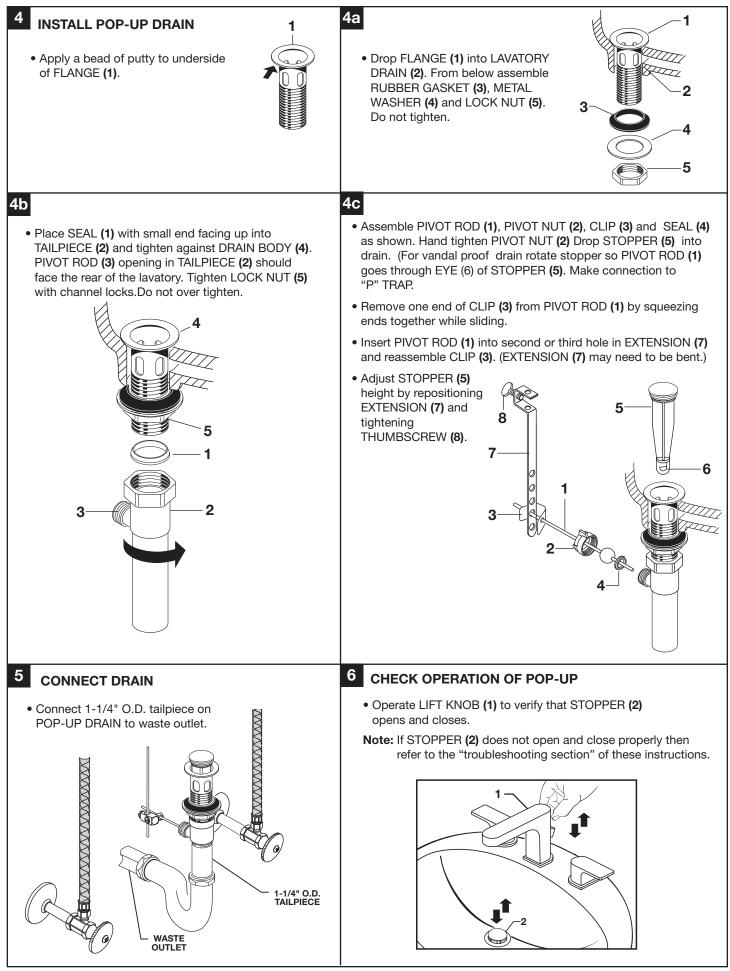

## 6 MAKE WATER SUPPLY AND WASTE CONNECTIONS

#### NOTE: FLEXIBLE SUPPLIES OR BULL-NOSE RISERS NOT INCLUDED AND MUST BE PURCHASED SEPARATELY.

- Connect water supply to VALVE BODIES (1,1A) with 1/2" IPS FLEXIBLE SUPPLIES (2) or 3/8" O.D. BULL-NOSE RISERS (3). Use adjustable wrench to tighten connections. Do not over tighten. Be careful not to kink copper supply when bending. Use tubing cutter to cut to proper length.
- Connect HOT water supply to inlet of left SHANK and COLD water supply to right SHANK using sealant, appropriate connectors, and COUPLING NUTS.

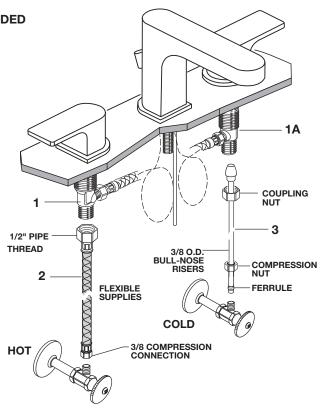

#### 7 TEST INSTALLED FITTING

- With HANDLE (1) in OFF position, turn on WATER SUPPLIES (2) and check all connections for leaks. ➡
- Remove AERATOR (3) using KEY (6).
- Operate HANDLES (1) to flush water lines thoroughly.
- Replace AERATOR (3) and tighten.

#### 8 CHECK DRAIN CONNECTIONS

- Operate POP-UP KNOB (5) and fill SINK with water. Check that DRAIN STOPPER (4) makes a good seal and retains water in Sink. If DRAIN STOPPER (4) does not seal properly, please refer to "Troubleshooting Guide" in these instructions.
- Push POP-UP KNOB (5) down and check all drain connections and "P" trap for leaks. ➡ Tighten if necessary.

