# Installation manual for

1453D17PN, 1453D17DB

Dimensions : D17" H18" L3 Collection : VIENNA Bulb Type : E12 bulb not included Weight : 6 LBS

 


Thank you for choosing our product(s). Our Company is actively involved in every step of the production.

Our product(s) are designed to be utilized for every application that graces your home or business.

We pride ourselves in providing the most prompt and courtesy service to all of the valued customers.

Please find the enclosed detailed instruction and read carefully for proper installation. If you have any questions, our professional customer service team is committed to assisting you, please call our toll free HOTLINE AT:





### 1453D17 d17" H18" L3

### SAFETY

#### Warning: MAKE SURE THE ELECTRICITY TO THE WIRES YOU ARE WORKING ON IS SHUT OFF BY EITHER REMOVING THE FUSE OR TURNING OFF THE CIRCUIT BREAKER.

### CAUTION

- Before assembling the lighting fixture, please read all instructions carefully.

- All frame & crystal components are fragile, please handle with care.

- Required supply circuit : 110 - 130V/60Hz

- Labeled wires are "L" for live wire, "N" for neutral wire, "E" for ground wire.

- Never install fixture on damp ceiling, the room should be dry and well ventilated

- All electrical components must be installed by a licensed electrician and in accordance with the National Electrical Code and the appropriate local electrical codes.

## Unpack the Package

Please open the box carefully and check all the items are inside the box. If you have any installation, assembling and missing parts questions, please call our Customer Service department at 1-888-388-3390. Please have model number(at the front page), where you purchase from and any other relevant information ready, our customer service team will provide comprehensive and worry free service to our valued customers. 1453D17 D17" H18" L3 Step 1

Please use the parts list to ensure you are not missing any parts.

1453D17

PARTS LIST

Part #	Picture	Description	Qty	Check list
ZA		Canopy cover (D4.7") (Canopy part)	1	
ZB		Crossbar (4") (Canopy part)	1	
ZC	0	Canopy ring (Canopy part)	1	
ZD		Canopy lock (Canopy part)	1	
ZE	-000-	L5'CHAINO5P Plain Design	1	
ZF		Power Cord 15',18AWG, SPT-1 Clear/Black	1	
P1	Q	Loop	1	
P2		Nipple	10	
P3	$\bigcirc$	Metal Frame (D16.5")	1	
P4	0	Metal Frame (D15.4")	1	
P5	0	Metal Frame (D14.3")	1	
P6	0	Metal Frame (D13.2")	1	
P7	0	Metal Frame (D12.1")	1	
P8	Ũ	Washer	2	
Р9		Socket	3	

(01)


(02)

## 1453D17~D17''~H18''~L3

Part #	Picture	Description	Qty	Check list
P10		Rod(D0.46"*10")	1	
P11	$\square$	Socket cover	3	
P12	ł	Washer	11	
P13		Lamp arm(L2.56"*W2")	3	
P14		Around metal plate (D3.15")	1	
P15	0	Accessory	15	
P16	8	Nut	10	
P17		Hickey	1	
P18		Metal Wire Box (D3.27"*H1.9")	1	
P19	0	Cap nut	1	
P20		Finial	6	

1453D17 d17" H18" L3

# Frame Assembly Diagram

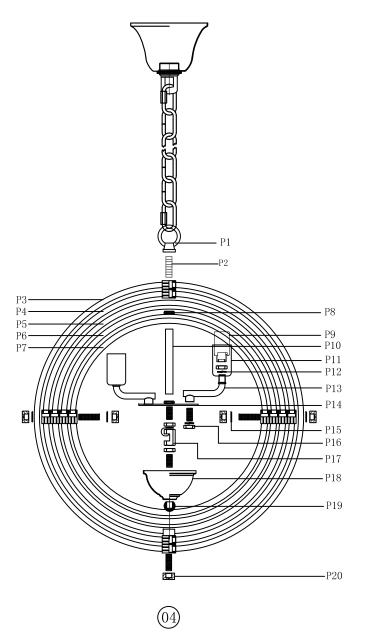

03


### 1453D17~D17'' H18" L3

 $\ensuremath{\text{IMPORTANT}}\xspace:$  The sockets with bulb before dressing the fixture.

- 1 .Attach the crossbar to the electrical box.
- 2 .Pass the lamp wire and ground wire through the loop, canopy ring and center hole of canopy cover.
- 3 .Screw2.5" threaded pipe into the crossbar and fasten with hex-nut.
- 4 . Pull wires up through the nipple.
- 5 .Screw loop only onto threaded pipe.
- 6 . Hang the fixture on chain.
- 7 .Make the electrical connections as detailed in the drawing above.
- $\boldsymbol{8}$  . Secure the canopy cover with threaded canopy ring

#### Step 2

# Canopy Installation Instruction

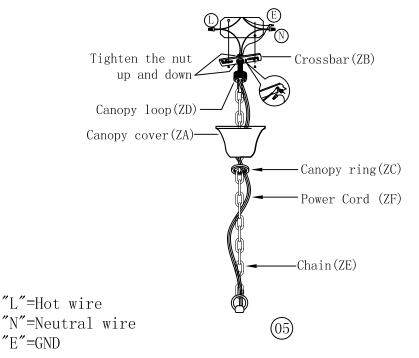

## 1453D17 d17" H18" L3

# Frame Assembly Instructions


#### Installation:

Please read all instructions carefully. Before you proceed to install make sure that the power supply is turned off and remains off until installation is complete. Please note that each part has been assigned a number. Please proceed in a numerical order.

1. Remove all parts carefully from the carton.

- 2. Adjust the metal frame (1)(2)(3)(4)(5), make sure the lamp body like the ball
- 3. Finally adjust the lamp arm (6), make sare the lamp arm paralld symmetric.

# Step 3 Frame Assembly Diagram

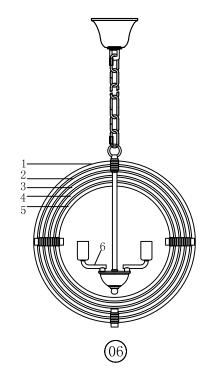

 $1453D17 \text{ d}{\scriptscriptstyle 17''} \text{ H18''} \text{ l}{\scriptscriptstyle 3}$ 

# Congratulations !

You are now done installing your Elegant Lighting fixture. Sit back and admire each crystal as it will become the statement piece for your room/house.

If you require any additional assistance, please contact us at 1-888-388-3390.

Thank you.

1453D17 d17" H18" L3

Cleaning and Maintenance of Chandelier Frame The finish on our chandelier frames and fixture frames is protected by a durable coating of lacquer. To clean, use a clean soft, dry cloth. Do not use any metal polishes, cleaners, abrasives or any substance which could remove the protective finish. Failure to follow these instructions automatically voids the guarantee.

Cleaning and Maintenance of Crystals Wet a soft cotton fabric in clean warm water and wipe gently, then polish with a dry soft cotton fabric.

To Order Crystal Replacement Parts Should you require replacement crystals or pins (the metal connectors attaching the crystals), contact the store where the product was purchased or contact us at the address shown on the reverse side. For ease of ordering, you may use the original crystal trimming instructions provided with this product and circle the items you wish to order, indicating the quantity by writing the number needed adjacent to the circle and faxing it to our customer service department at 215-423-8882. You will be contacted with prices prior to shipment. All orders must be pre-paid.

08)

### 1453D17 d17" H18" L3

### Elegant Lighting Warranty

The finish and frame of your new chandelier or fixture are warranted for a period of two (2) years from the date of purchase. Our company will, at its option, repair or replace any frame that has a defect in the materials or workmanship during the warranty period. All crystals are guaranteed for their original quality during the life of the chandelier. Breakage is not covered by this warranty.

To make a claim under this warranty, contact our customer service department at the address and phone number shown below. A written return authorization form will be sent to you with specific instructions.

CUSTOMER SERVICE DEPARTMENT 500-550 E. Erie Avenue Philadelphia, PA 19134 Tel : 215-423-8880 Fax : 215-423-8882 1453D17 d17" H18" L3

### Returns and Conditions of Warranty

Returns must be pre-authorized by contacting our customer service department at the address on the reverse side. Returns will only be accepted with a written return merchandise authorization and return shipping charges pre-paid. We reserved the right to inspect all returned merchandise to fully determine the nature of any defect. This guarantee shall not apply to any product that has been changed, altered or otherwise modified, nor shall it apply to any product that has been repaired or altered by anyone other than a pre-authorized facility. We will not be responsible for any breakage or damages incurred during transit, nor for crystal parts or metal frame part that have been subject to misuse, negligence, accident or inappropriate handling. Also, we will not be held responsible for damage incurred during improper installation or wiring by others, nor for damages resulting from a failure to follow the recommended maintenance or installation procedures. This guarantee is issued in lieu of any and all other guaranteed or warranty, whether written or implied and any and all other obligations or liabilities. Further, we neither authorize nor permit any other person or firm to assume for us, any liability in connection with the sale of our products.

(10)