
Owners Manual Model 4400DB Tubular Fountain With Pet Fountain

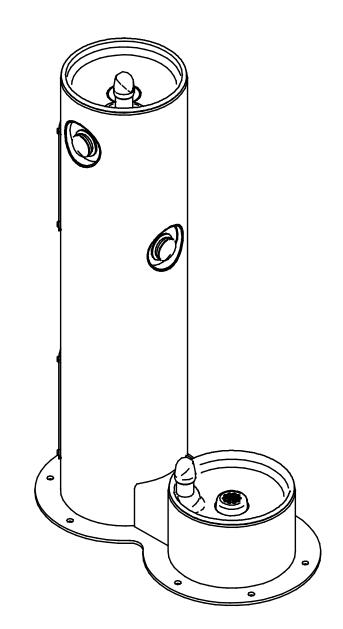

INSTALLER

4400DB Fountains are among the easiest to install Fountains on the market today. To assure you install these models easily and correctly, PLEASE READ THESE SIMPLE INSTRUCTIONS BEFORE STARTING THE INSTALLATION. CHECK YOUR INSTALLATION FOR COMPLIANCE WITH PLUMBING, ELECTRICAL, AND OTHER APPLICABLE CODES. After installation, leave these instructions with the Fountain for future reference.

INSTALLATION INSTRUCTIONS


IMPORTANT


ALL SERVICE TO BE PERFORMED BY AN AUTHORIZED SERVICE PERSON


IMPORTANT! INSTALLER PLEASE NOTE.

THE GROUNDING OF ELECTRICAL EQUIPMENT SUCH AS TELEPHONE, COMPUTERS, ETC. TO WATER LINES IS A COMMON PROCEDURE. THIS GROUNDING MAY BE IN THE BUILDING OR MAY OCCUR AWAY FROM THE BUILDING. THIS GROUNDING CAN CAUSE ELECTRICAL FEEDBACK INTO A FOUNTAIN, CREATING AN ELECTROLYSIS WHICH CAUSES A METALLIC TASTE OR AN INCREASE IN THE METAL CONTENT OF THE WATER. THIS CONDITION IS AVOIDABLE BY USING THE PROPER MATERIALS AS INDICATED. ANY DRAIN FITTINGS PROVIDED BY THE INSTALLER SHOULD BE MADE OF PLASTIC TO ELECTRICALLY ISOLATE THE FOUNTAIN FROM THE BUILDING PLUMBING SYSTEM.

- 1. This fountain is to be mounted on a smooth, flat, finished surface with adequate support structure.
- **NOTE:** Mounting structure must be capable of supporting 300 lb. load on fountain.
- 2. Refer to rough-in for plumbing.
- 3. Install shut-off valve on water supply, (Valve not furnished) (See Fig. 1).
- 4. Locate and install fountain using 3/8" minimum fasteners, (Fasteners not furnished).
- 5. Connect water supply and fountain drain. Connect drain waste "Tee" to fountain drain tubes. Connect outlet of "Tee" to drainage system. Water connection and drain must comply with local codes.
- 6. Turn on water supply and check all connections for leaks.
 - CAUTION: This fountain is rated for inlet water pressure of 20-105 PSI. A pressure reducing regulator should be used if the inlet water supply exceeds 105 PSI. Any damage caused by reason of connecting this product to supply line pressures lower than 20 PSI or higher than 105 PSI is not covered by warranty.
- 7. Water supply 3/8" O.D. unplated copper tube. Waste 1-1/4" IPS. Contractor to supply waste trap and service stop valve in accordance with local code.
- 8. Connecting lines to be made of unplated copper and should be thoroughly flushed to remove all foreign matter before being connected to fountain. This fountain is manufactured in such a manner that it does not in any way cause taste, odor, color, or sediment problems.
- 9. Connect fountain to supply line with a shut-off valve and install a 3/8" unplated copper water line between the valve and the cooler. Remove any burrs from outside of water line. Push the tubes straight into the fittings until they reach a positive stop, approximately 3/4" (See Fig. 2). DO NOT SOLDER TUBES INSERTED INTO THE STRAINER AS DAMAGE TO THE O-RINGS MAY RESULT.

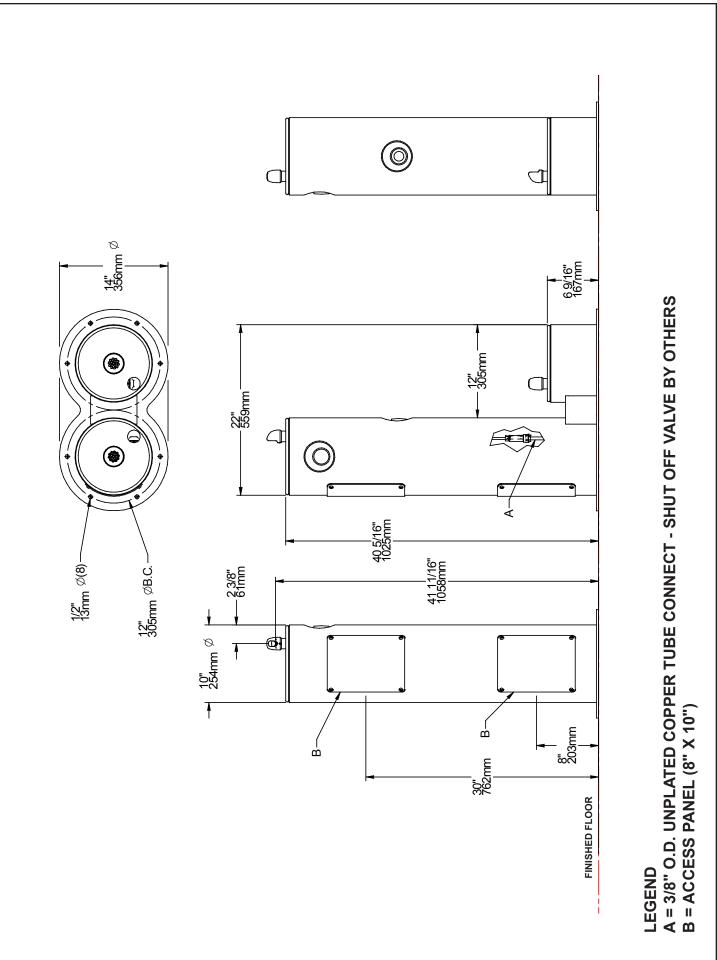


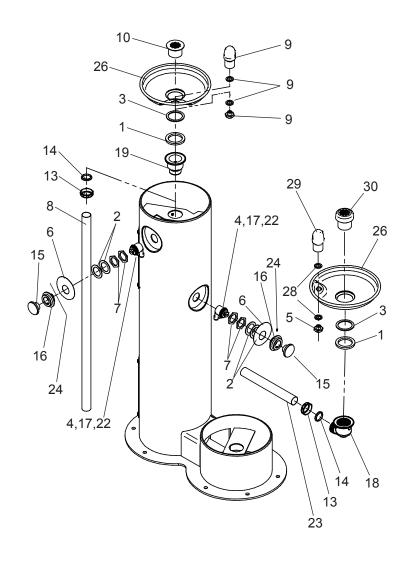


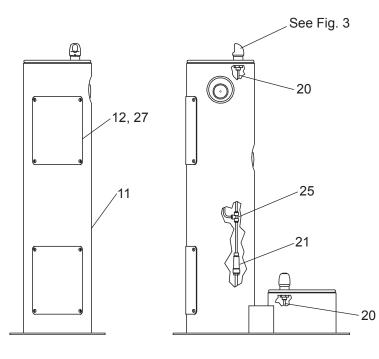


ACTUATION OF QUICK CONNECT WATER FITTINGS:

Fountain is provided with lead-free connectors which utilize an o-ring water seal. To remove tubing from the fitting, relieve water pressure, push in on the gray collar while pulling on the tubing. (see Fig.2) To insert tubing, push tube straight into fitting until it reaches a positive stop, approximately 3/4".

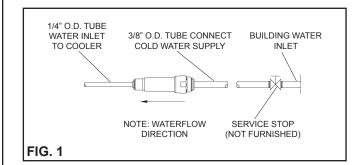

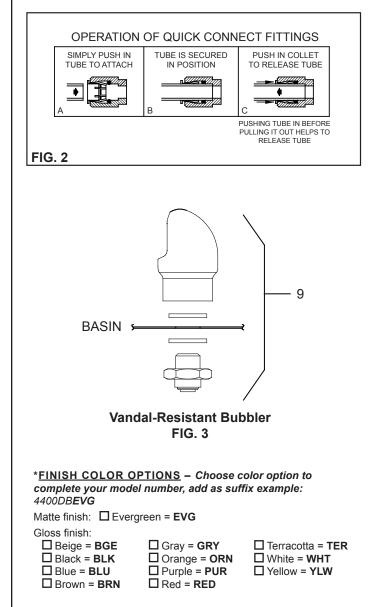

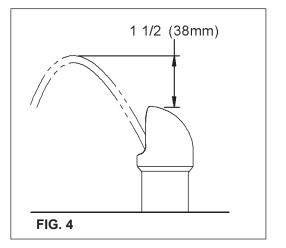

STREAM HEIGHT ADJUSTMENT:

Stream height is factory set at 35 PSI. If supply pressure varies greatly from this, insert a small straight bladed screwdriver through the access hole in the center of the push button and turn the adjustment screw. Clockwise adjustment will raise the stream and counterclockwise adjustment will lower the stream. For best adjustment, the stream should be approximately 1 1/2" above the top of the bubbler. (See Fig. 4)

ITEM NO.	PART NO.	DESCRIPTION
1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20	100147140560 28308C 101570540560 15005C 15009C 28703C 40045C 45725C 97446C 45831C* 45832C* 75588C 75588C 75589C 45662C 45663C 50986C 56121C 55913C 56092C	DESCRIPTION Drain Gasket Washer - Spacer Drain Gasket Regulator Retaining Nut Nipple Assy Bubbler Nameplate Insert Hex Nut 1-5/16" Tailpipe - 33" Lg. Kit - Bubbler (VR) Drain Plug 1-1/2" Fountain Body Access Panel Slip Joint Nut 1-1/4" Seal Washer Push Button Push Button Push Button Sleeve Regulator Holder Drain Elbow Drain Adaptor Poly Tubing (Cut To Length)
21	55996C	In - Line Strainer
22 23	61313C 45724C	Regulator Tailpipe - 10" Lg.
24 25 26	75672C 70682C 28467C	Cap Screw Tee - 1/4" Basin
20 27 28	75535C 100322740560	Pinned Torx Screw 1/4-20 x .75" Gasket-Black
29 30	45727C 45726C	Bubbler (DB) Drain Plug (DB)
NS NS	45476C 75521C	Drain Tube Bit - Torx T-27

*select color option to complete part number NS = Not Shown

PRINTED IN U.S.A. Halsey Taylor – halseytaylor.com Elkav – elkav.com

FOR PARTS CONTACT YOUR LOCAL DISTRIBUTOR OR CALL TECHNICAL SERVICES AT 1.800.834.4816 2222 CAMDEN COURT, OAK BROOK, ILLINOIS 60523