


BISTRO TABLE

196861192593
196861192579
196861192586

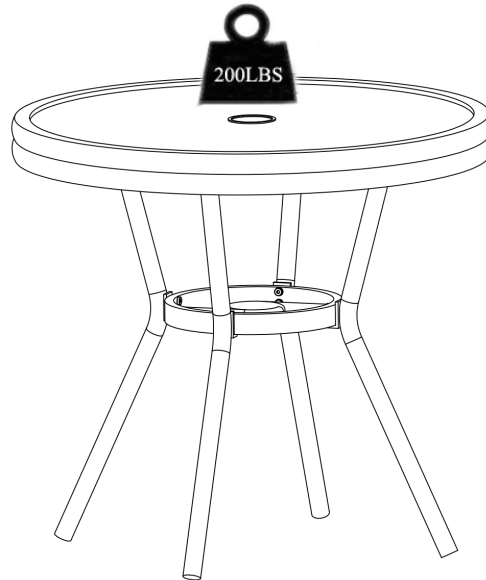

ASSEMBLY INSTRUCTIONS

Before You Begin:

Please identify all component parts and hardware pieces required before you begin. Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching during assembly.

Caution:

Tighten all components securely before use. Failure to do so may result in personal injury. DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.









Warning:

CHOKING HAZARD - Small Parts. Adult Assembly Required.

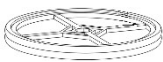DO NOT ALLOW CHILDREN TO CLIMB ON FURNITURE


Serious or fatal injuries can occur from furniture tipping over. You must install Tipping Restraint Hardware (where included) to help prevent the unit from tipping and causing accidental injury, instability, death or damage. The tipping restraint is intended only as a safety measure, it is not a substitute for proper adult supervision.

To help prevent furniture from tipping over it must be permanently attached to the wall. Anti-Tip Safety Wall Straps suitable for the unit weight and wall materials (if not included) should be purchased and installed.


PART CODE	A	B	C	D	E	F	G	H
								
	TABLE TOP	TABLE LEG	CONNECTOR	SCREW M6*25	SCREW M6*16	ALLEN WRENCH	WASHER	UMBRELLA HOLE COVER
QTY.(PC)	1	4	1	8	8	1	16	1

NOTE: Do not completely tighten the screws until Step 3.

STEP 1
 Lay the Table Top (A) face down on a smooth surface and attach one Table Leg (B) using M6*16 Screws (E) and Washers (G) then loosely tighten using the Allen Wrench (F).

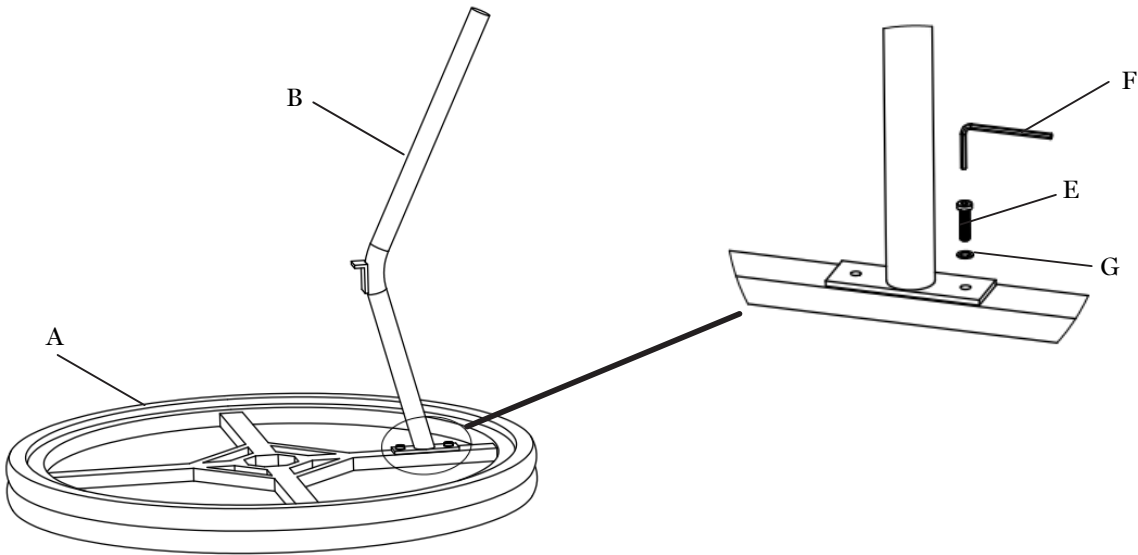


STEP 2
 Attach the Leg Connector (C) to the Table Leg (B) using M6*25 Screws (D) and Washers (G) then loosely tighten using the Allen Wrench (F).

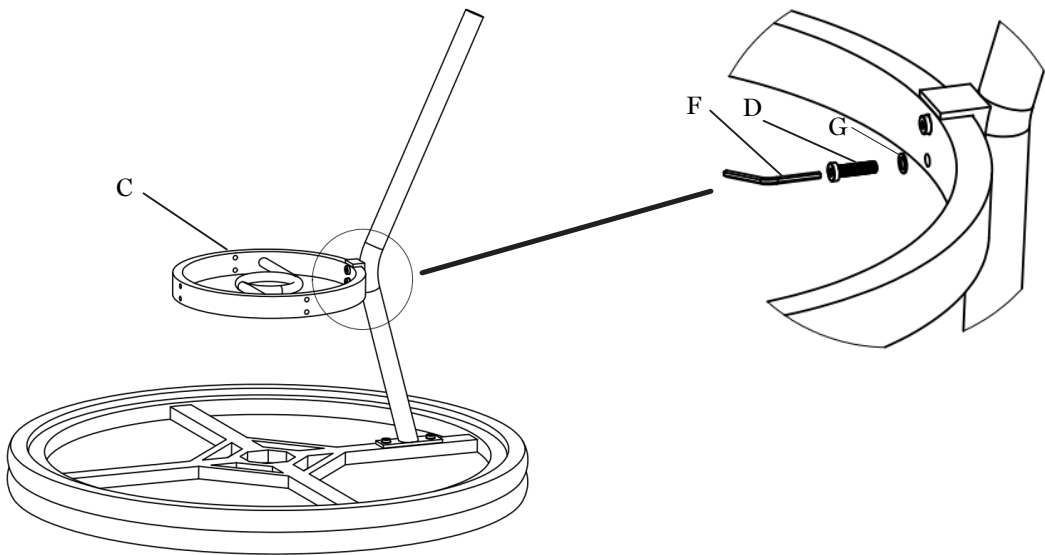


STEP 3

Attach all remaining table legs to the Table Top following Step 1 and Step 2, then securely tighten all screws.

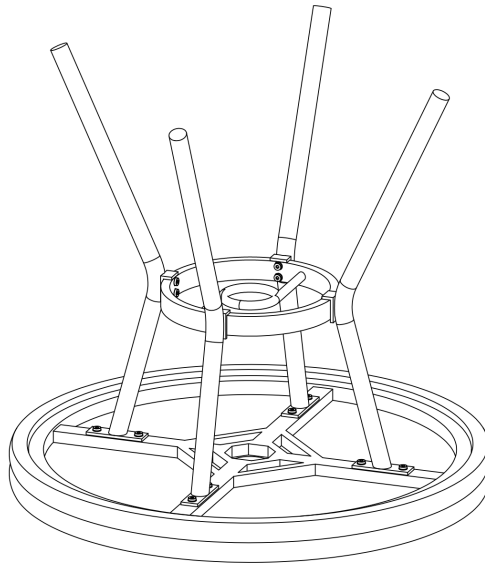

STEP 4

Attach all the table legs to the Leg Connector following Step 3, then securely tighten all the screws. Return table to the upright position.

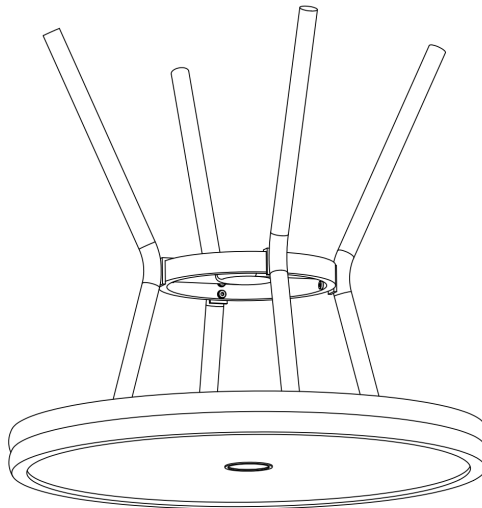


To Insert Umbrella (Not Included):

Remove the Center Cap (H) and insert your desired umbrella. Ensure the outer ring remains in the glass top while the umbrella is in use.

To Remove Umbrella:

Remove the umbrella from the glass top and insert the Center Cap.

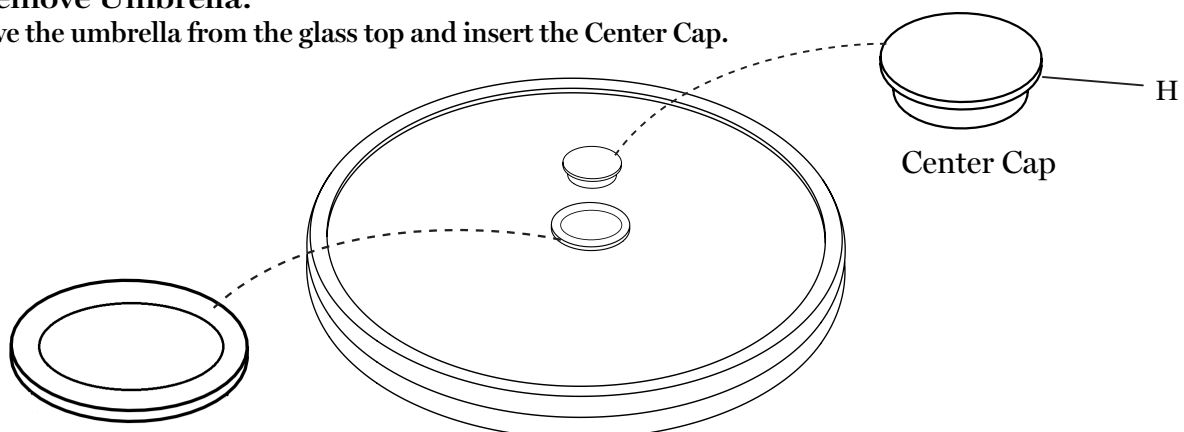


Outer Ring must remain in the glass top!

Quality and Safety Guidelines:

- Please retain all warnings and assembly instructions. Please review and retain all assembly instructions, safety and quality guidelines and product warnings for future reference.
- Please follow the static and dynamic weight capacity limits provided on this item. If you are unsure of the weight capacities for this product, email us at customerexperience@theubiquegroup.com or call 866-552-2810.
- Please use this item on a stable, level surface only. All table legs should contact the flooring surface when in use. Do not use this item if any instability is detected.
- For maintenance instructions and replacement parts, please email us at customerexperience@theubiquegroup.com or call 866-552-2810.
- This item is intended as a table only, do not climb, stand or sit on this item. Do not use as a TV stand.
- Please do not slide this item when moving it. Team lift the item when repositioning.
- Please visit www.theubiquegroup.com for our product warranty details or email us at customerexperience@theubiquegroup.com or call 866-552-2810.
- Store indoors away from moisture. For additional storage instructions, please email us at customerexperience@theubiquegroup.com or call 866-552-2810.
- Please inspect this product regularly to make sure there are no damaged or worn parts. Also inspect to make sure all hardware is tightened correctly and securely. For inspection instructions, please email us at customerexperience@theubiquegroup.com or call 866-552-2810.
- If any parts are damaged or worn, please stop using the product. Repair this product with manufacturer supplied parts only.

BISTRO TABLE

196861192593
196861192579
196861192586

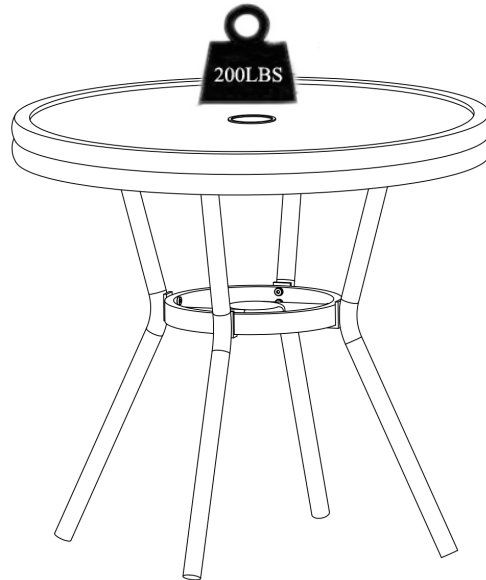

ASSEMBLY INSTRUCTIONS

Before You Begin:

Please identify all component parts and hardware pieces required before you begin. Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching during assembly.

Caution:

Tighten all components securely before use. Failure to do so may result in personal injury. DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.

 







Warning:

CHOKING HAZARD - Small Parts. Adult Assembly Required.

DO NOT ALLOW CHILDREN TO CLIMB ON FURNITURE


Serious or fatal injuries can occur from furniture tipping over. You must install Tipping Restraint Hardware (where included) to help prevent the unit from tipping and causing accidental injury, instability, death or damage. The tipping restraint is intended only as a safety measure, it is not a substitute for proper adult supervision.

To help prevent furniture from tipping over it must be permanently attached to the wall. Anti-Tip Safety Wall Straps suitable for the unit weight and wall materials (if not included) should be purchased and installed.


PART CODE	A	B	C	D	E	F	G	H
								
	TABLE TOP	TABLE LEG	CONNECTOR	SCREW M6*25	SCREW M6*16	ALLEN WRENCH	WASHER	UMBRELLA HOLE COVER
QTY.(PC)	1	4	1	8	8	1	16	1

NOTE: Do not completely tighten the screws until Step 3.

STEP 1
 Lay the Table Top (A) face down on a smooth surface and attach one Table Leg (B) using M6*16 Screws (E) and Washers (G) then loosely tighten using the Allen Wrench (F).

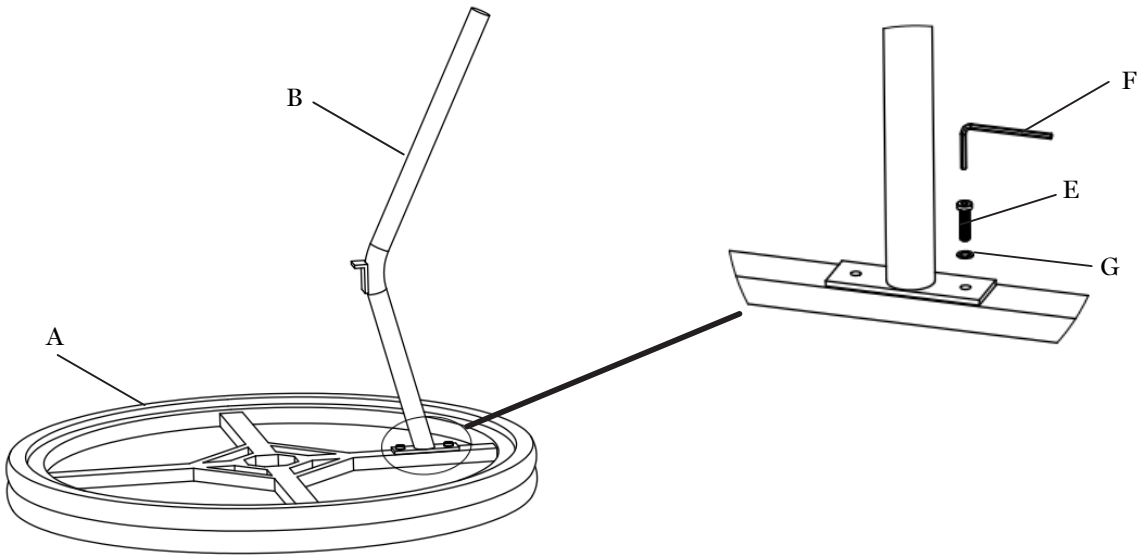


STEP 2
 Attach the Leg Connector (C) to the Table Leg (B) using M6*25 Screws (D) and Washers (G) then loosely tighten using the Allen Wrench (F).

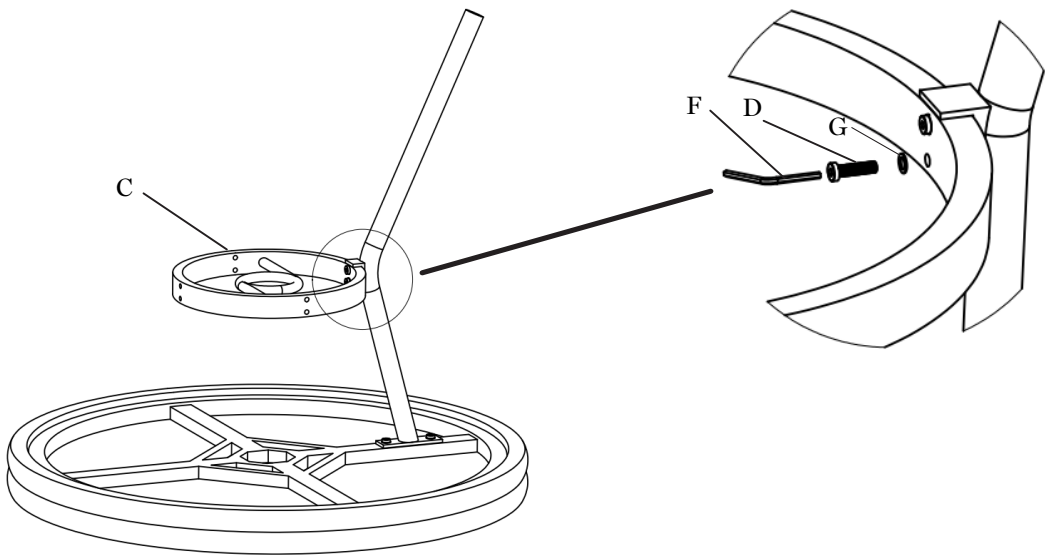


STEP 3

Attach all remaining table legs to the Table Top following Step 1 and Step 2, then securely tighten all screws.

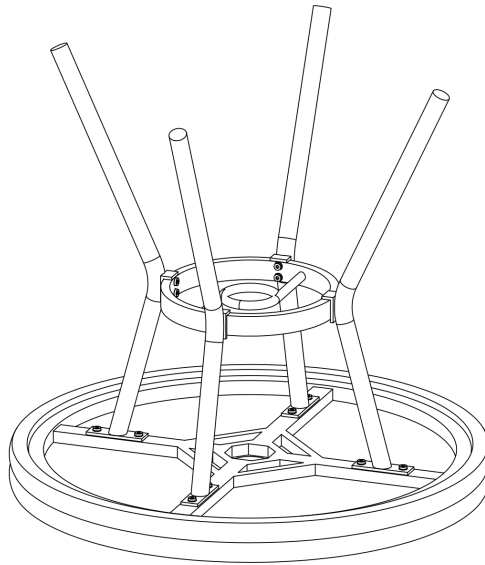

STEP 4

Attach all the table legs to the Leg Connector following Step 3, then securely tighten all the screws. Return table to the upright position.

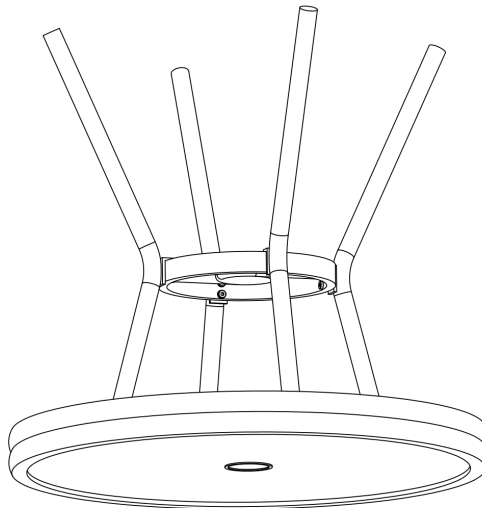


To Insert Umbrella (Not Included):

Remove the Center Cap (H) and insert your desired umbrella. Ensure the outer ring remains in the glass top while the umbrella is in use.

To Remove Umbrella:

Remove the umbrella from the glass top and insert the Center Cap.

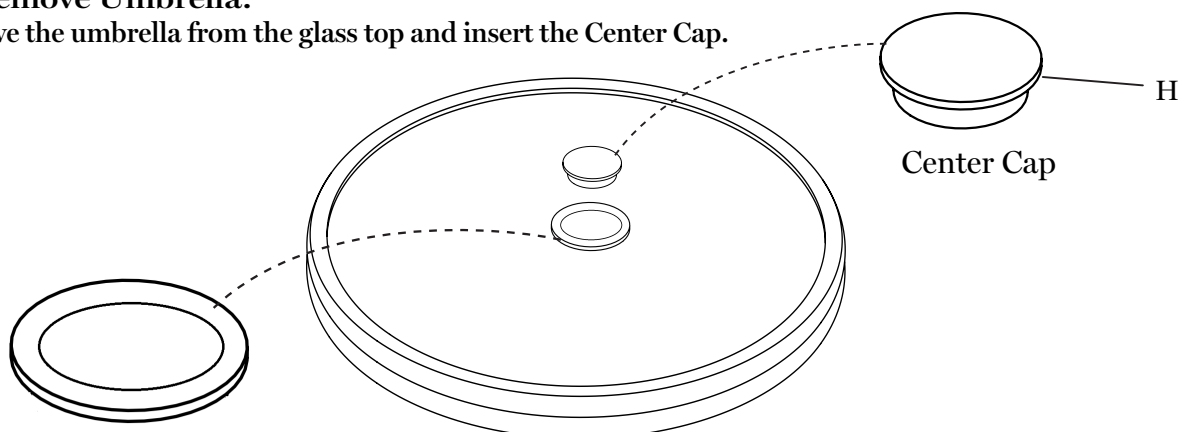

Outer Ring must remain in the glass top!

Quality and Safety Guidelines:

- Please retain all warnings and assembly instructions. Please review and retain all assembly instructions, safety and quality guidelines and product warnings for future reference.
- Please follow the static and dynamic weight capacity limits provided on this item. If you are unsure of the weight capacities for this product, email us at customerexperience@theubiquegroup.com or call 866-552-2810.
- Please use this item on a stable, level surface only. All table legs should contact the flooring surface when in use. Do not use this item if any instability is detected.
- For maintenance instructions and replacement parts, please email us at customerexperience@theubiquegroup.com or call 866-552-2810.
- This item is intended as a table only, do not climb, stand or sit on this item. Do not use as a TV stand.
- Please do not slide this item when moving it. Team lift the item when repositioning.
- Please visit www.theubiquegroup.com for our product warranty details or email us at customerexperience@theubiquegroup.com or call 866-552-2810.
- Store indoors away from moisture. For additional storage instructions, please email us at customerexperience@theubiquegroup.com or call 866-552- 2810.
- Please inspect this product regularly to make sure there are no damaged or worn parts. Also inspect to make sure all hardware is tightened correctly and securely. For inspection instructions, please email us at customerexperience@theubiquegroup.com or call 866-552-2810.
- If any parts are damaged or worn, please stop using the product. Repair this product with manufacturer supplied parts only.

BISTRO TABLE

196861192593
196861192579
196861192586



ASSEMBLY INSTRUCTIONS

Before You Begin:

Please identify all component parts and hardware pieces required before you begin. Carefully remove all of the components from the packaging and set aside for assembly. Assemble on a soft surface to prevent scratching during assembly.

Caution:

Tighten all components securely before use. Failure to do so may result in personal injury. DO NOT use any sharp objects to open plastic wrapped components as damage to product or components may result.









Warning:

CHOKING HAZARD - Small Parts. Adult Assembly Required.

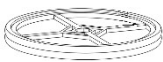DO NOT ALLOW CHILDREN TO CLIMB ON FURNITURE


Serious or fatal injuries can occur from furniture tipping over. You must install Tipping Restraint Hardware (where included) to help prevent the unit from tipping and causing accidental injury, instability, death or damage. The tipping restraint is intended only as a safety measure, it is not a substitute for proper adult supervision.

To help prevent furniture from tipping over it must be permanently attached to the wall. Anti-Tip Safety Wall Straps suitable for the unit weight and wall materials (if not included) should be purchased and installed.


PART CODE	A	B	C	D	E	F	G	H
								
	TABLE TOP	TABLE LEG	CONNECTOR	SCREW M6*25	SCREW M6*16	ALLEN WRENCH	WASHER	UMBRELLA HOLE COVER
QTY.(PC)	1	4	1	8	8	1	16	1

NOTE: Do not completely tighten the screws until Step 3.

STEP 1
 Lay the Table Top (A) face down on a smooth surface and attach one Table Leg (B) using M6*16 Screws (E) and Washers (G) then loosely tighten using the Allen Wrench (F).

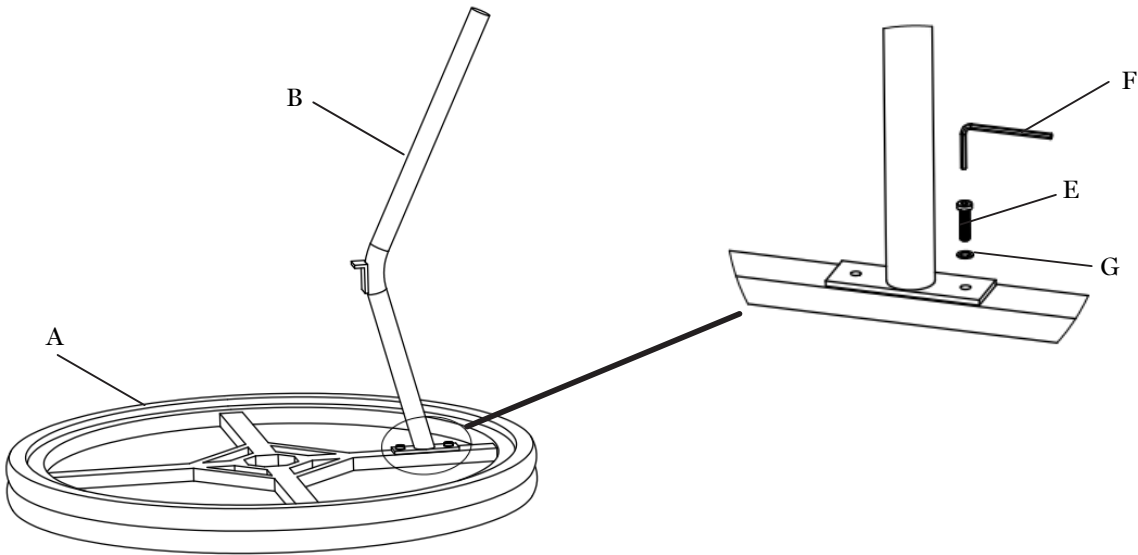


STEP 2
 Attach the Leg Connector (C) to the Table Leg (B) using M6*25 Screws (D) and Washers (G) then loosely tighten using the Allen Wrench (F).

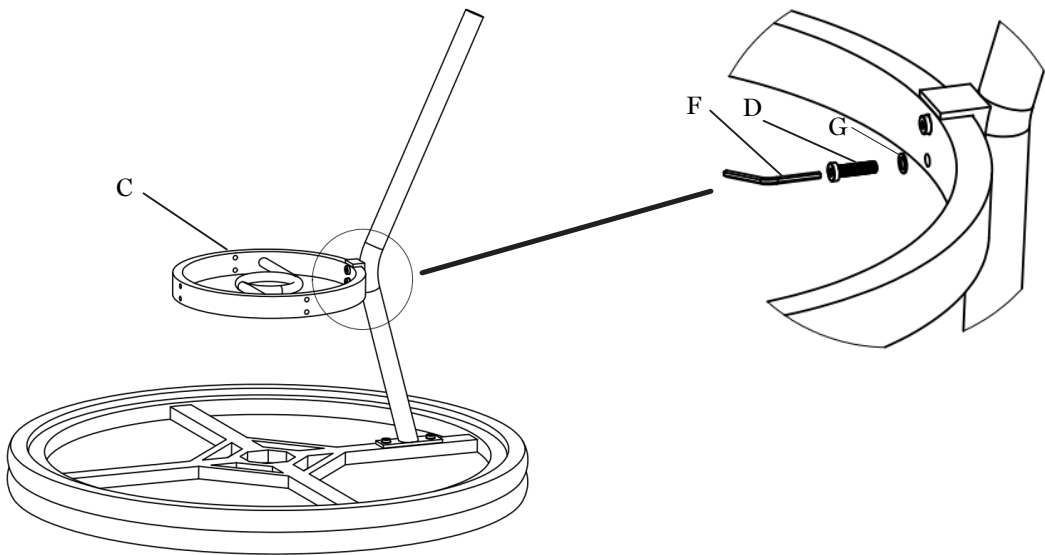


STEP 3

Attach all remaining table legs to the Table Top following Step 1 and Step 2, then securely tighten all screws.

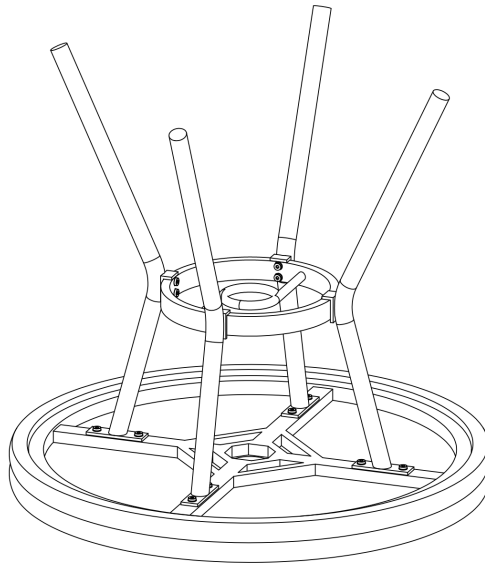

STEP 4

Attach all the table legs to the Leg Connector following Step 3, then securely tighten all the screws. Return table to the upright position.

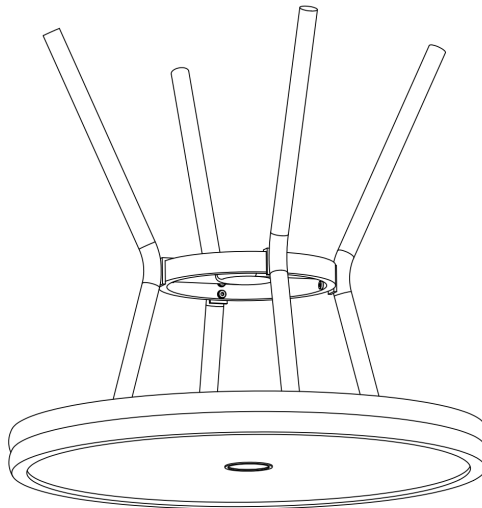


To Insert Umbrella (Not Included):

Remove the Center Cap (H) and insert your desired umbrella. Ensure the outer ring remains in the glass top while the umbrella is in use.

To Remove Umbrella:

Remove the umbrella from the glass top and insert the Center Cap.

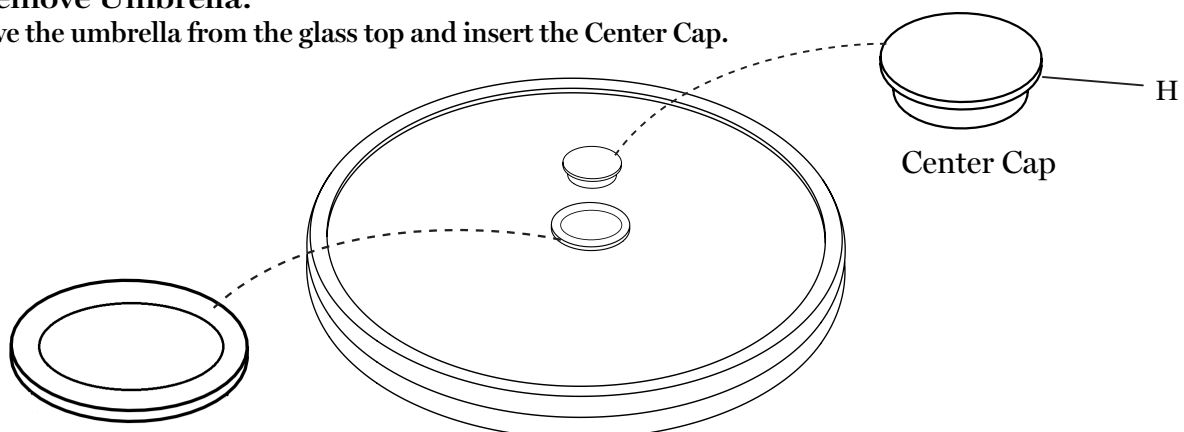

Outer Ring must remain in the glass top!

Quality and Safety Guidelines:

- Please retain all warnings and assembly instructions. Please review and retain all assembly instructions, safety and quality guidelines and product warnings for future reference.
- Please follow the static and dynamic weight capacity limits provided on this item. If you are unsure of the weight capacities for this product, email us at customerexperience@theubiquegroup.com or call 866-552-2810.
- Please use this item on a stable, level surface only. All table legs should contact the flooring surface when in use. Do not use this item if any instability is detected.
- For maintenance instructions and replacement parts, please email us at customerexperience@theubiquegroup.com or call 866-552-2810.
- This item is intended as a table only, do not climb, stand or sit on this item. Do not use as a TV stand.
- Please do not slide this item when moving it. Team lift the item when repositioning.
- Please visit www.theubiquegroup.com for our product warranty details or email us at customerexperience@theubiquegroup.com or call 866-552-2810.
- Store indoors away from moisture. For additional storage instructions, please email us at customerexperience@theubiquegroup.com or call 866-552-2810.
- Please inspect this product regularly to make sure there are no damaged or worn parts. Also inspect to make sure all hardware is tightened correctly and securely. For inspection instructions, please email us at customerexperience@theubiquegroup.com or call 866-552-2810.
- If any parts are damaged or worn, please stop using the product. Repair this product with manufacturer supplied parts only.