


**WIRELESS ULTRARANGE™
BATTERY OPERATED
DOORBELL KIT**

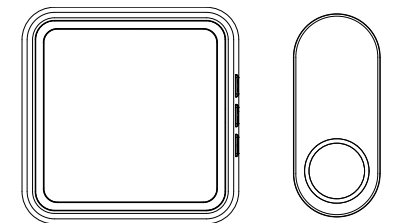

The illustrations may vary from the actual product.
Before returning to the store, please contact our support team
for assistance at 1-888-543-1388.


SAFETY INFORMATION

⚠ WARNING: To prevent possible **SERIOUS INJURY** or **DEATH** never allow small children near batteries. If a battery is swallowed, seek immediate medical attention.

⚠ WARNING: Do not dispose of batteries in fire. Batteries may explode or leak.


PACKAGE CONTENTS AND SPECIFICATIONS

Note: Illustrations may vary from actual unit.

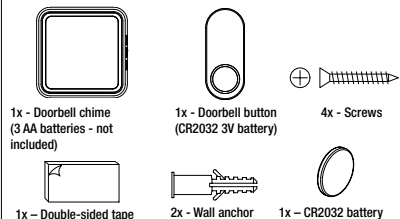


1. INSTALLING THE DOORBELL CHIME BATTERIES

- Push the battery cover tab toward the battery cover (1) and pull to remove.
- Install 3 "AA" alkaline batteries (not included) into the doorbell chime (A).
- Make sure batteries are installed according to the diagram inside the doorbell chime.
- Replace the battery cover onto the doorbell chime (A).

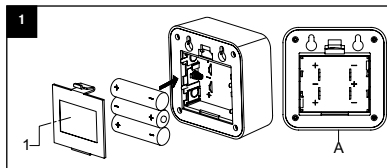

2. INSTALLING THE BATTERY TO DOORBELL BUTTON


- Rotate the battery cover and remove it (B).
- Insert the battery according to the direction shown in the figure, with the positive pole facing outward and the negative pole facing inward.

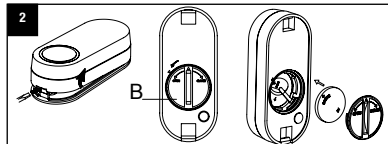

3. TESTING THE DOORBELL BUTTON AND DOORBELL CHIME

- Temporarily position the doorbell button and doorbell chime where they will be mounted.
- Press the doorbell button to verify the doorbell chime and doorbell button work properly.
- If the doorbell chime does not sound, move the doorbell chime closer to the doorbell button and test again.


NOTE: Do not permanently mount the doorbell button until the doorbell button and doorbell chime are working properly.

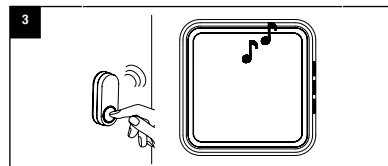

NOTE: The doorbell button and doorbell chime come synced from the factory. The range of the wireless doorbell chime can vary with location, temperature, and battery condition. Test to ensure the doorbell chime and doorbell button are working properly.


4. MOUNTING THE DOORBELL BUTTON

- Use either screws or double-sided tape to mount the doorbell button.
- To mount with screws, remove the back of the doorbell button by pushing in the tab on the bottom with a small screwdriver. Place the doorbell button back on the door jamb and mark the two screw holes. Attach with screws and snap on the front of the doorbell button.
- When attaching the doorbell button with double-sided tape, remove the paper from both sides of the double-sided tape and apply to a clean surface.

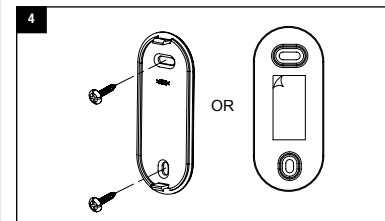

5. MOUNTING THE DOORBELL CHIME

- Use two of the screws to mount the doorbell chime.
- Determine mounting location.
- Drill two 7/32 in. (5.5 mm) pilot holes and insert two wall anchors.
- Insert the screws into the wall anchors leaving about 1/8 in. (3.2 mm) of the screw threads exposed.
- Hang the doorbell chime on the screws using the keyholes on the back of the doorbell chime.

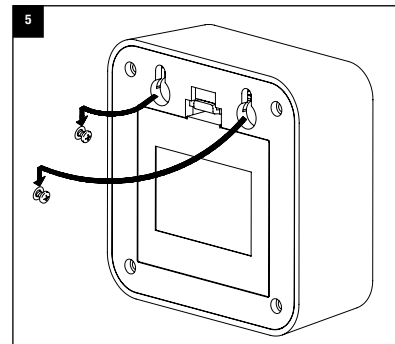


OPERATION

1. ADJUSTING THE DOORBELL CHIME VOLUME

The doorbell chime has an adjustable volume control located on the side. Press and release the volume adjust button to adjust the volume one step at a time.

2. MUTING THE DOORBELL CHIME

- Press and release the "Tune" button and "Volume" button at the same time, the light will flash 4 times with no sound, indicating that the doorbell chime is muted. When the doorbell chime is muted, press the synced doorbell button, the light of the doorbell chime will flash for 4 times.
- When the doorbell is muted, press and release the "Volume" button or "Tune" button to unmute the doorbell chime. The tune and volume will be restored to the status before muting.

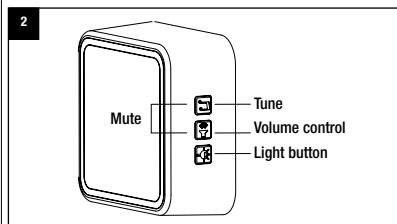

3. SELECTING A TUNE

The doorbell chime allows you to customize your doorbell chime tunes. The doorbell chime has ten pre-loaded selectable tunes.

- Press and release the "Tune" button until the desired tune is heard.
- While the desired tune is playing, press the doorbell button to lock in the selected tune.

NOTE: Each doorbell button can be assigned its own unique tune.


NOTE: To listen to the selected tune, press and release the "Tune" button.

NOTE: UltraRange™ doorbell chime is designed to work with up to 10 wireless UltraRange™ doorbell buttons (sold separately).

NOTE: HeathZenith® UltraRange™ products are only compatible with other HeathZenith® UltraRange™ products.


SELECTABLE TUNES

- Auld Lang Syne
- Beethoven's 5th
- Birthday Celebration
- Ding-Dong
- Relax Triplet
- Shorty
- We wish you a merry Christmas
- Short Westminster
- Westminster
- Huntington

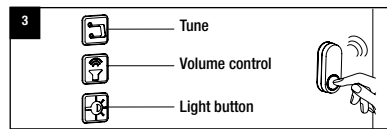

4. SELECTING THE DOORBELL CHIME LIGHT

- The doorbell chime has 8 selectable light colors.
- Press and release the "Light" button to select the desired color.
- When the doorbell button is pressed, the doorbell chime will ring and the light will flash 4 times.

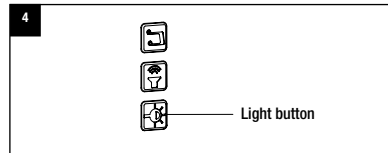

5. LOW BATTERY NOTIFICATION

- After pressing the doorbell button, the doorbell chime prompts "Ding-Dong" 3 times and the indicator light of the doorbell chime will remain on for 10 seconds, this indicates that the doorbell button battery is low, you will need to replace with new batteries.
- After pressing the doorbell button, the doorbell chime prompts "Ding-Dong" 5 times and the indicator light of the doorbell chime will flash quickly for 10 seconds, this indicates that the doorbell chime battery is low, you will need to replace with new batteries.

PROBLEM #2

- The batteries seem okay, but the doorbell chime does not work after installation.

POSSIBLE CAUSE:

- A. Doorbell chime or doorbell button is mounted on metal or near metal studs.
- B. Doorbell chime is mounted near a concrete floor or wall.
- C. Doorbell chime and doorbell button are installed too far apart.

SOLUTION:

- A. Metal reduces transmission range. Use 1/4 in. to 1/2 in. (6 to 13 mm) wood shims to move the doorbell chime or doorbell button away from the metal surface.
- B. Concrete may reduce range. Move the doorbell chime away from the concrete surface.
- C. Locate the doorbell chime closer to the doorbell button.

PROBLEM #3

- Doorbell chime and doorbell button don't work properly.

POSSIBLE CAUSE:

- A. The doorbell chime and doorbell button are not synced from factory properly or the doorbell button is synced with other doorbell chime by chance.

SOLUTION:

- A. Restore the doorbell chime and doorbell button to factory settings. Follow the below instructions:
 - Press and hold the "Tune" button on the doorbell chime until the doorbell chime prompts a "beep-beep-beep."
 - To re-sync the doorbell button and doorbell chime, press and hold the "Tune" button on the doorbell chime until the doorbell chime prompts a "beep-beep."
 - Press the doorbell button within 10 seconds. The doorbell chime will prompt a "beep-beep" tone to indicate the doorbell button is synced.
 - Press the doorbell button to ensure operation.

PROBLEM #4

- The new doorbell button and doorbell chime do not work with existing doorbell buttons and doorbell chimes.

POSSIBLE CAUSE:

- A. The new doorbell button and doorbell chime are not using the same codes as existing doorbell buttons and doorbell chimes.

SOLUTION:

- A. Make sure to use products in UltraRange™ family only to work with this new UltraRange™ wireless battery operated doorbell kit. Please call 1-888-543-1388 for assistance.

1-YEAR LIMITED WARRANTY

- This product is guaranteed to be free of factory defective parts and workmanship for a period of 1 year from date of purchase. Purchase receipt is required for all warranty claims.
- This warranty does not include expendable items (such as light bulbs, batteries, etc.), repair service, adjustment and calibration due to misuse, abuse or negligence. Unauthorized service or modification of the product or of any furnished component will void this warranty in its entirety. This warranty does not include reimbursement for inconvenience, installation, setup time, loss of use, unauthorized service, or return shipping charges. This warranty is not extended to other equipment and components that a customer uses in conjunction with this product.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. *NOTE:* This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: 1. This device may not cause interference. 2. This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3(B)/NMB-3(B)

FCC Responsible Party:
Globe Electric
2264 East 6th Street
San Bernardino, CA 92410
www.globe-electric.com

GARANTIE LIMITÉE D'UN AN

- Ce produit est garanti exempt de pièces et de main-d'œuvre défectueuses en usine pendant une période de 1 an à compter de la date d'achat. Le reçu d'achat est requis pour toute demande de garantie.
- Cette garantie ne couvre pas les articles consommables (tels que les ampoules, les piles, etc.), les réparations, les réglages et l'étalonnage dus à une mauvaise utilisation, un abus ou une négligence. Tout service non autorisé ou toute modification du produit ou de tout composant fourni annulera cette garantie dans son intégralité. Cette garantie ne comprend pas le remboursement des inconvénients, de l'installation, du temps de réglage, de la perte d'utilisation, du service non autorisé ou des frais de retour. Cette garantie ne s'étend pas aux autres équipements et composants que le client utilise en conjonction avec ce produit.

DÉCLARATION DE LA FCC

Cet appareil est conforme aux exigences de la Partie 15 des Règles du FCC. Son utilisation est assujettie aux deux conditions suivantes : (1) cet appareil ne doit pas causer d'interférence nocive; (2) cet appareil doit accepter les interférences, y compris celles qui peuvent causer un fonctionnement non désiré. ATTENTION : Tout changement ou toute modification n'ayant pas été expressément approuvé par le fabricant pourrait annuler l'autorisation accordée à l'utilisateur de faire fonctionner l'équipement. *REMARQUE :* Cet appareil a été testé et déclaré conforme aux limites pour appareils numériques de classe B, selon la section 15 des règlements de la FCC. Ces limites sont destinées à assurer une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet appareil produit, utilise et peut émettre de l'énergie radio électrique et, s'il n'est pas installé et utilisé conformément aux présentes instructions, peut causer des interférences nuisibles aux communications radio. Il n'existe toutefois aucune garantie que de telles interférences ne se produiront pas dans une installation particulière. Si cet appareil cause des interférences nuisibles à la réception des signaux de radio ou de télévision, ce qui peut être déterminé en allumant et en éteignant l'appareil, on encourage l'utilisateur d'essayer de corriger ces interférences par l'un des moyens suivants : • Réorienter ou repositionner l'antenne de réception. • Augmenter la distance séparant l'appareil du récepteur. • Brancher l'appareil sur un circuit électrique différent de celui où le récepteur est branché. • Consulter le détaillant ou un technicien spécialisé en radio/télévision.

Tout émetteur / récepteur de cet appareil est conforme aux CNR-Gen d'Innovation, Science et Développement économique Canada applicables dans les appareils radio exempts de licence. L'exploitation est autorisée dans les deux conditions suivantes : 1. L'appareil ne doit pas produire de brouillage; 2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

CAN ICES-3(B)/NMB-3(B)

FCC Partie responsable :
Globe Electric
2264 East 6th Street
San Bernardino, CA 92410
www.globe-electric.com

1-AÑO DE GARANTÍA LIMITADA

- Se garantiza que este producto no tiene partes defectuosas de fábrica o de mano de obra por un período de 1 año desde la fecha de compra. Se necesita el recibo de compra para todos los reclamos de garantía.
- Esta garantía no incluye los artículos reemplazables (como bombillas, pilas etc.), servicio de reparación, ajuste y calibración debido al mal uso, abuso o negligencia. Los servicios no autorizados o las modificaciones hechas al producto o a cualquier componente invalidarán esta garantía en su totalidad. Esta garantía no incluye reembolso por inconveniencia, instalación, tiempo de instalación, pérdida de uso, servicio no autorizado, o gastos de envío. Esta garantía no se extiende a otros equipos o componentes que el consumidor usa junto con este producto.

DECLARACIÓN FCC

Este aparato cumple con la Parte 15 de las Reglas de la FCC. La operación está sujeta a las dos siguientes condiciones: (1) este aparato no puede causar interferencias perjudiciales y (2) este aparato debe aceptar cualquier interferencia recibida, incluyendo una interferencia que pueda causar un funcionamiento indeseado. ADVERTENCIA: Los cambios o modificaciones en esta unidad que no estén expresamente aprobados por la parte responsable del cumplimiento pueden anular la autoridad del usuario para operar el equipo. *NOTA:* Este equipo ha sido probado y se encontró que cumple con los límites para un dispositivo digital de Clase B, de acuerdo con la parte 15 de las Normas de la FCC. Estos límites están diseñados para proporcionar una protección razonable contra interferencias dañinas en una instalación residencial. Este equipo genera, usa y puede irradiar energía de radiofrecuencia y, si no se lo instala y usa de acuerdo con las instrucciones, puede causar interferencia dañina a las comunicaciones de radio. Sin embargo, no hay garantía de que la interferencia no ocurra en una instalación en particular. Si este equipo causa interferencia dañina a la recepción de radio o televisión, lo que se puede determinar apagando y encendiendo el equipo, se recomienda que el usuario intente corregir la interferencia mediante una o más de las siguientes medidas: • Reorientar o reubique la antena receptora. • Aumente la separación entre el equipo y el receptor. • Conecte el equipo a un tomacorriente en un circuito diferente al que está conectado el receptor. • Para recibir ayuda consulte con el distribuidor o con un técnico experto en radio / TV.

Este dispositivo contiene transmisores / receptores exentos de licencia que cumplen con los RSS exentos de licencia de Canadá de Innovación, Ciencia y Desarrollo Económico. Su funcionamiento está sujeto a las dos siguientes condiciones: 1. Este dispositivo no puede causar interferencia. 2. Este dispositivo debe aceptar cualquier interferencia, incluyendo la interferencia que pueda causar un funcionamiento indeseado del dispositivo.

CAN ICES-3(B)/NMB-3(B)

Parte responsable de la FCC:
Globe Electric
2264 East 6th Street
San Bernardino, CA 92410
www.globe-electric.com