

Assembly Instructions: 0818-LP

IMPORTANT:

- ALL INSTALLATION WORK SHOULD BE DONE BY ACCREDITED PROFESSIONAL.
- SHUT OFF POWER SUPPLY AT FUSE OR CIRCUIT BREAKER!
- USE ONLY THE SPECIFIED BULBS. DO NOT EXCEED THE MAXIMUM WATTAGE!

For Customer Service, please contact the place of purchase.

PREPARING FOR INSTALLATION


Remove all of the contents from the carton. See the important notes above. Shut off the power at the circuit breaker and completely remove the old fixture from the ceiling, including the old mounting strap.

1. From the parts bag remove the mounting strap assembly. Mounting strap (B) contains several threaded holes. Hold mounting plate (B) up to the ceiling and use a pencil to mark the wall through the circular holes on the sides of the mounting plate center.

For drywall installation, use a drill bit to create two holes on your pencil marks and insert plastic screw holders/anchors (P) into the holes made until the plastic screw holders/anchors are flush with the ceiling. Align mounting plate (B) with the plastic screw holders/anchors (P). Using a drill or screwdriver, insert mounting screws (O) into the plastic screw holders/anchors (P). To install directly into wood beams, use screws (O) to secure mounting strap (B) to the ceiling.

Secure mounting strap (B) to the junction box with mounting screws (C) and a screwdriver. Tighten the screws securely.

2. Hold canopy (F) up to mounting strap (B). Line up the holes on the sides of canopy (F) with the side holes in mounting strap (B) and insert mounting screws (A) into mounting strap (B) through the canopy (F). Tighten the screws securely.

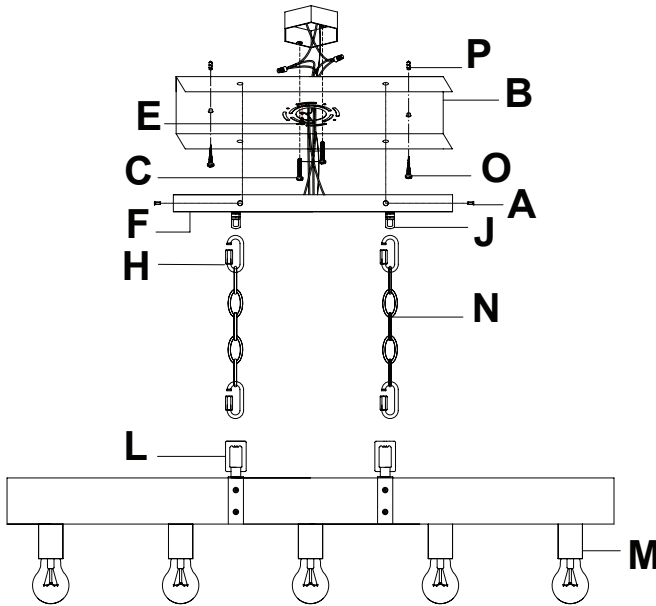

ASSEMBLING THE FIXTURE

3. Measure to determine the correct length of chain needed for proper hanging height. If necessary, use a pair of pliers to open and remove any excess chain. Attach chain connectors (H) to each end of the chains (N). Attach one end of the two chains with chain connector to top loops (L). Feed the fixture wires up through top loop (L) and up the chain (every three links or so), pulling the wires until taut. Use the remaining free chain ends with chain connector to attach the chains to canopy loops (J). Close the chain connector on both ends of both chains to secure.

CONNECTING THE WIRES

4. Have an assistant support the weight of the fixture while completing the wiring. Cut away excess wire. Attach the fixture's wires to the house wires which were pulled earlier from the junction box through the mounting strap (B). Connect black to black (transparent wire with black inner thread or smooth); white to white (transparent wire with white inner thread or ribbed); ground to ground (transparent wire with green inner thread, green, or copper). Twist the ends of the wire pairs together, and then twist on a wire connector. Make sure all twists are in the same direction. If there is no ground wire coming from the junction box, locate ground screw (E) on the mounting strap and wrap the fixture's ground wire around the green ground screw (E). Use a screwdriver to secure ground screw (E) onto the mounting bracket. Tuck all wires neatly into the junction box.

How to Identify the Fixture's Wires			
Hot	Neutral	Ground	
Smooth	Ribbed	Bare Metal, Green, or Green Inner Thread	
Black	White	Black Inner Thread	
Black Inner Thread	White Inner Thread		

FINISHING THE INSTALLATION

5. Install light bulbs (not included) into sockets (M) in accordance with the fixture's specifications. Do not exceed maximum recommended wattage.

Your installation is now complete. Turn on the power and test the fixture.

CLEANING TIPS

Treat the fixture gently! Regular cleaning will reduce the need for deep cleaning. For regular cleaning, turn off the light and wipe down the fixture with a clean lint-free cotton or microfiber cloth. Never spray cleaner directly onto the fixture.

