

Assembly Instructions: 2088-M

IMPORTANT:

- ALL INSTALLATION WORK SHOULD BE DONE BY ACCREDITED PROFESSIONAL.
- SHUT OFF POWER SUPPLY AT FUSE OR CIRCUIT BREAKER!
- USE ONLY THE SPECIFIED BULBS. DO NOT EXCEED THE MAXIMUM WATTAGE!

For Customer Service, contact the place of purchase.

PREPARING FOR INSTALLATION

Remove all of the contents from the carton. See the important notes above. Remove the old fixture from the ceiling, including the old mounting strap.

1. Take the mounting strap assembly from the parts bag. Mounting strap (A) contains multiple threaded holes. Mounting strap (A) should have mounting screws (B) attached. If mounting screws (B) are not in place, hold the canopy up to the mounting strap and insert mounting screws (B) through the mounting strap into the exposed holes of the canopy until the screw threads protrude from the holes in the canopy. Remove the canopy and then secure mounting screws (B) in place on the mounting strap using hex nuts (C).

2. Attach mounting strap (A) to the junction box using mounting screws (D) and a screwdriver. Tighten securely using a screwdriver.

3. Pull house wires from the center of the mounting strap (A).

ASSEMBLING THE FIXTURE

4. Measure to determine the correct number of rods needed for proper hanging height. If necessary, slide off rods to shorten the fixture to a desired height. If more rods are needed to lengthen the fixture, please contact the place of purchase to order more.

5. Pull the fixture's wires from the fixture body through post (J) and feed the fixture wires through the shortest rod provided rod (K). Pull wires until taut. Thread rod (K) onto post (J) and ensure that the wire passing through both the post and rod is not kinked.

6. Feed the fixture's wires through the remaining rods (L) individually. Once you have fed the fixture wires through all of the desired rods. Thread the desired number of rods (L) together. Pass the wires through the swivel post (H) and canopy (F). Pull the wires until taut. Screw the connected rods (L) onto the swivel post (H) which is attached to the canopy (F). Trim the remaining fixture wires to the desired length plus 8 to 10 inches for installation.

CONNECTING THE WIRES

 
7. Have an assistant support the weight of the fixture while you complete the wiring. Refer to the wiring diagram and attach the fixture's wires to the house wires pulled from the junction box earlier. Connect Hot to smooth/black/transparent wire with black inner thread/transparent with written text wire, Neutral to ribbed/white/transparent wire with white inner thread, and Ground to green/copper/transparent wire with green inner thread. Twist the ends of the wire pairs together, and then twist on a wire connector. Make sure all twists are in the same direction. If there is no house ground wire coming from the junction box, locate ground screw (E) on the mounting bracket/mounting strap and wrap the fixture's ground wire around the ground screw. Use a screwdriver to tighten the top of ground screw (E) onto the wires and into the mounting bracket/mounting strap. Tuck the wires into the junction box.

FINISHING THE INSTALLATION

8. Push canopy (F) up to the ceiling over the mounting strap (A) until mounting screws (B) protrude from the holes in the canopy. Thread deco nuts (G) onto the exposed threads of mounting screws (B). Tighten deco nuts (G) so that the nuts are securing the canopy (F) to the mounting strap (A) and that the canopy is snug against the ceiling.


Install a light bulb (not included) in accordance with the fixture's specifications. Do not exceed the maximum recommended wattage.

Your installation is now complete. Turn on the power and test the fixture.

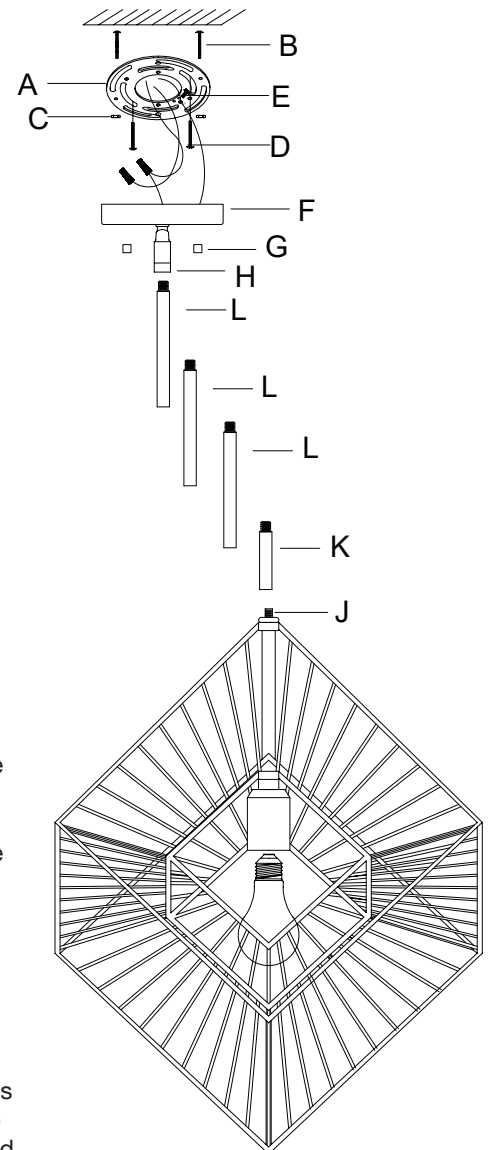

How to Identify the Fixture's Wires

Hot	Neutral	Ground
Smooth	Ribbed	Bare Metal, Green, or Green Inner Thread
Black	White	
Black Inner Thread	White Inner Thread	

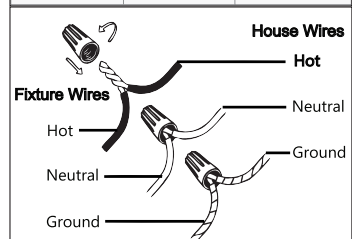 

CLEANING TIPS

Treat the fixture gently! Regular cleaning will reduce the need for deep cleaning. For regular cleaning, turn off the light and wipe down the fixture with a clean lint-free cotton or microfiber cloth. Never spray cleaner directly onto the fixture.