

Get to know your remote.



Fan On/Off. Turns the fan on or off



Light On/Off. Turns the light on or off



Up. Increases fan speed or light brightness



Down. Decreases fan speed or light brightness



Timer. Each press extends timer one hour (up to eight)



Clear. Clears active fan timer



Whoosh. Varies fan speed to simulate a natural breeze



Sleep. Automatically adjusts fan speed while you sleep

Do not expose the remote to water.

Remote not working? Try these steps.

Make sure you have removed the plastic tab from the battery tray and the fan is receiving power. Try the remote again.

Want to reverse your fan? Read this first.

Haiku Home does not recommend reversing your fan. Instead, run the fan at a slow forward speed to push warm air down and keep your space evenly comfortable from floor to ceiling.

Still want to reverse your fan? Bring the fan to a complete stop. Press Whoosh, Whoosh, Whoosh, Speed Up.

