
Halsey Taylor Owners Manual MODEL 10000 FOUNTAIN

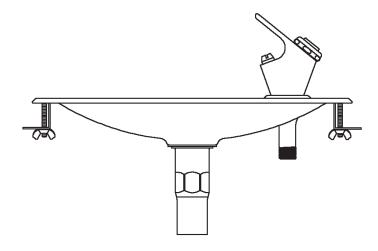

INSTALLATION


- I. This fountain is to be mounted on a smooth, flat, finished surface, with adequate support structure.
- 2. Refer to rough-in for plumbing.
- 3. Locate and install trap. (Trap not included).
- 4. Install shut-off valve on building water supply. (Shut-off valve not furnished).
- 5. Secure fountain using 1/4" screws and lugs provided.
- CAUTION: This fountain is rated for inlet water pressure of 20–90 PSI. Should the inlet water supply exceed 90 PSI, a pressure reducing regulator should be used.
- 6. Connect fountain to building supply line by running a water line between the shut-off valve and fountain.
- 7. Turn "ON" water supply and check all connections for leaks.
- 8. Adjust bubbler stream height. (See instructions below).

TROUBLE SHOOTING & MAINTENANCE

PROJECTOR: If mineral deposts build up in the orifice, they can be removed by using a round file or small diameter wire.


CAUTION: Care must be taken not to damage orifice assembly.


STREAM REGULATOR: Stream height is factory set at 45-50 PSI. If supply pressure varies greatly from this, remove the retaining nut and button (See Fig. 2) from bubbler assembly and adjust the screw on the regulator. Clockwise adjustment will raise stream height and counterclockwise will lower the stream height. A stream height of I (25mm) is recommended (See Fig. I).

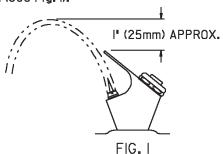

10000_FTN

ROUGH-IN SPECIFICATIONS

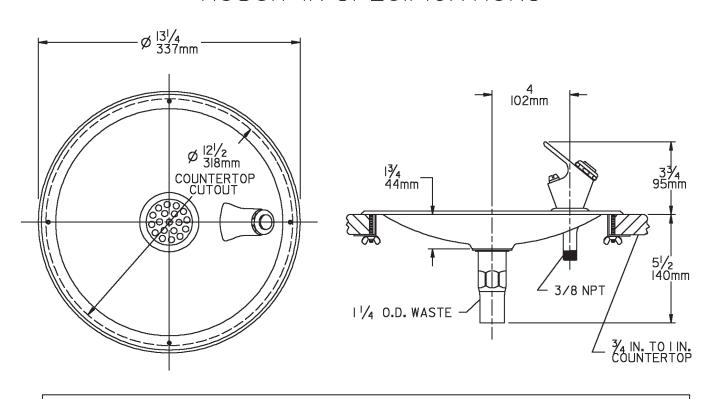

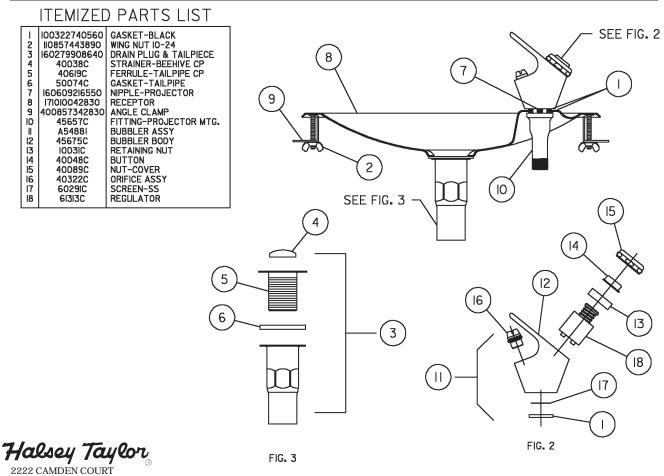

2222 CAMDEN COURT OAK BROOK, IL 60523 630.574.3500

REPAIR SERVICE INFORMATION TOLL FREE NUMBER 1.800.260.6640

FOR PARTS CONTACT YOUR LOCAL DISTRIBUTOR OR VISIT OUR WEBSITE WWW.HALSEYTAYLOR.COM