

## Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Paper Trash Can Body		1X	C2	Lower Fitting for Top Cover		1X
B	Paper Trash Can Bottom Cover		1X	C3	Upper Fitting for Top Cover		1X
C1	Paper Trash Can Top Cover		1X				

happiness

Model# : HPM1300/HPM1301/HPM1302  
Product Dimensions: 16"L X 16"W X31.5"H



## PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 10 minutes.

If there are any questions relating to defects, missing parts, assembly issues, replacements, or device connectivity issues, please send a detailed email to [hello@happiness.com](mailto:hello@happiness.com)

<p><b>C1</b></p>	<p><b>C2</b></p>	<p><b>C3</b></p>
<p><b>Step 1</b> Fold 90 degrees across the crease of the cardboard. Stick the ends of the Paper Trash Can Top Cover (C1) together through the card hole.</p>	<p><b>Step 2</b> Fold 90 degrees across the crease of the cardboard. Put the Lower Fitting for Top Cover (C2) on the Paper Trash Can Top Cover (C1) together through the card hole.</p>	<p><b>Step 3</b> Fold 90 degrees across the crease of the cardboard. Put the Upper Fitting for Top Cover (C3) on the Paper Trash Can Top Cover (C1) together through the card hole.</p>
<p><b>A</b></p>	<p><b>B</b></p>	<p><b>C(C1,C2,C3)</b></p>
<p><b>Step 4</b> Fold 90 degrees across the crease of the cardboard. Stick the ends of the Paper Trash Can Body (A) together through the card hole.</p>	<p><b>Step 5</b> Fold 90 degrees across the crease of the cardboard. Put the Paper Trash Can Bottom Cover (B) on the Paper Trash Can Body (A) together through the card hole.</p>	<p><b>Step 6</b> Fold 90 degrees across the crease of the cardboard. Put the Paper Trash Can Top Cover (C1,C2,C3) on the Paper Trash Can Body (A) together through the card hole.</p>

ENJOY YOUR PAPER TRASH CAN