
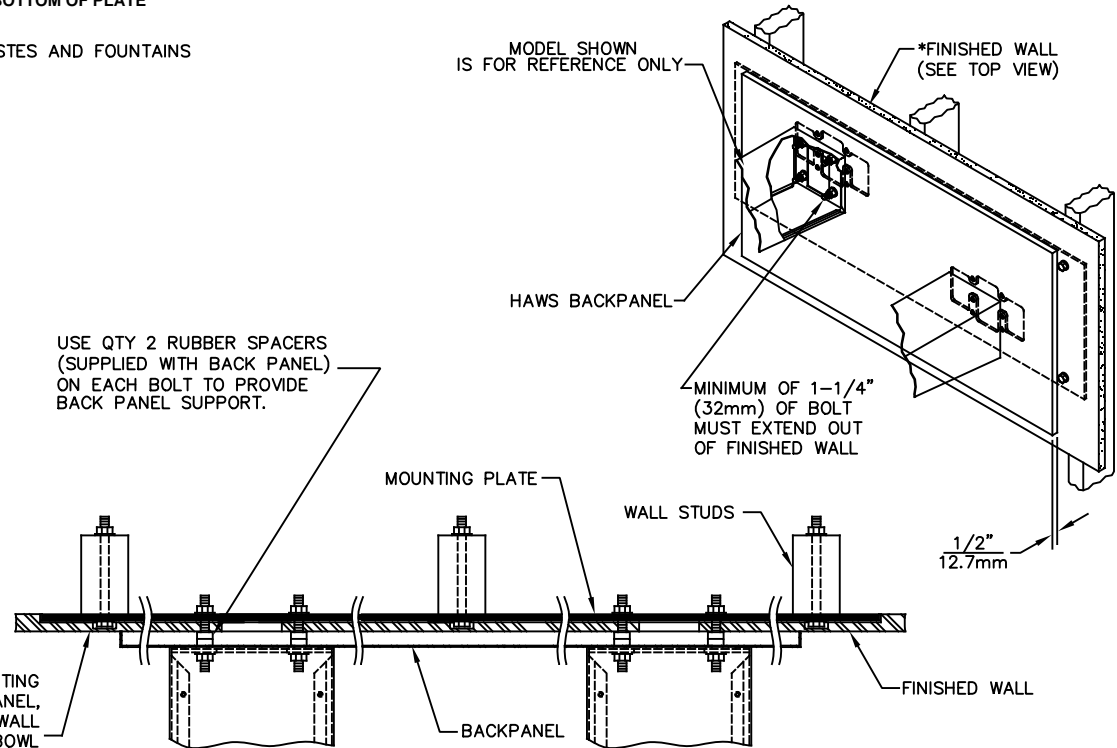


MODEL	
DIMENSION	1011
"X"	25-1/2" [648mm]
LOWER SUPPLY	28-3/4" [730mm]
LOWER WASTE	27-7/8" [708mm]
UPPER SUPPLY	33-3/4" [857mm]
UPPER WASTE	32-7/8" [835mm]

MODEL	
DIMENSION	1117LN
"X"	27" [686mm]
LOWER SUPPLY	29-1/2" [749mm]
LOWER WASTE	29-1/4" [743mm]
UPPER SUPPLY	35-1/2" [902mm]
UPPER WASTE	35-1/4" [895mm]

MODEL		
DIMENSION	1119	1119.14
"X"	27-5/8" [702mm]	27-5/8" [702mm]
LOWER SUPPLY	29-5/8" [752mm]	29-5/8" [752mm]
LOWER WASTE	30-3/4" [781mm]	30-3/4" [781mm]
UPPER SUPPLY	35-3/8" [905mm]	35-3/8" [905mm]
UPPER WASTE	36-1/2" [927mm]	36-1/2" [927mm]

MODEL		
DIMENSION	1011FR	1119FR
"X"	25-1/2" [648mm]	27-5/8" [702mm]
SUPPLY	SEE FREEZE VALVE ROUGH-IN	SEE FREEZE VALVE ROUGH-IN
WASTE	SEE FREEZE VALVE ROUGH-IN	SEE FREEZE VALVE ROUGH-IN

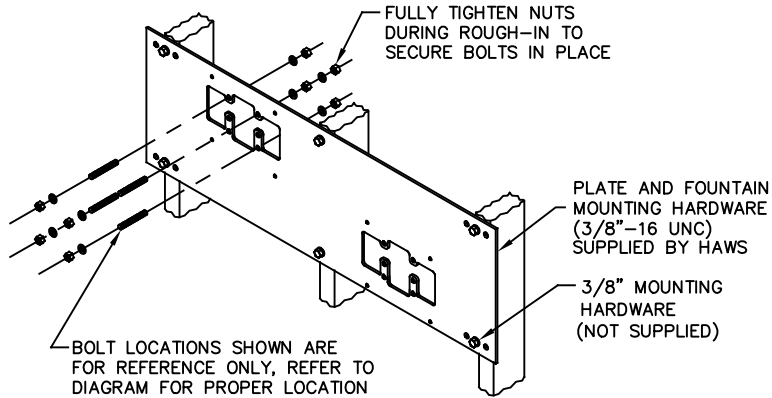

USE QTY 2 RUBBER SPACERS (SUPPLIED WITH BACK PANEL) ON EACH BOLT TO PROVIDE BACK PANEL SUPPORT.

\*FINISH WALL OVER MOUNTING PLATE AND BEHIND BACKPANEL, MAKE SURE THAT FINISHED WALL EXTENDS WITHIN THE BRACKET/BOWL MOUNTING HOLES (TO PROVIDE SURFACE AREA FOR RUBBER SPACERS TO CONTACT).

TOP VIEW

**CAUTION**

REGARDING CONCRETE/MASONRY WALL MOUNTING: DO NOT SECURE MOUNTING PLATE TO SAME SIDE OF WALL AS FOUNTAIN. AVOID COMPROMISING INTEGRITY OF WALL WHEN ANCHORING FOUNTAIN. IT IS RECOMMENDED THAT INSTALLER CALL TECHNICAL SUPPORT IF THERE ARE ANY QUESTIONS AS TO HOW TO OBTAIN A PROPER ANCHOR IN CONCRETE/MASONRY WALLS. 1-800-766-5612



1455 KLEPPE LANE  
SPARKS, NEVADA 89431  
(775) 359-4712 FAX (775) 359-7424  
E-MAIL: HAWS@HAWSCO.COM  
WEBSITE: WWW.HAWSCO.COM

ECN NO. REVISED PER BY:	MODEL(S)	PART NUMBER
ECN: 5526 FV		0002080023
DRAWN: C.J.L. DATE: 04-29-93 CHKD.: DP	6700.4	REVISION
APPROVED: FV DATE: 04/13/20	SCALE: N/A DRAWING TYPE: INSTALLATION	18
	SIZE: A SHEET 1 OF 1	