

ASSEMBLY INSTRUCTION

Item: 374-55-482 Entertainment Console 62 inch
Item: 374-55-582 Entertainment Console Hutch (C)

Thank you for purchasing this quality product. Be sure to unpack carefully for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly.

HARDWARE LIST

NO	DRAWING	DESCRIPTION	SIZE	Qty
A		Allen Wrench	4 mm	1pc
B		Wood Screw	Ø7*5/8"	3pcs
C		Plastic Insert		2pcs
D		Screw	Ø8*1-1/4"	2pcs

STEP 1. Internal adjustable levelers are located at four corners of the Console. Use the provided Allen Wrench to level if necessary.

STEP 2. Place the hutch on the top of the console .

STEP 3. Turn down the metal plate pre-screwed on back of hutch, and screw it to base .

STEP 4. When connecting with other hutches, turn round the pre-screwed mending plate and secure it with provided screws .

STEP 5. Take off metal bracket by loosening bolt pre-secured on top , and then separately secure metal bracket to wall with screw and top with bolt .

Note: The back panel of Hutch can be moved forward if required. Loosen screws around the perimeter of the back panel as shown. Re-locate back panel to the required position and tighten screws.

