


  
**HOOKER**  
— FURNITURE OUTLET:—  
**ASSEMBLY INSTRUCTIONS**

Parts included ::

1. 1 wooden Console Top
2. 6 supporting legs
3. 1 Allen Key
4. 12 Iron Nuts

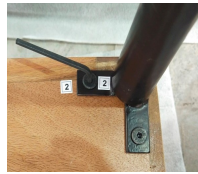

1. Place the wooden console top upside down ( on a protective matt ).
2. Attach the wooden legs to the top 1 by 1 as per the picture & tighten the bolts.



4. After attaching all legs make sure all are fixed firmly and not shaking.
5. Overturn the console carefully.



6. The console is ready to use !

Enjoy using your new low entertainment console..