


Assembly Instructions—Recliner

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.


Inside the carton you will find a red plastic bag that has the 2 recliner's wings in it. Remove the wings from the plastic bag and set them aside to be used in step 3.

Make sure to read the instructions below before assembling your triple power Recliner


Step1 Locate the power cord attached to left of the recliner Mechanism post. Remove it and set it aside to be used later.

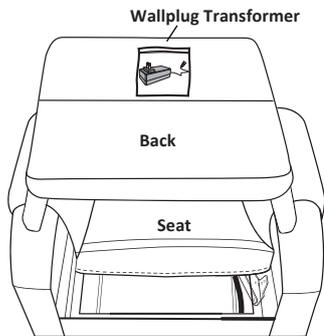

Step2 Position the Recliner Back(A) with the Recliner Back receivers positioned over the mechanism post on the Recliner body(B) as pictured below. Check to assure both sides of the mechanism post are positioned inside of the Recliner Back receiver- on the back frame, push in a downward motion from the top of the back frame until a clicking sound is heard.

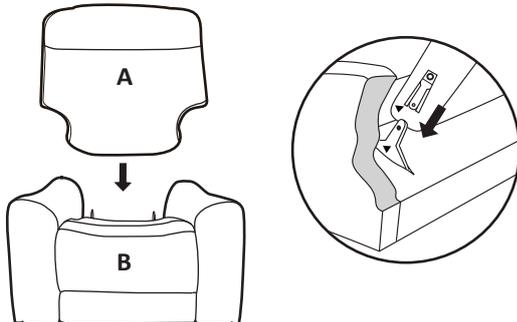


Step3 Slide the metal inserts on recliner's Left wing(C) and Right wing (D) into the metal sleeves on the side of the recliner's back. Slide the wings down until they are completely set on the backs metal sleeves.

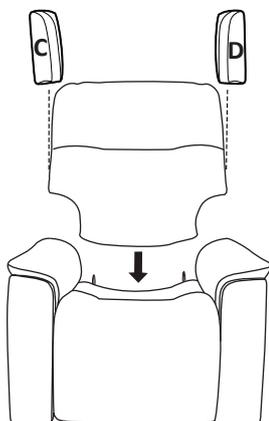

Step4 Attach the leadwires found at the bottom of motion back to the leadwires at the rear of seat. Yellow to Yellow & Grey to Grey. Make sure to close the clip locks to assure the connections will not come loose during use.


Both the headrest and lumbar leadwires are color coded and labeled Headrest or Lumbar.

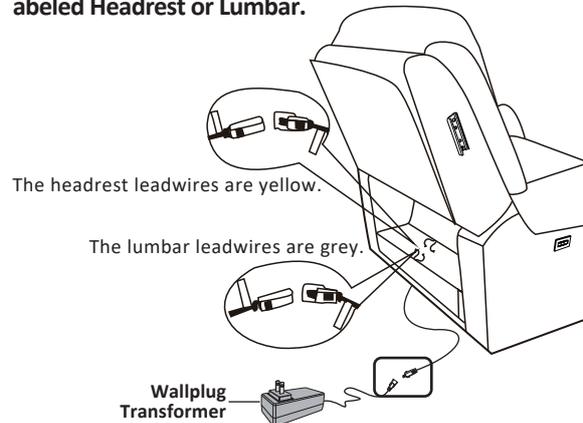

Step5 Attach the outside back across the bottom rear of each seat rail with the pre attached velcro.

Step6 Attach the power cord to the outlet found at the bottom.

After assembly is complete your product should look as seen below.

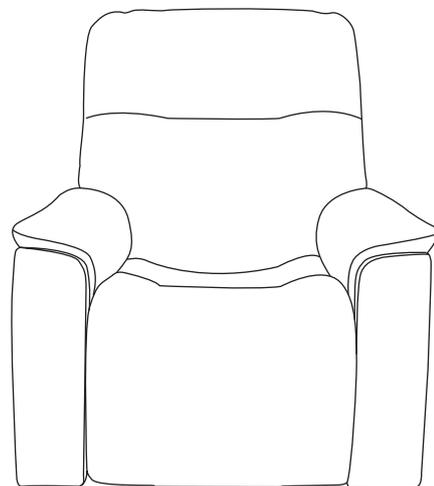

Do Not plug the power cord into a power outlet until your recliner is fully assembled and in placed.


Notes:

- 1) To help prevent shock and or damage to your product only plug the power cord into a grounded outlet.
- 2) Read the operating instructions carefully before operating your power recliner.

Operating Instructions for The Triple Power Recliner

Caution: Read the Important instructions below before operating your power mechanized equipment.

Do not allow children to play on or operate this power mechanized equipment.

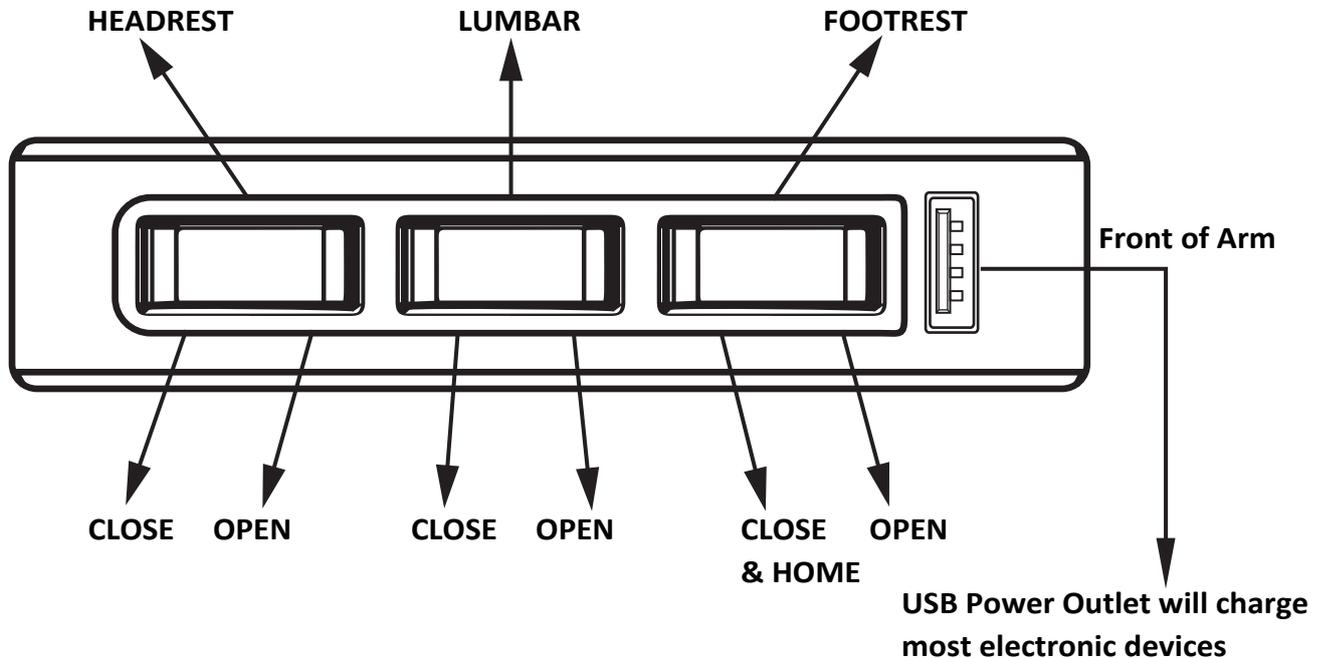

To recline: Sit on the furniture, and press the front of the button closest to the footrest to smoothly raise the footrest and recline to any position. To lower the footrest and return to an upright position, press the back side of the button closest to the footrest.

To adjust headrest: Press the front of the button closest to the backrest to smoothly raise and adjust the headrest to any position. To lower the headrest and return it to its original position, press the back side of the button closest to the backrest.

To adjust lumbar support: Press the front of the center button to smoothly raise and adjust the lumbar support to any position. To lower the lumbar support and return it to its original position, press the back side of the center button.

To close all: To simultaneously return the headrest, footrest, and lumbar support to their original positions, press and hold the back side of the button closest to the footrest.

Care should always be taken to assure there is nothing in the path of the mechanism before and during operation.

Open and Close Buttons

The open and close buttons will operate the function noted above by simply touching the button. To stop the mechanism in your desired position simply remove your finger from the button.

Product Protected By Following Patents:
Patented Articulating Power Headrest & Lumbar
US Patent: 10,736,423