





 







Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

HARDWARE PACK				
NO.	DRAWING	DESCRIPTION	SIZE	Q'TY
A		Allen Wrench	69*27.2*4mm	1 PC
B		Bolt	1/4*40mm	2 PCS
C		Lock Washer	1/4(6mm)	2 PCS
D		Flat Washer	1/4*16mm	2 PCS
E		Hanger	75*30*38mm	2 PCS
F		Screw	8*1 1/4	2 PCS
G		Plastic Anchor		2 PCS
H		Anti-Tip Kit		1 PC
I		Open Wrench	8mm/70mm	1 PC



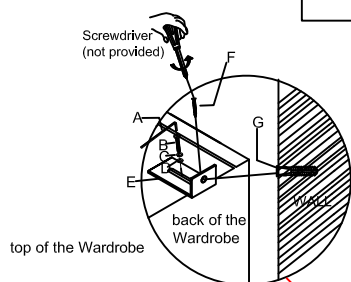
STEP 1:
Mount the hanger (E) to top of the Wardrobe, then attach the Wardrobe to a wall.

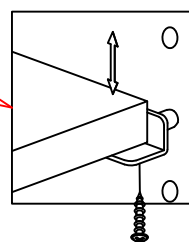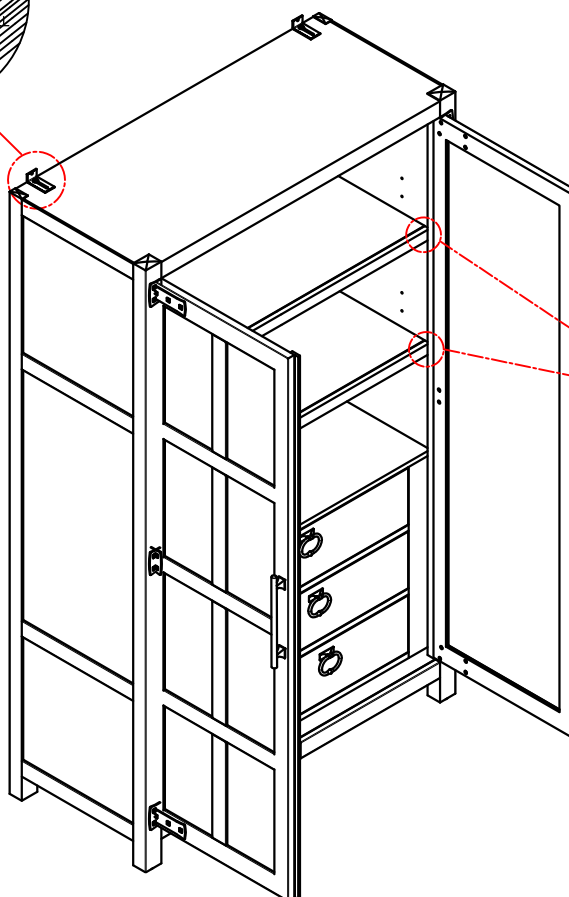

STEP 2:
The adjustable shelves are screwed in place to avoid damage during transit. To adjust the shelf height, remove screws then place shelf pins in the desired level.



Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

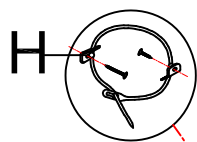

Anti-tip kit is included for use. We recommend installing for safety reason.

Tipping Restraint

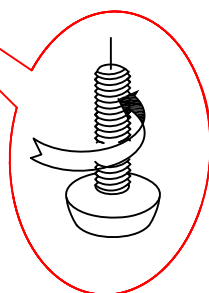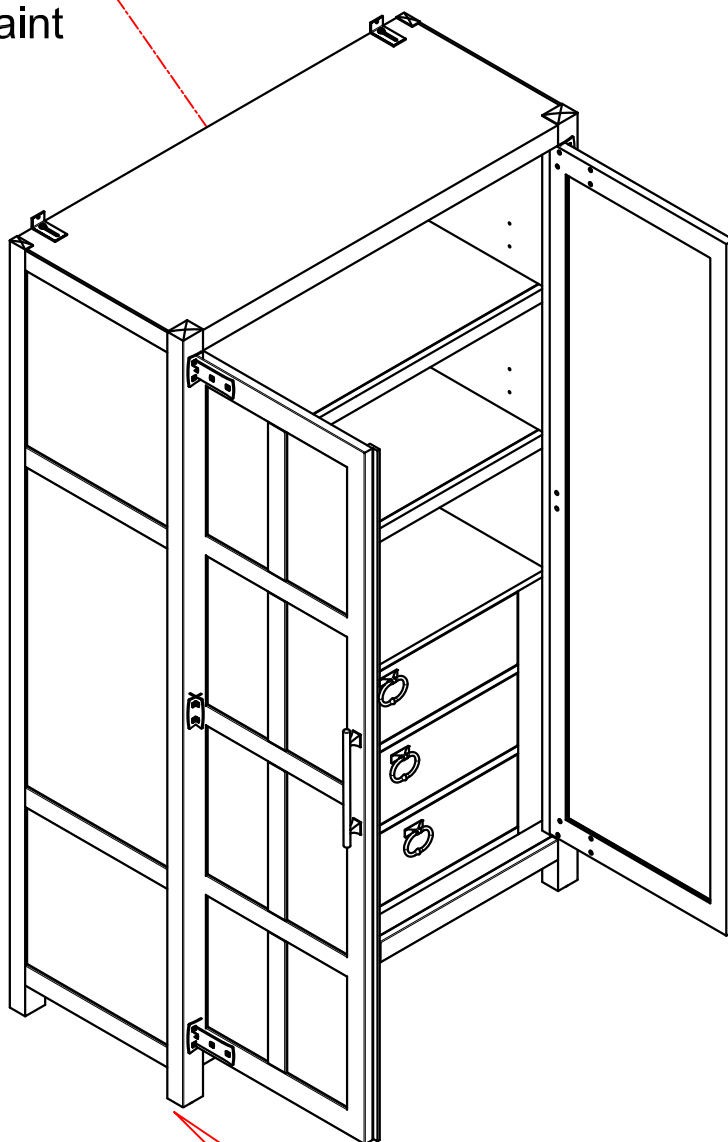

Adjust Leveler if needed to level wardrobe on uneven floor.

Thank you for purchasing this quality product. Be sure to unpack carefully looking for small parts which may have come loose during shipment.

Read all instruction and study the drawing carefully before starting the assembly process.

Hinge Replace Instruction:

When the door hinge is damaged, use the Open Wrench (I) to unscrew the hardware and replace with the new hinge.

