


ASSEMBLY & INSTALLATION INSTRUCTIONS

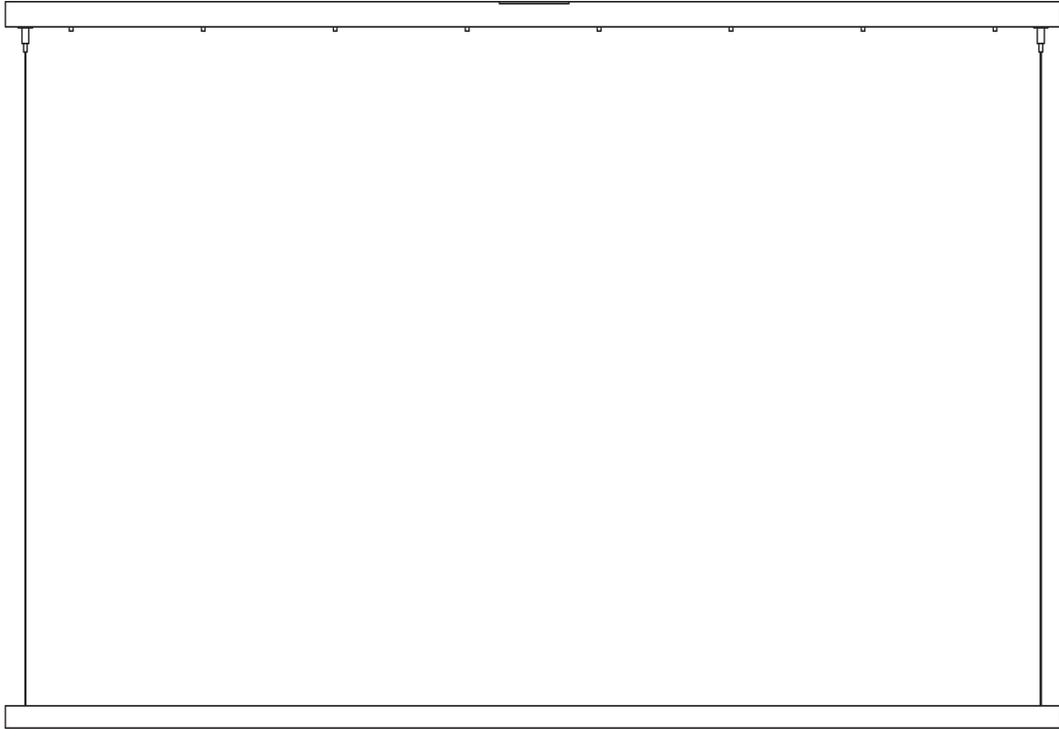

ASSEMBLY & INSTALLATION INSTRUCTIONS

COMPONENT PARTS

A	Canopy
B	Canopy Cover Plate
C	Knobs (4)
D	Anchors (4)
E	#10 Screws (4)
F	Electric Box Cover (4")
G	#8 Screw
H	Brass Accent
I	Supply/Support Cables (2)
J	Grippers (2)
K	Cupped Washer
L	Ground Screw

ASSEMBLY & INSTALLATION INSTRUCTIONS

CAUTION: FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

TO INSTALL TO SINGLE BOX (Figure 1)


1. Carefully unpack fixture from carton.
2. Unscrew the knobs (C) from the canopy (A). Remove canopy cover plate (B). Set knobs and canopy cover plate aside.
3. Center the canopy (A) over the electric box. With a pencil, mark the location of desired mounting positions on the ceiling. Set canopy aside.

Important: The canopy must be secured to solidly mounted framing members in at least two locations. Do not depend on drywall anchors alone to support this fixture. If in doubt, contact a qualified electrician.

4. Drill 1/4" holes in the locations marked on the ceiling. For holes using anchors (D), place the tapered end of the anchor into the hole and gently tap them flush to the ceiling using a light weight hammer.
5. Thread the wires in the electrical box through one of the center holes in the canopy (A) while moving the canopy into position. Using two machine screws (not provided) attach the canopy to electrical box.

Note: A new electric box comes with screws. When replacing a fixture, retain the existing screws for use with the new fixture.

6. Using the #10 screws (E), screw the canopy (A) to the ceiling. Be careful not to over-tighten or strip the anchors (D).
7. Follow instructions on page 5 to complete installation.

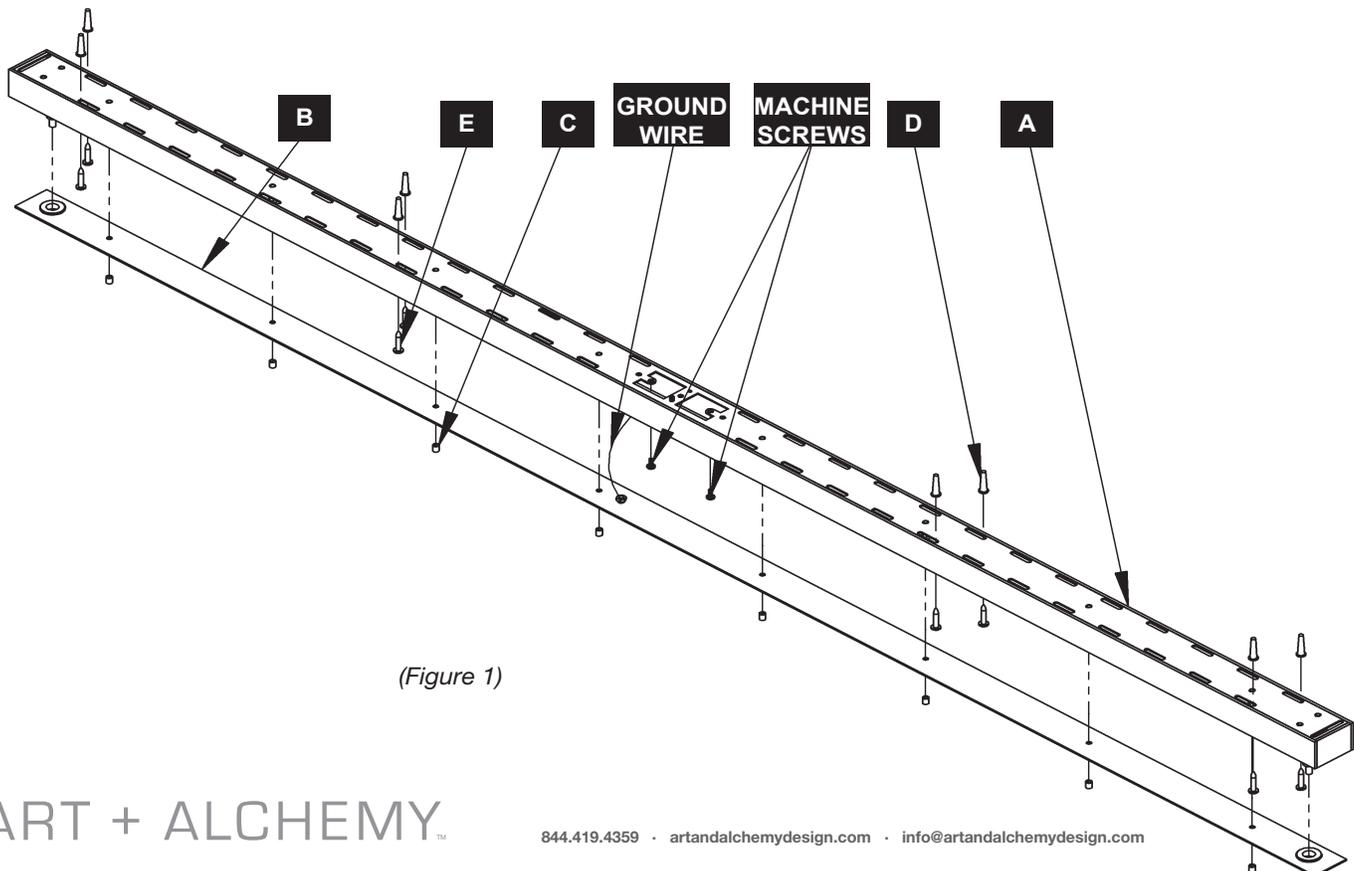

(Figure 1)


ASSEMBLY & INSTALLATION INSTRUCTIONS

TO INSTALL TO 4 INCH BOX (Figure 2)

1. Carefully unpack fixture from carton.
2. Unscrew the knobs (C) from the canopy, and remove canopy cover plate (B). Set knobs and canopy cover plate aside.
3. Attach electric box cover (F) to the canopy (A) using a #8 screw (G).
4. Center the canopy (A) over the electric box. With a pencil, mark the location of desired mounting positions on the ceiling. Set canopy aside.

Important: The canopy must be secured to solidly mounted framing members in at least two locations. Do not depend on drywall anchors alone to support this fixture. If in doubt, contact a qualified electrician.

5. Drill 1/4" holes in the locations marked on the ceiling. For holes using anchors (D), place the tapered end of the anchor into the hole and gently tap them flush to the ceiling using a light weight hammer.
6. Thread the wires in the electrical box through one of the center holes in the canopy (A) while moving the canopy into position. Using the #10 screws (E), screw the canopy to the ceiling. Be careful not to over-tighten or strip the anchors.
7. See instructions on next page to complete installation.

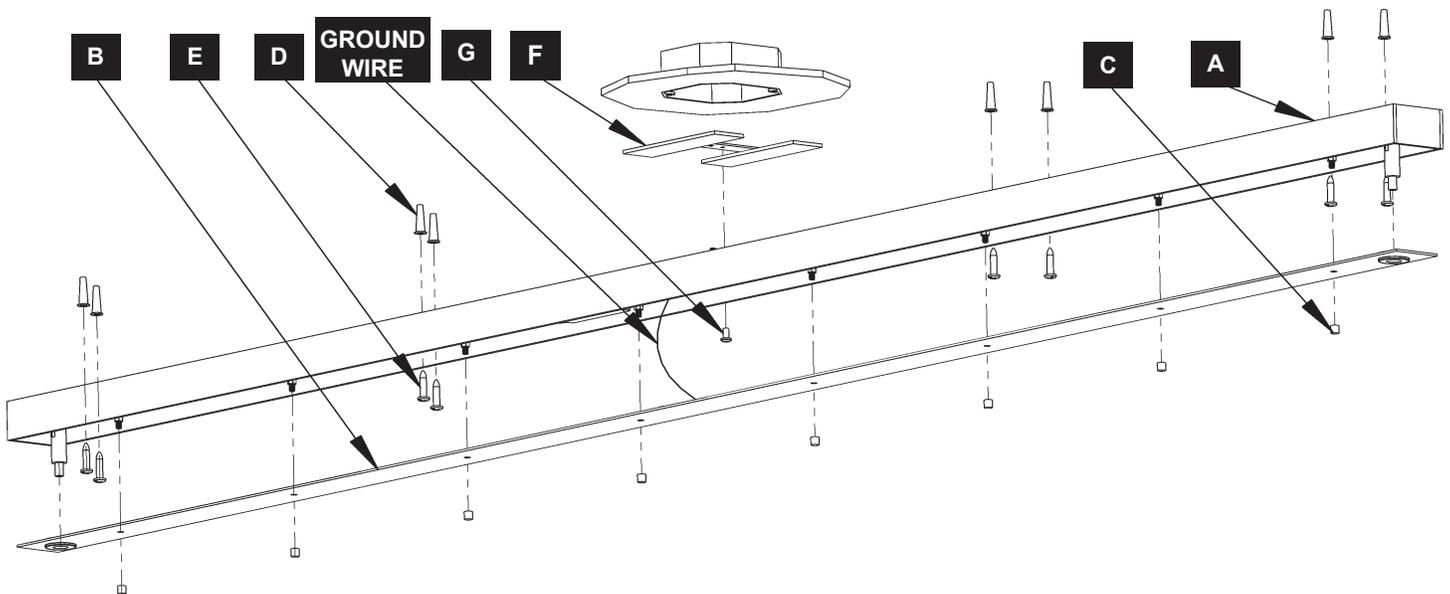


(Figure 2)

ASSEMBLY & INSTALLATION INSTRUCTIONS

TO COMPLETE INSTALLATION (Figure 3)

1. Locate brass accent (H) and uncoil both supply/support cables (I) to determine the (+) cable and (-) cable.
 2. Feed supply/support cables (I) through holes in canopy cover plate (B) and allow canopy cover plate to rest on top of brass accent (H).
 3. Align the (+) supply/support cable (I) with the (+) gripper (J) and the (-) cable with the (-) gripper in canopy (A).
 4. Slide supply/support cables (I) into grippers (J) until desired height of brass accent (H) is reached.
Note: To lower brass accent (H) depress the gripper plunger and pull supply/support cable (I) out until desired height is reached.
 5. Cut the supply/support cable (I) as close to the grippers (J) as possible.
Note: Once supply/support cables (I) are cut the brass accent (H) can no longer be lowered. Make sure desired height is reached before cutting cables.
 6. Using suitable wire connectors (not provided), connect fixture wires to supply wires (white to white and black to black). Attach a pigtail ground lead to canopy (A) using cupped washer (K) and ground screw (L).
- Caution:** Make sure wire connectors are twisted on securely and no bare wires are exposed.
7. Slide canopy cover plate (B) up supply/support cables (I) and hold it close to canopy (A). Connect all ground wires (bare copper or green to bare copper or green) together. Secure canopy cover plate into position in the canopy with knobs (C).
 8. Restore electricity at the main breaker.

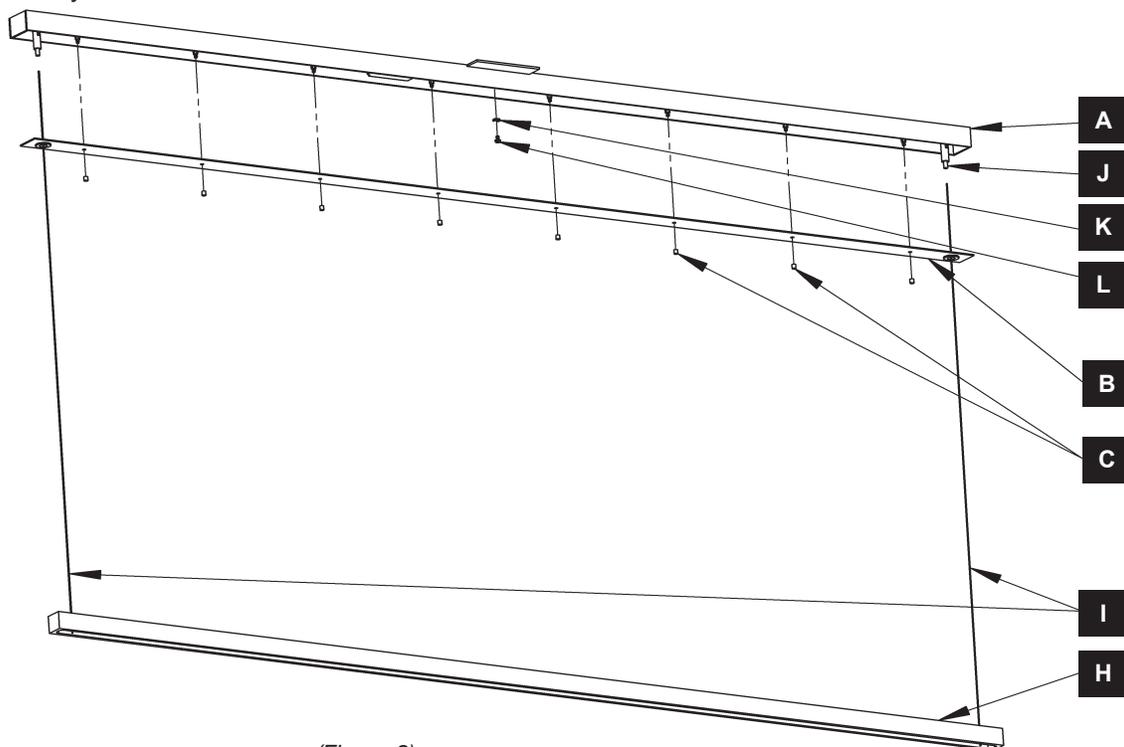

(Figure 3)

If you need further assistance, or find that you are missing any parts, please contact the showroom from which you purchased this product. We hope you enjoy your fixture!

*ART+ALCHEMY will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.