


287 and 288 FRICTION CASEMENT ADJUSTERS



FRICTION CASEMENT ADJUSTERS 287 and 288 Series

FOR WINDOWS OPENING OUT

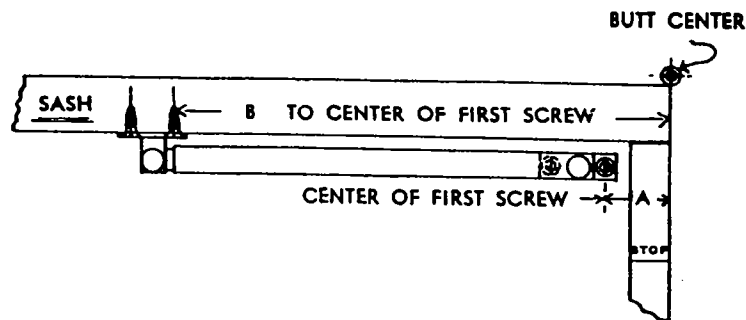

Adjuster Size	A	B	MAXIMUM OPENING
8" ADJUSTER	1 $\frac{7}{8}$ "	9 $\frac{7}{16}$ "	105 °
10" ADJUSTER	1 $\frac{7}{8}$ "	11 $\frac{3}{8}$ "	105 °
12" ADJUSTER	3"	14 $\frac{9}{16}$ "	110 °

INSTRUCTIONS

It is IMPORTANT that the following directions be closely followed in installing this device:

1. Install the tube bracket so that the first screw hole of this bracket is located as per dimension "A" from the hinge edge of the sash. (See the accompanying drawing.)
2. Close the window and install the sash bracket so that the first screw hole of this bracket is located as per dimension "B" from the hinge edge of the sash.
3. Do not paint or lubricate the plunger rod of this adjuster.

H.B. IVES
A HARROW COMPANY
P.O. BOX 1887, NEW HAVEN, CONN. 06508

PN 110312