 


ASSEMBLY AND INSTALLATION INSTRUCTIONS

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.

 
Hardware Package (included):

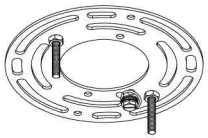

Mounting Plate Unit (A)



Mounting Screw (B)



Wire Connector (C)






Bolt Nut (D)



Pure Shell (E)

   Fig.1

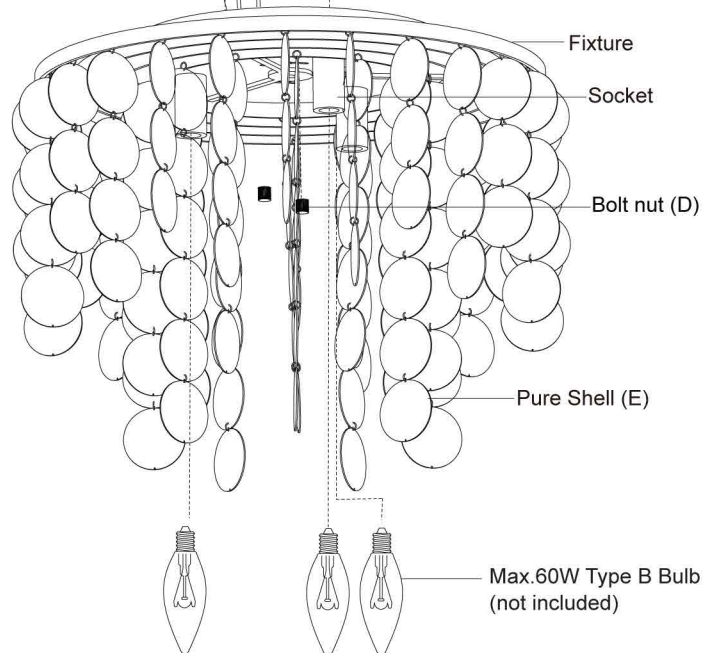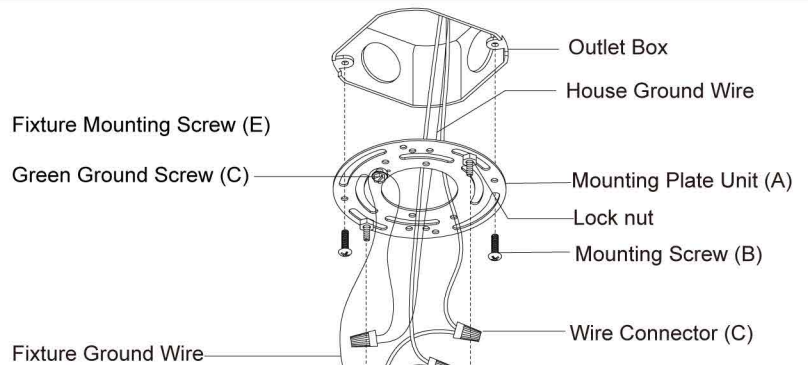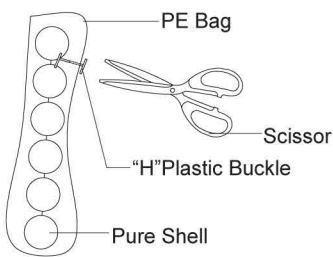

Installation Steps

Turn off the power at fuse or circuit box.

 
 
1. Cut the "H" plastic buckles with scissor when take down the PE bags. (See Fig.1)
2. Remove the mounting plate unit (A) from fixture by unscrewing two bolt nuts (D).
3. Attach the mounting plate unit (A) to the outlet box by using two mounting screws (B).
4. Pull out the source wires from the outlet box. Make wire connections using wire connectors (C) as follows:
 - Connect the hot wire (black insulation) from the fixture to the black wire from the power source.
 - Connect the neutral wire (white insulation) from the fixture to the white wire from the power source.
 - Attach the fixture ground wire (bare wire) to the mounting plate unit (A) with the green ground screw. Then connect it to the house ground wire with the wire connector (C). Carefully put the wires back into the outlet box.
5. Attach the canopy to the mounting plate unit (A) by inserting the fixture mounting screws, then secure it with two bolt nuts (D).

6. Install bulbs (not included). See relamping label at socket area or packaging for maximum allowed wattage.

Turn on the power at fuse or circuit box.

The following parts are available for re-order if damaged or missing.

Spare Parts List:

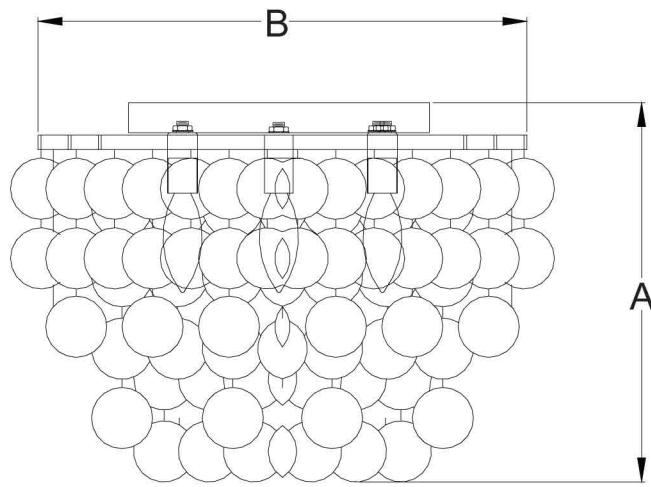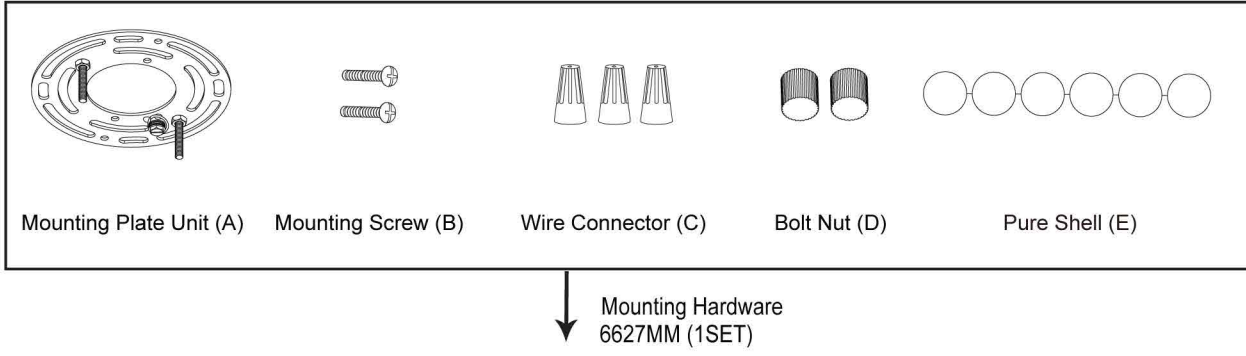

A: 13-1/2"

B: 16"

1 Year Warranty

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.