

# ASSEMBLY & INSTALLATION INSTRUCTIONS FOR #27012

Please read carefully and save these instructions, as you may need them at a later date.

### **CAUTION**

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

#### **GENERAL**


All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

## ASSEMBLY AND INSTALLATION

- 1. Thread Hex nut (1) onto 1/2"-18 N.P.S.M. Nipple (2). Thread Nipple (2) into Hickey (3) inside Outlet Box (4) (Not furnished). Tighten Hex nut (1) against Hickey (3) to secure components in place. Thread Chain Holder (5) onto Nipple (2) until Nipple (2) is flush with opening on loop side of Chain Holder(5). (See Fig. 1)
- 2. Thread the FIXTURE LOOP(11) onto the NIPPLE(12) till tight. Pull the arms to they are evenly spaced, (See Fig. 2)
- 3. Open one End-Link of Chain (10) and slip through Fixture Loop (11). Close Link and slip Fixture Wires (7) up through Chain (10) (See Fig. 1 and 2)
- 4. Side Collar (8) and Canopy (9) down over Chain (10). (See Fig. 1)
- 5. Open free End-Link of Chain (10) and slip through Chain Holder (5). Close Link and thread Fixture Wires (7) up through Chain Holder (5). Trim Fixture Wires (7) to extend SIX INCHES inside Outlet Box (4), and strip insulated wires ½ INCH. (See Fig. 1)
- 6. Attach the power supply wires to the fixture lead wires by connecting the BLACK SUPPLY WIRE to the SMOOTH FIXTURE LEAD WIRE and the WHITE SUPPLY WIRE to the RIBBED FIXTURE LEAD WIRE Connect the FIXTURE GROUND WIRE (7) to the SUPPLY GROUND WIRE (8) using a WIRE CONNECTOR. Place wiring and connections inside the OUTLET BOX (1). (See Fig. 1)
- 7. Raise Canopy (9) up to Ceiling and secure in place by threading the Collar (8) up onto Chain Holder (5). (See Fig. 1)
- 8. Slide the GLASS SHADE(14) over the SOCKET(15), secure with the SOCKET RING(13).
- Screw light bulbs into the lamp sockets and make sure they do not exceed the maximum wattage specified on the fixture's wattage rating label, MAXIMUM 40W.

# ASSEMBLY AND INSTALLATION (Continued)

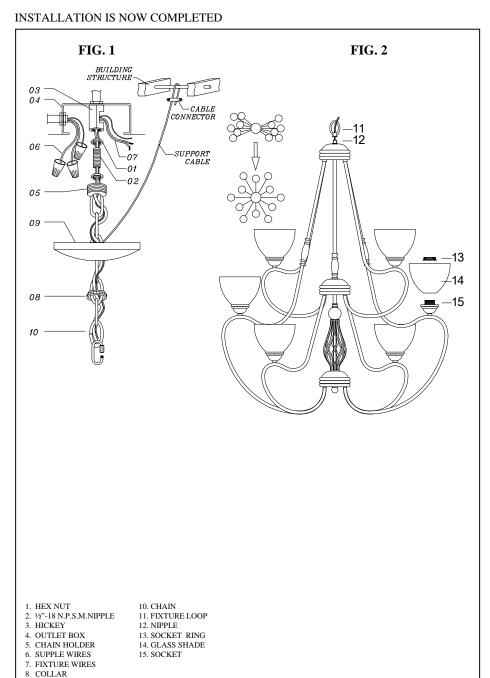

9. CANOPY