

HOW TO REMOVE OR CHANGE A LAMP

SLEEK PLUS • SG4 and SG5 Series



1. Turn off power to the fixture.
2. Unplug the cords and remove fixture from the mounting clips.
3. Pry off the prismatic lens from each side of the fixture by placing a flat head screw driver into the lens removal notch.
4. Rotate the lamp until the grooves line up - allowing the lamp's bi-pins to release.
5. Remove the lamp.
6. Install the new lamp.
7. Snap the lens back on by inserting one side. Then, starting at either end, insert and snap in the other side of the lens. Sliding your finger toward the other end to get the entire other side to snap into place.
8. Snap the fixture back into the mounting clips.
9. Re-attach the cords.

2. Turn the lamp counter clockwise from both sides:

OPEN



QUARTER TURN



HALF TURN



PROPER FINAL POSITION



Components:

Mounting Clip



Fixture



Lamp



Prismatic Lens

