

HOW TO REMOVE OR CHANGE A LAMP

ADJUSTABLE SLEEK PLUS • SG4A and SG5A Series



1. Turn off power to the fixture.
2. Unplug the cords and remove fixture from the mounting clips.
3. Pry off the prismatic lens from each side of the fixture by placing a flat head screw driver into the lens removal notch.
4. Rotate the louver until it is completely on top.
5. Remove the louver by prying it off the fixture from either end.
6. Slide off the endcaps on each end toward the middle of the lamp.
7. Rotate the lamp until the grooves line up - allowing the lamp's bi-pins to release.
8. Remove the lamp.
9. Slide the endcaps onto the new fluorescent lamp.
10. Install the new lamp.
11. Slide the endcaps towards the ends – back into place. (Remember to have the lens removal notch facing down.)
12. Clip the louver back into place.
13. Rotate the louver until the lens removal notch is facing up.
14. Snap the lens back on by inserting one side. Then, starting at either end, insert and snap in the other side of the lens. Sliding your finger toward the other end to get the entire other side to snap into place.
15. Snap the fixture back into the mounting clips.
16. Re-attach the cords.

