



INSTALLATION INSTRUCTIONS

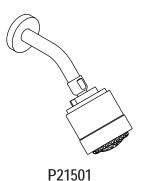

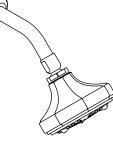



P21542

P21500

KALLISTA

Multi-function Showerhead with Arm

INSTALLATION INSTRUCTIONS

THANK YOU FOR CHOOSING KALLISTA

We appreciate your commitment to KALLISTA quality products. Please take a moment to review this manual before you install your KALLISTA product. If you encounter any installation or performance problems, please do not hesitate to contact us at the phone number listed at the bottom of the page.

BEFORE YOU BEGIN

NOTICE: Choose an automatic compensating valve with the appropriate minimum flow rating, to assure your valve will provide safety at the lowest flow rates. For a showerhead with a maximum flow rate of 2.0 gal/min (7.6 l/min), use with an automatic compensating valve rated 1.6 gal/min (6.1 l/min) or less.

- Prior to installation, unpack the new showerhead and inspect it for damage. Return the showerhead to its protective carton until you are ready to install it.
- □ Observe all local plumbing and building codes.
- Given the second second
- □ The finished wall or bath/shower unit must be installed before installing this trim.
- □ The appearance of your product may differ from what is shown in these instructions, however, the installation procedure is the same.
- KALLISTA reserves the right to make revisions in the design of products without notice, as specified in the Price Book.

TOOLS AND MATERIALS



Sealant Tape



Rags



Adjustable Wrench




Strap Wrench

KALLISTA

Multi-function Showerhead with Arm

INSTALLATION INSTRUCTIONS

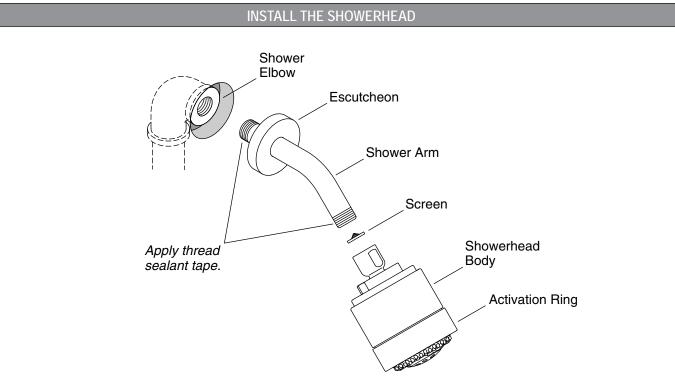

CAUTION: Risk of product damage. To avoid plugging the showerhead spray outlets, use thread sealant tape on the shower arm threads. Do not use thread sealant compound (pipe dope).

- □ Remove the temporary nipple from the shower elbow.
- □ Slide the escutcheon onto the shower arm.
- □ Apply thread sealant tape to the threads and install the shower arm to the shower elbow.
- Carefully tighten the shower arm with a clean strap wrench.
- □ If desired, apply a bead of clear sealant around the perimeter of the escutcheon.
- □ Remove any excess sealant.
- □ With the showerhead off, flush out the system.
- □ Ensure that the screen is positioned as shown on the showerhead.
- □ Apply thread sealant tape to the shower arm and thread the showerhead to the shower arm.
- □ Use a clean adjustable wrench to tighten the showerhead to the arm; be careful not to mar the finish.
- □ Check for proper operation.

NOTE: The ball joint tension may need to be increased if it is not sufficient to hold the showerhead in the desired position. Follow the steps below to adjust the ball joint tension.

- □ Rotate the function activation ring to the furthest clockwise position.
- Use one hand to hold the showerhead body stationary, then use the other hand to firmly rotate the activation ring further clockwise.
- □ Check that the showerhead retains the desired position.