
REPLACEMENT PARTS

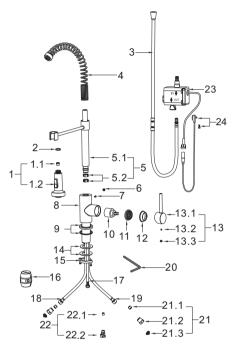

No.	Description	Finishes/colors	Item No.
1.	Spray Head	C, SS, MB, GG, BG	500301912**
2.	Washer		7002003893
3.	Spray Hose	C, SS, MB, GG, BG	500402277**
4.	Spring Assembly	C, SS, MB, GG, BG	500600410**
5.	Spray Support Assembly	C, SS, MB, GG, BG	400602181**
6.	Cover Button		5001010373
7.	Set Screw		5006003380
8.	Main Body	C, SS, MB, GG, BG	100300521**
9.	Base	C, SS, MB, GG, BG	500101557**
10.	35A Cartridge		2006001090
11.	Nut		4006017175
12.	Сар	C, SS, MB, GG, BG	500101172**
13.	Handle	C, SS, MB, GG, BG	200100371**
14.	Rubber & Metal Washer		7002003735
15.	Mounting Nuts & Screws		4006018501
16.	Weight		5002006680
17.	Supply Hose		5004021560
18.	Waterline		5004206002
19.	Waterline		5004206002
20.	Hex Wrench		5006000370
21.	Connector		4006012865
22.	Fast connector		5004019165
23.	DC control box		5002009180
24.	Sensor line		5002009190



C - Chrome

SS - Spot Free Stainless Steel

MB - Matte Black GG - Gunmetal Gray

BG - Brushed Gold







Loxton

Models: KKF228C KKF228SS

KKF228MB KKF228GG

KKF228BG

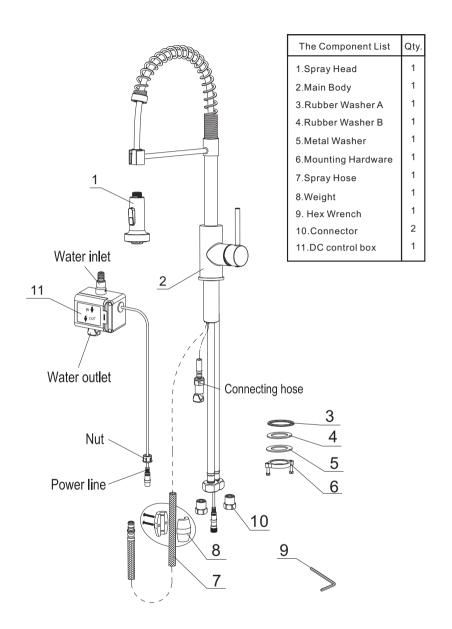

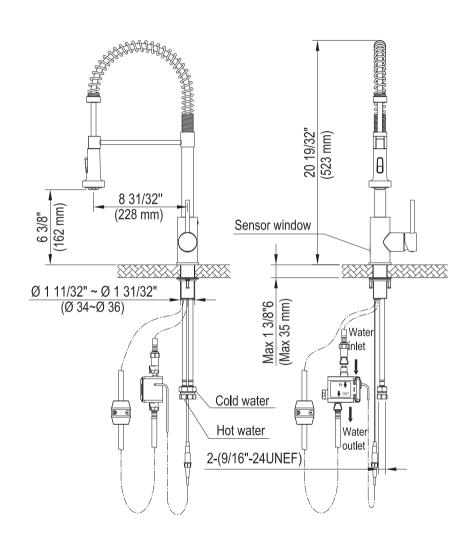

Water inlet

Hot water

Cold

Power

line

Nut

line

Sensor


Connecting hose _____

Water

outlet 4


Spray hose

STEP 1

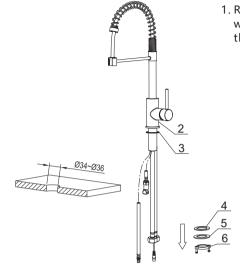



1. Remove mounting hardware(6), metal washer(5) and rubber washer B (4) from the main body (2).


STEP 2

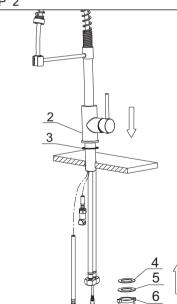


2. Insert the main body into the hole with base(12) and rubber washer A(3).
Refix the rubber washer B(4), metal washer(5), mounting hardware(6) from the bottom.

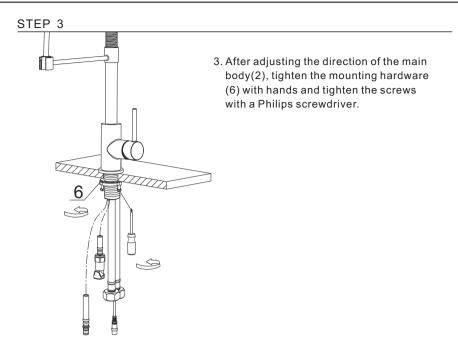


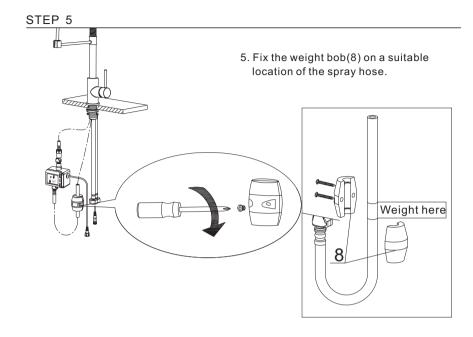

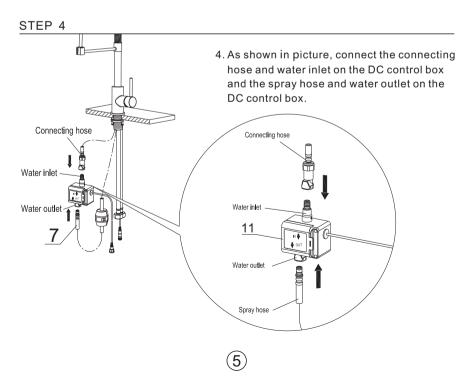

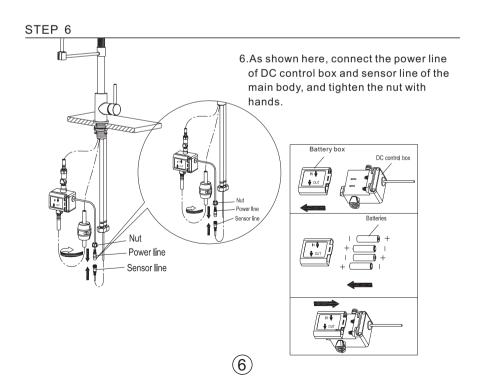



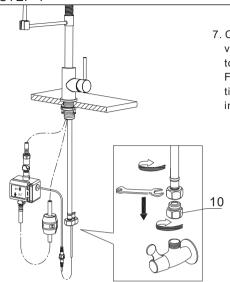


7. Connect the connectors(10) to the valves, and connect the 2 inlet hoses to the connectors.


Finally turn on the faucet to test the tightness of all joints to finish the installation.

STEP 8

8. Factory default setting is sensor pattern.
You will find the switch on Auto.

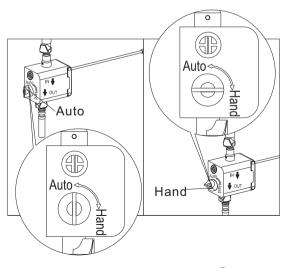




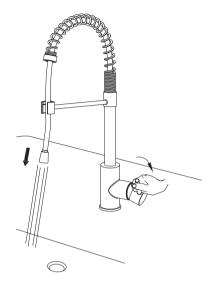


9. Turn on mixer to check for leaks.

STEP 10

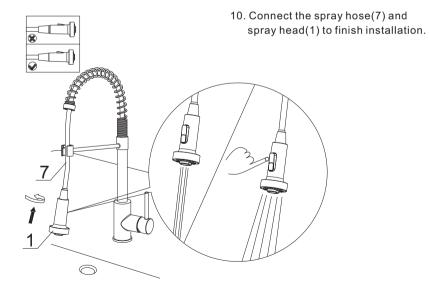

☆ How to operate the handle:

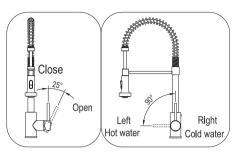



- 1) Open the handle lever to turn water on, push to turn off.
- 2) Turn the handle lever to the left to increase hot water flow with higher water temperature, while lower the water temperature by operating reversely.

☆ Usage of sensor window:

Pull open the handle from faucet to turn on

- 1) Wave hand before sensor window, water flows automatically.
- 2) Water turns off after 180 seconds automatically.
- 3) Wave hand before sensor window again within 180 seconds to turn off water.

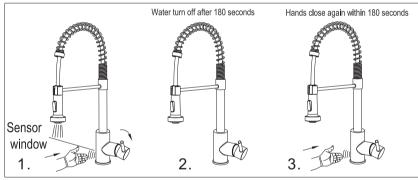


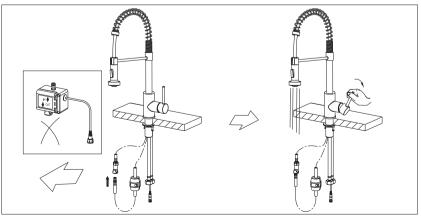

☆ Turn on and off water by pull down and return spray.

Pull open the handle from faucet to turn on,

- 1) Pull down spray, water flows automatically.
- 2) Water turns off after 180 second automatically.
- 3) Or return backward spray head within 180 seconds, to turn off water.

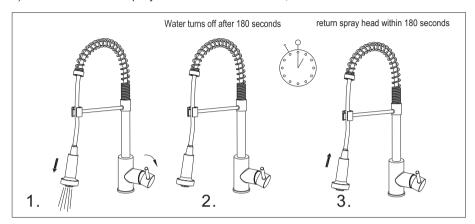

☆ Cleaning of filter in DC control box.

Please clean filter when water flows down. Normal suggestion for cleaning is twice per year.

