

KICHLER®

READ AND SAVE THESE INSTRUCTIONS


SOLA DOWN ROD HANGER KIT

337033



U.S. Patent Pending


This carton contains the following parts. Please make sure you have everything.

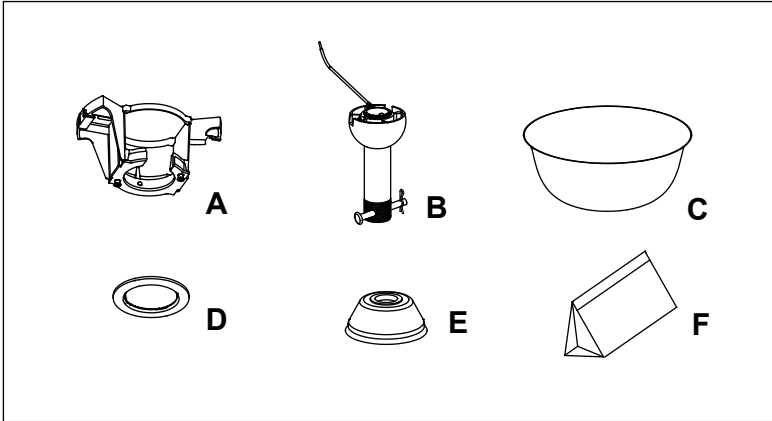

- A. Hanger Bracket (1pc)
 B. Downrod Assembly (1set)
 C. Canopy (1pc)
 D. Canopy Trim Ring (1pc)
 E. Coupling Cover (1pc)
 F. Package Hardware..... (1 set)

TOOLS AND MATERIALS REQUIRED

- Philips screw driver
- Blade screw driver
- 11 mm wrench
- Step ladder
- Wire cutters

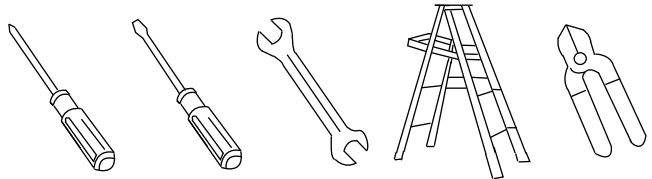

MOUNTING OPTIONS

Make sure the outlet box you've selected for mounting your ceiling fan is UL listed and rated for ceiling fan use.

NOTE: Make sure the electrical power is turned off before starting. Disconnect at the main circuit box.

It's very important that the outlet box is securely installed and will not move or your ceiling fan will wobble after installation.

If you need to install a new outlet box, secure it directly to the building structure using appropriate fasteners and building materials.

The outlet box and its support must be able to fully support the moving weight of the fan (at least 50 lbs.). Do not use plastic outlet boxes.

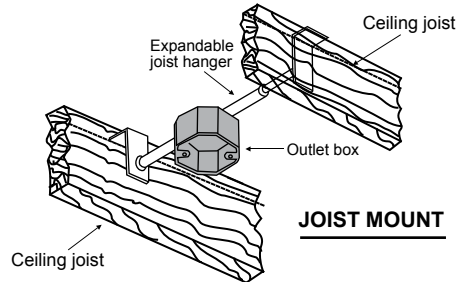


Fig. 1

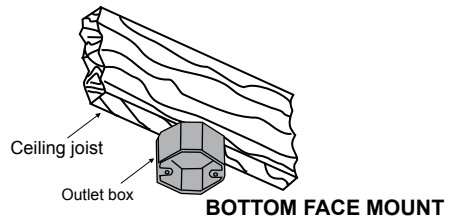


Fig. 2

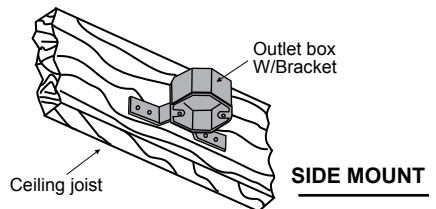


Fig. 3

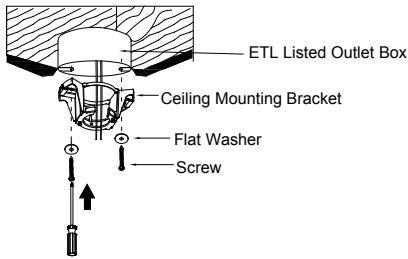


Fig. 4

Step 1. Assemble the ceiling bracket to ceiling junction box using the screws and washers supplied with the ceiling junction box. (Fig. 4)

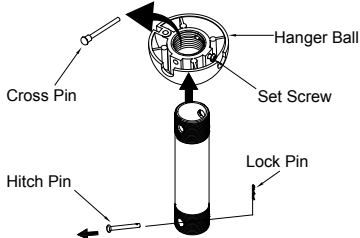


Fig. 5

Step 2. Remove the hanger ball from downrod assembly by loosening set screws, removing the cross pin, and sliding ball off the rod. Remove the lock pin and hitch pin from the downrod. (Fig. 5)

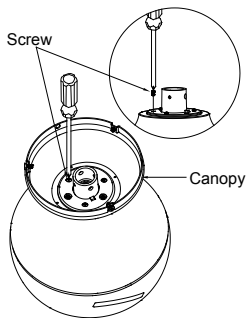


Fig. 6

Step 3. Remove the three motor coupling screws from ceiling fan and retain the canopy for later use. Reinstall the removed screws back to the ceiling fan. (Fig. 6)

Step 4. Install the two set screws on the top coupling of the motor assembly. Carefully feed the fan wires up through the downrod, coupling cover, canopy trim cover and canopy. Threaded the downrod onto the motor coupling until the hitch pin holes are aligned. Next, replace the lock pin and hitch pin, and tighten both set screws. (Fig. 7)
Carefully reinstall the hanger ball onto the downrod. Make sure the cross pin is in the correct position and the set screw is tight and the wires are not twisted.

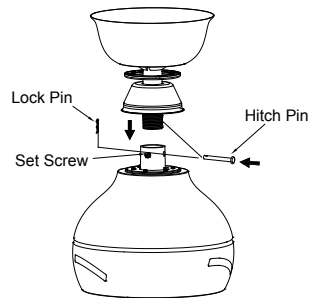


Fig. 7

Step 5. Now lift the motor assembly into position and place the hanger ball into the hanger bracket. Rotate until "Check Tab" has dropped into the "Registration Slot" and seats firmly. (Fig. 8) The entire motor assembly should not rotate.

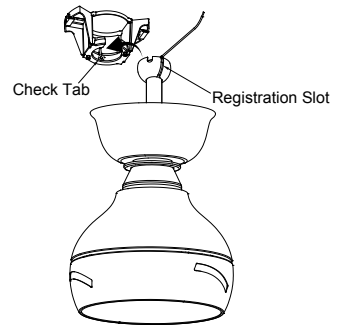


Fig. 8

WARNING: Failure to properly seat the "Check Tab" can damage the ceiling fan during operation.

Step 6. Remove one of the two shoulder screws in the hanger bracket. Loosen the second shoulder screw without fully removing it. Assemble canopy by rotating key slot in canopy over shoulder screw in hanger bracket. Tighten shoulder screw. Fully assemble and tighten second shoulder screw that was previously removed. Securely attach and tighten the canopy trim cover over the shoulder screws in the hanger bracket utilizing the keyslot twist-lock feature. (Fig. 9)

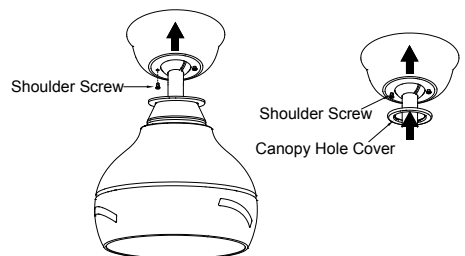


Fig. 9