


**KitchenAid®**

**30" BUILT-IN ELECTRIC DOUBLE OVEN WITH CONVECTION**

**MODELS:**

KODE300ESS02 (Stainless)


# CONTROL PANEL PARTS

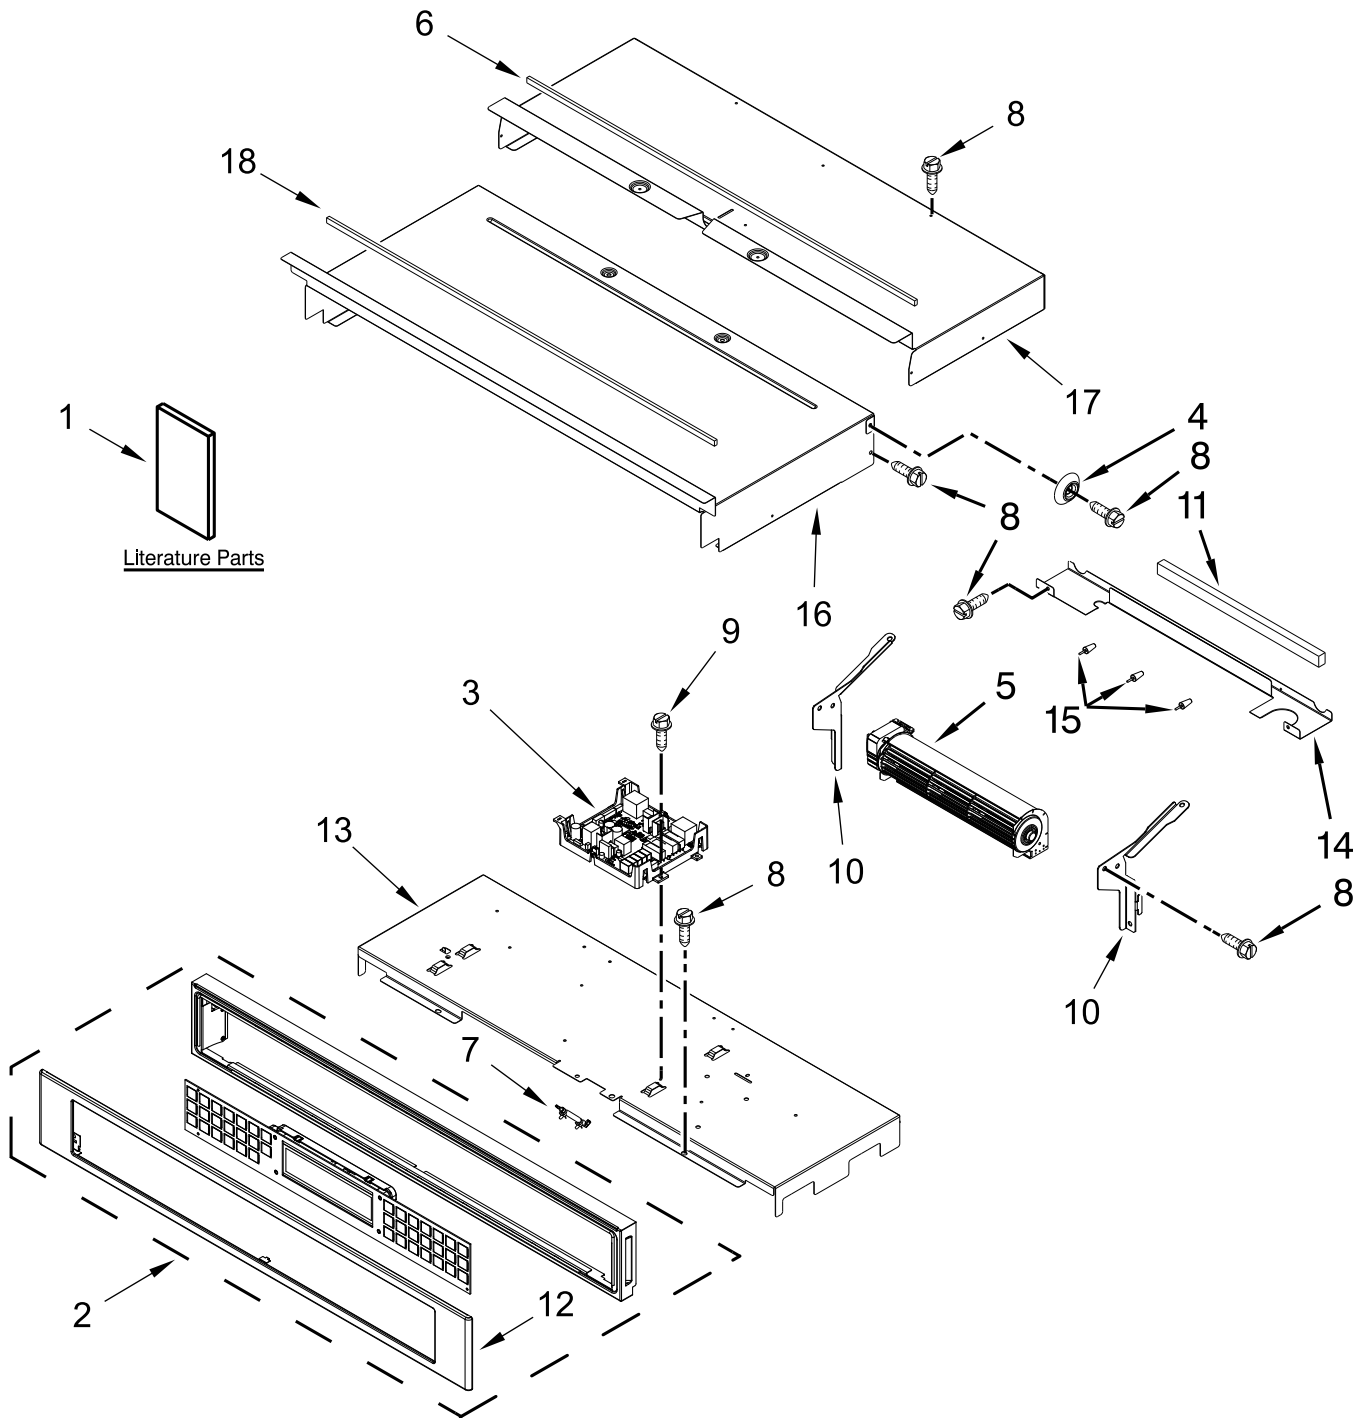

# CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	8	7101P426-60	Screw	18	W10728475	Gasket, Rubber
	W10643471	Guide, Use & Care	9	7101P434-60	Screw			FOLLOWING PARTS NOT ILLUSTRATED
	W10725670	Instructions, Installation	10	W10655463	Bracket, Blower (Left)	W10836687		Harness, Main
	W10861943	Sheet, Tech		W10655462	Bracket, Blower (Right)	W10603939		Harness, Signal
2		Assembly, Control Panel (Includes Overlay)	11	4451758	Block, Foam	W10775068		Harness, Door Latch
	W10890576	Stainless	12		Skin, Control Panel	W10562910		Harness, EOL
3	W10777215	Control (With Power Supply)		W10588740	Stainless	W10766377		Harness, TOD Jumper
	W10777216	Control (Without Power Supply)	13	W10864102	Tray, Electronic		4450800	Screw, Grounding
4	W10618105	Spacer, Lateral	14	W10655465	Chassis, Back Divider		313438	Clip, Harness
5	W10669823	Blower	15	W10351295	Bumper		4452400	Strap, Lead Ground
6	W10657548	Gasket, Rubber	16	W10318192	Chassis, Cover Top Front 30"		4448664	Clamp, Conduit
7	W10436435	Fuse, Thermal	17	W10694465	Chassis, Cover Top Back 30"		W10655464	Bracket, Harness

# OVEN PARTS

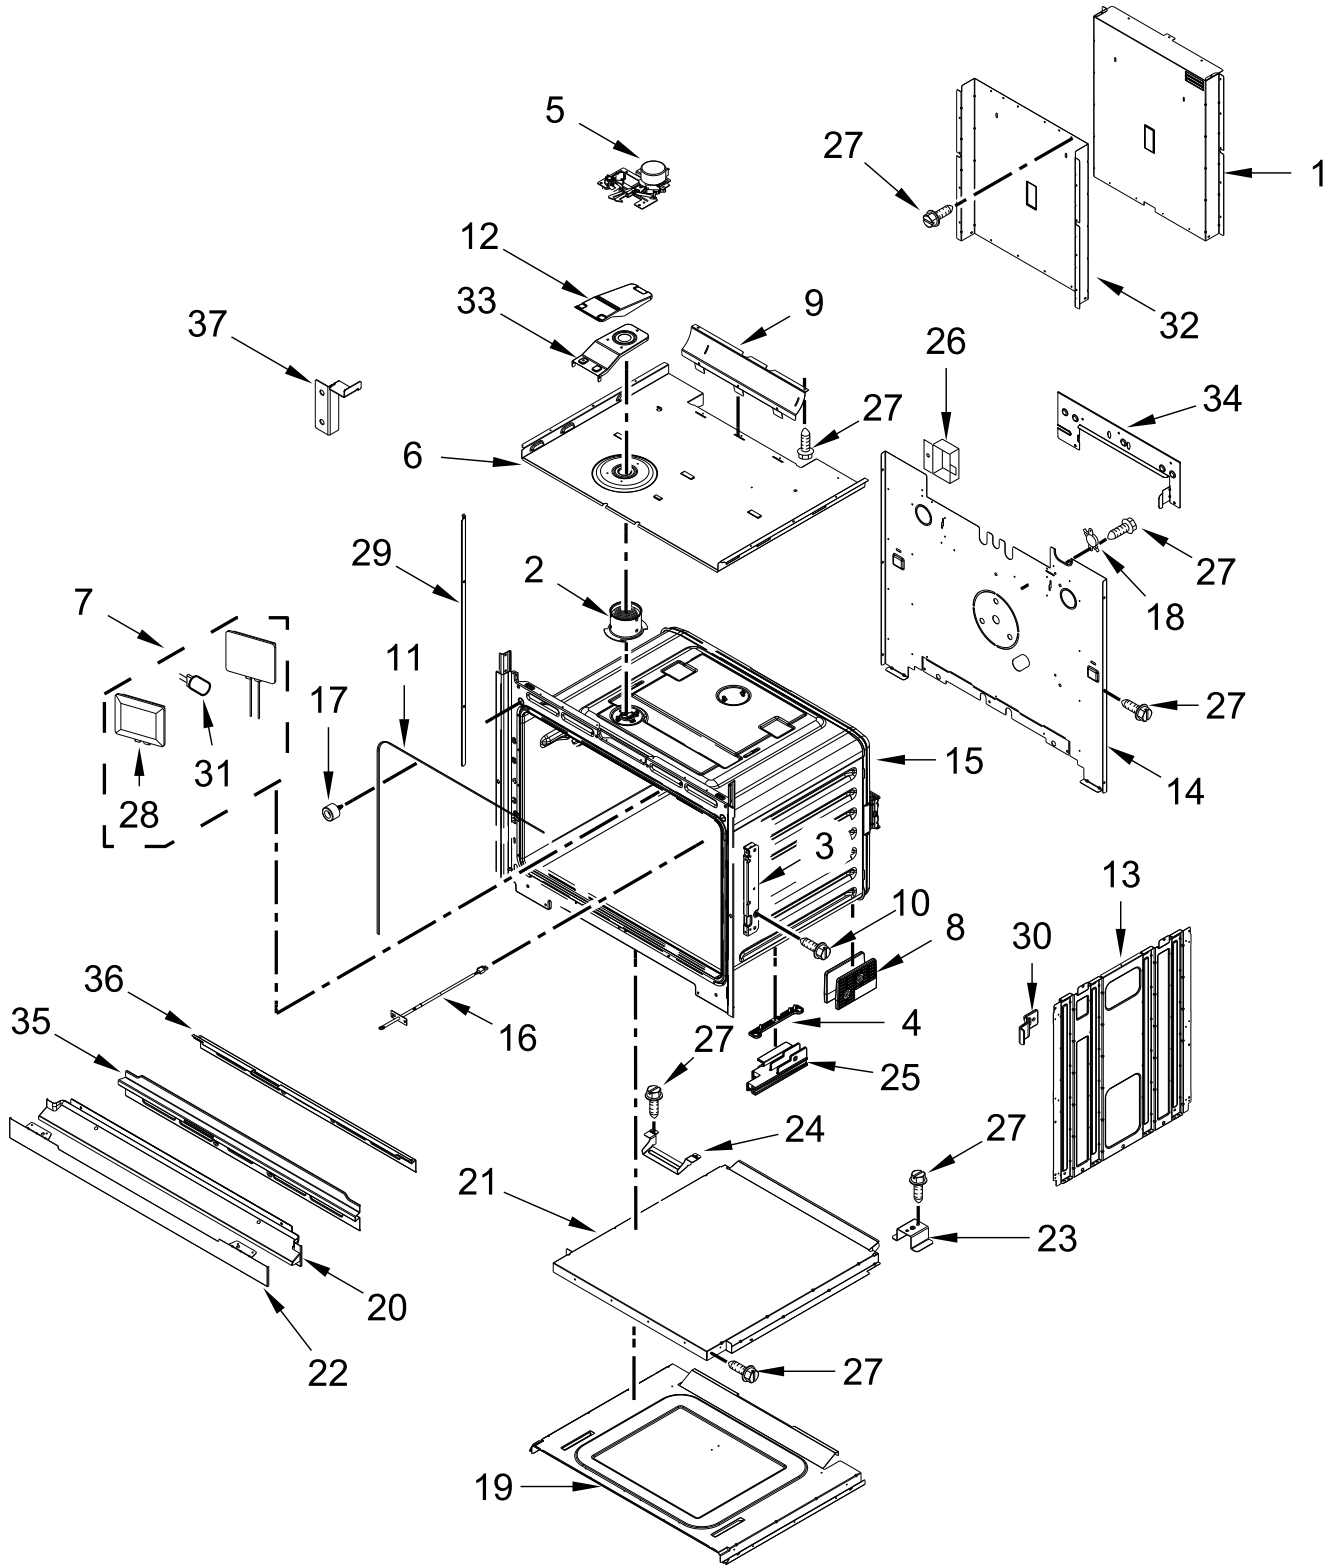


# OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10318196	Duct, Chassis Back (Upper)
2	W10282946	Tube, Vent
3	W10616802	Receiver, Hinge
4	W10618102	Spacer, Base
5	W10618131	Latch, Motorized
6	W10813743	Top, Chassis
7	W10519866	Assembly, Oven Light
8	W10618101	Foot, Base
9	W10641572	Deflector, Blower
10	W10254050	Screw
11	W10282960	Gasket
12	W10616810	Cover, Vent Exhaust
13	W10318190	Side, Chassis
14	W10813703	Back, Chassis
15		Liner, Oven (Not Serviceable)
16	W10622170	Probe, Sensor
17	W10351278	Bumper & Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
18	4449751	Thermostat (TOD)
19	W10834867	Base, Chassis
20		Assembly, Bottom Vent
	W10351279	Stainless
21	W10283008	Chassis, Bottom Duct
22		Trim, Bottom Vent
	W10327377	Stainless
23	W10213759	Support, Air Channel
24	W10351308	Spacer, Chassis Bottom Duct
25	W10618103	Foot, Front (Left)
	W10618104	Foot, Front (Right)
26	8285593	Cover, Connector
27	7101P426-60	Screw
28	W10472386	Lens, Light
29	W10327369	Cover, Side Trim (Left)
	W10327368	Cover, Side Trim (Right)
30	W10347649	Spacers, Front

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
31	W10472384	Bulb, Light
32	W10542857	Duct, Chassis Back (Lower)
33	W10616809	Base, Vent Exhaust
34	W10588736	Bracket, U-Shape
35	W10283040	Vent, Center 30"
36	W10283036	Vent, Top 30"
37	W10863233	Bracket, Side Cover (Right)
	W10863234	Bracket, Side Cover (Left)
		Following Parts Not Illustrated
	W10520715	Insulation, Wrap
	W10282944	Insulation, Cavity

# LOWER OVEN DOOR PARTS

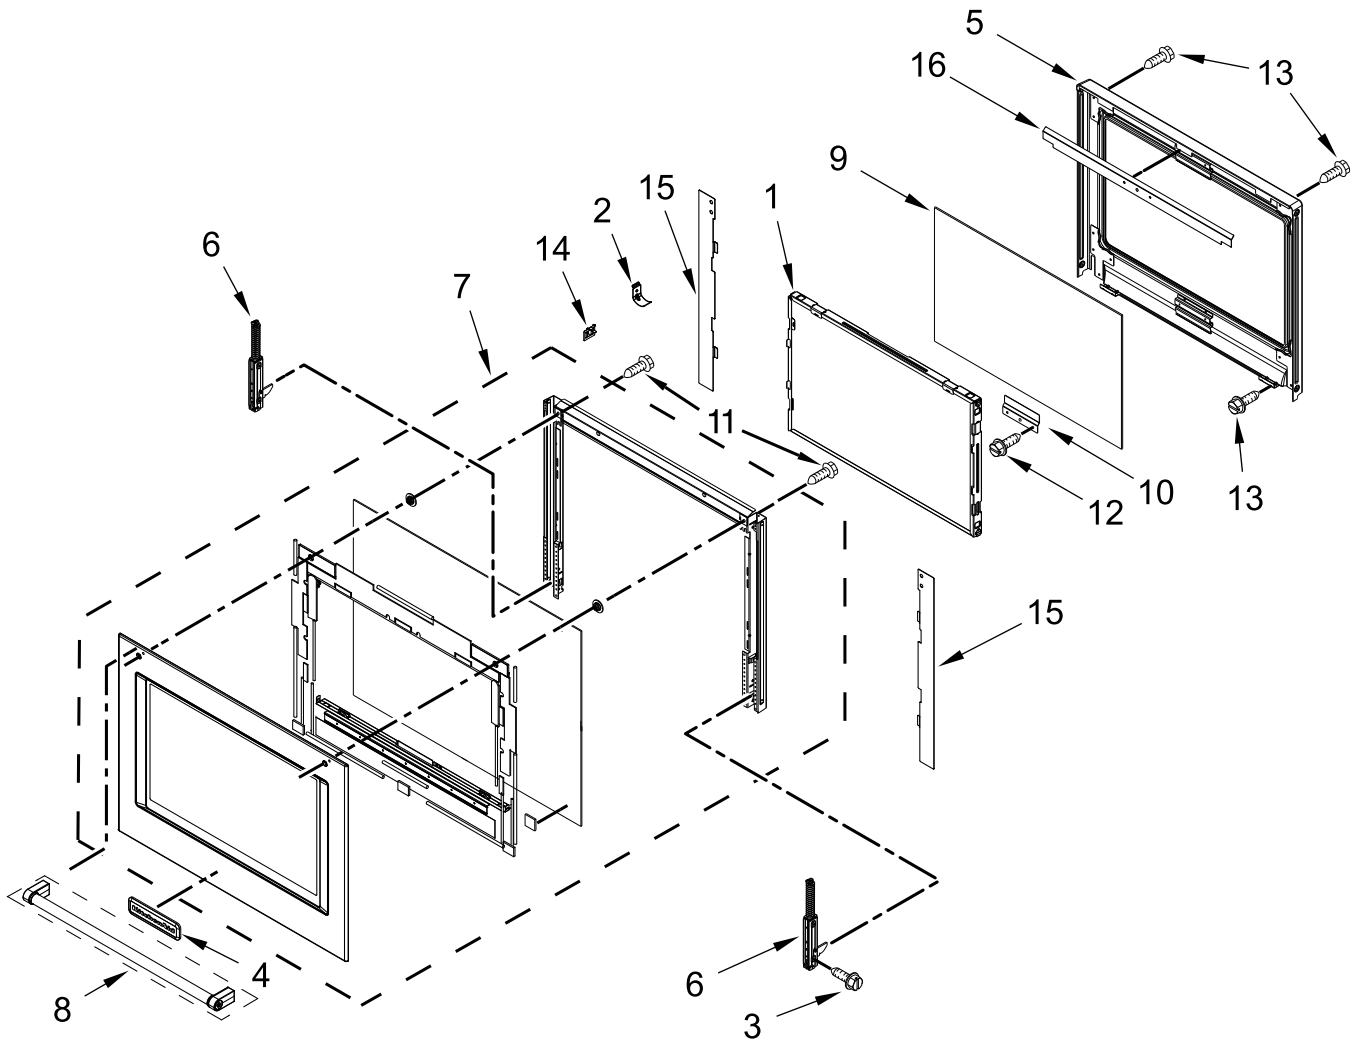


# LOWER OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10347596	Assembly, Window Pack
2	W10284285	Spring, Door Glass Fixation
3	3196183	Screw
4		Badge
	W10518672	Grey
5	W10709147	Assembly, Liner
6	W10639069	Hinge, Door

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7		Assembly, Door
	W10615236	Stainless
8		Assembly, Handle
	W10541913	Stainless
9	W10678524	Glass, Inner
10	W10284297	Bracket, Glass
11	W10480830	Screw
12	7101P426-60	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
13	7101P427-60	Screw
14	W10653954	Clip, Spring Metal
15	W10687815	Extension, Side Rail (Left)
	W10687814	Extension, Side Rail (Right)
16	W10669415	Shield, Door Liner

# UPPER OVEN DOOR PARTS

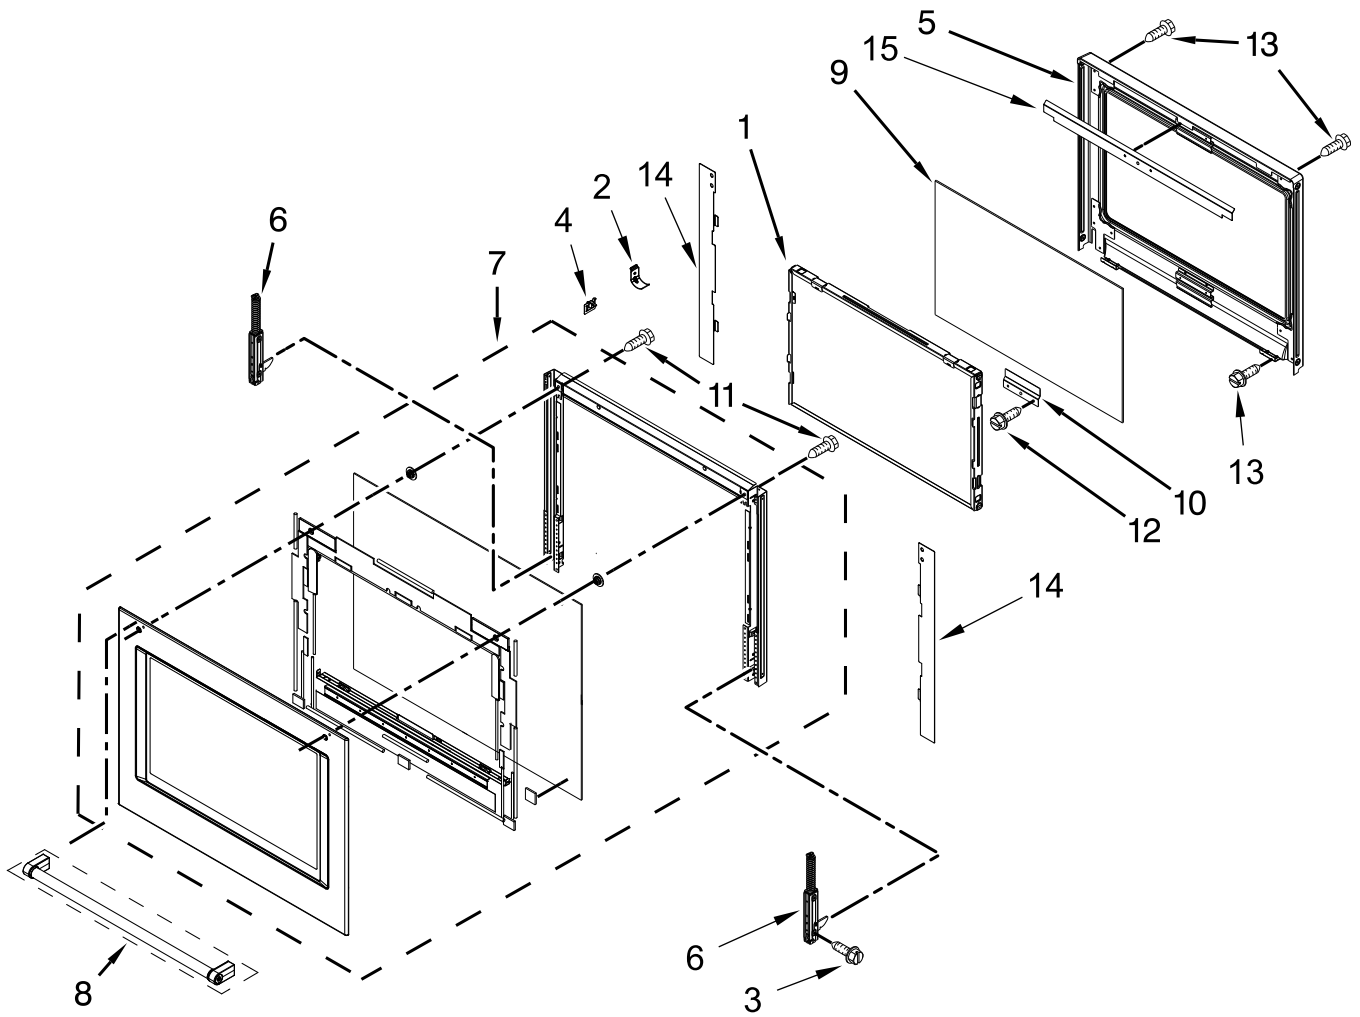




# UPPER OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10347596	Assembly, Window Pack
2	W10284285	Spring, Door Glass Fixation
3	3196183	Screw
4	W10653954	Clip, Spring Metal
5	W10709147	Assembly, Liner
6	W10639069	Hinge, Door

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7		Assembly, Door
	W10615236	Stainless
8		Assembly, Handle
	W10541913	Stainless
9	W10678524	Glass, Inner
10	W10284297	Bracket, Glass
11	W10480830	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
12	7101P426-60	Screw
13	7101P427-60	Screw
14	W10687815	Extension, Side Rail (Left)
	W10687814	Extension, Side Rail (Right)
15	W10669415	Shield, Door Liner

# INTERNAL OVEN PARTS

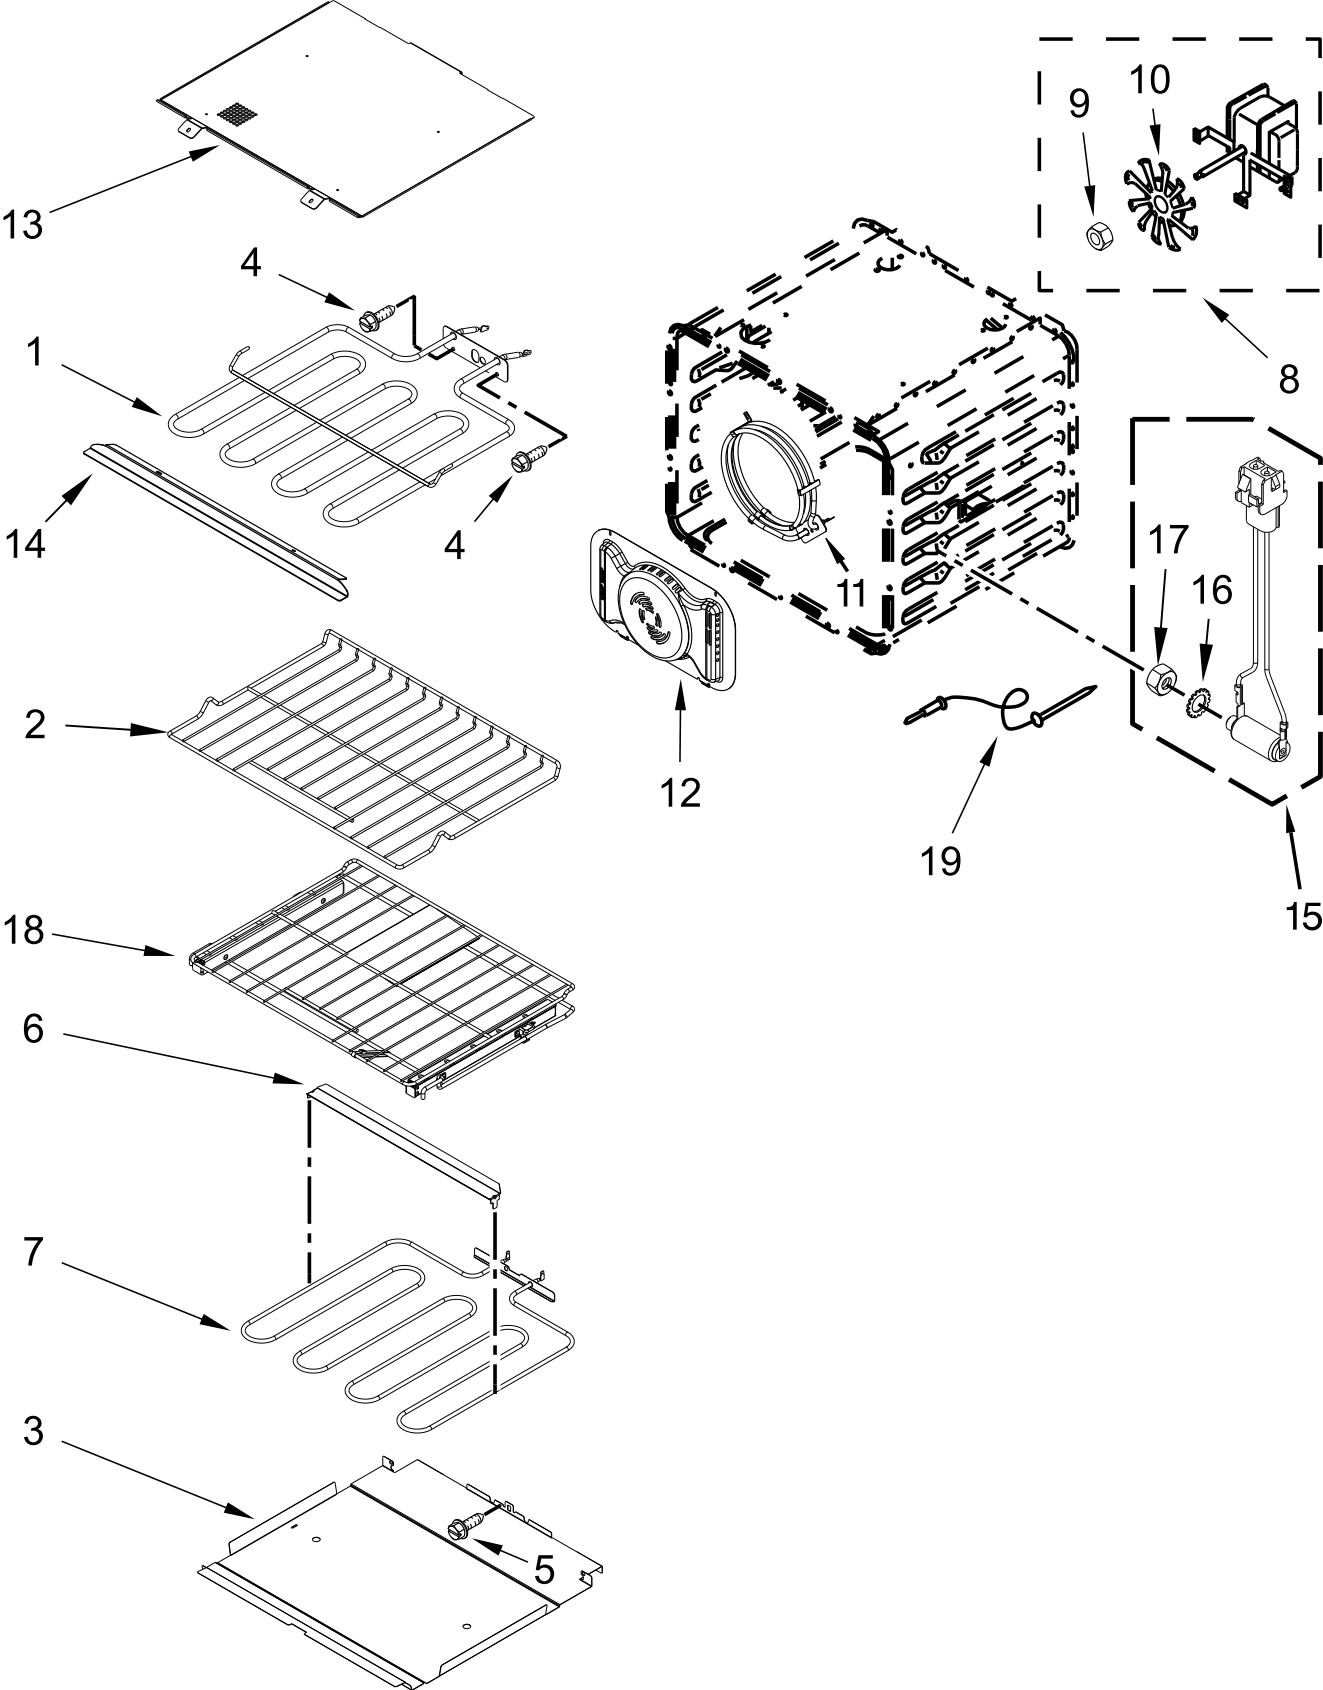

# INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10764078	Element, Broil
2	W10554526	Rack, Oven
3	W10318198	Tray, Hidden Bake
4	7101P635-60	Screw (Black)
5	7101P426-60	Screw
6	W10282957	Crossbar, Hidden Bake Tray
7	W10546517	Element, Bake

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
8	W10722667	Fan, Convection
9	W10631504	Nut, Acorn
10	W10631503	Blade, Fan
11	W10546519	Element, Convection
12	W10359277	Baffle, Bow Tie
13	W10318164	Shield, Broil Element
14	W10588738	Shield, Broil Front

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
15	W10696226	Jack, Meat Probe
16	9755547	Washer, Lock
17	9755546	Nut, Hidden
18	W10554531	Rack, Sliding
19	9755542	Probe, Temperature

# OPTIONAL PARTS

## **PAINT, TOUCH-UP (1/2OZ.)**

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

## **PAINT, SPRAY**

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	4392901	Biscuit/Bisque
	350956	Almond
	350942	White Primer
	350938	Gray Primer

## **ADHESIVE**

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	482338	Sealer, Silastic

## **ACCESSORIES**

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan & Roasting
	W10355016	Cleaner, Stainless Steel
	W10355010	Cleaner, Kitchen & Appliance
	W10355049	Wipes, Stainless Steel Cleaning
	W10275756	Cleaner, Granite