



**KitchenAid®**

**30" ELECTRIC DOUBLE OVEN RANGE**

**MODELS:**

KFED500EBL01 (Black)  
KFED500EWH01 (White)  
KFED500ESS01 (Stainless)

# COOKTOP PARTS

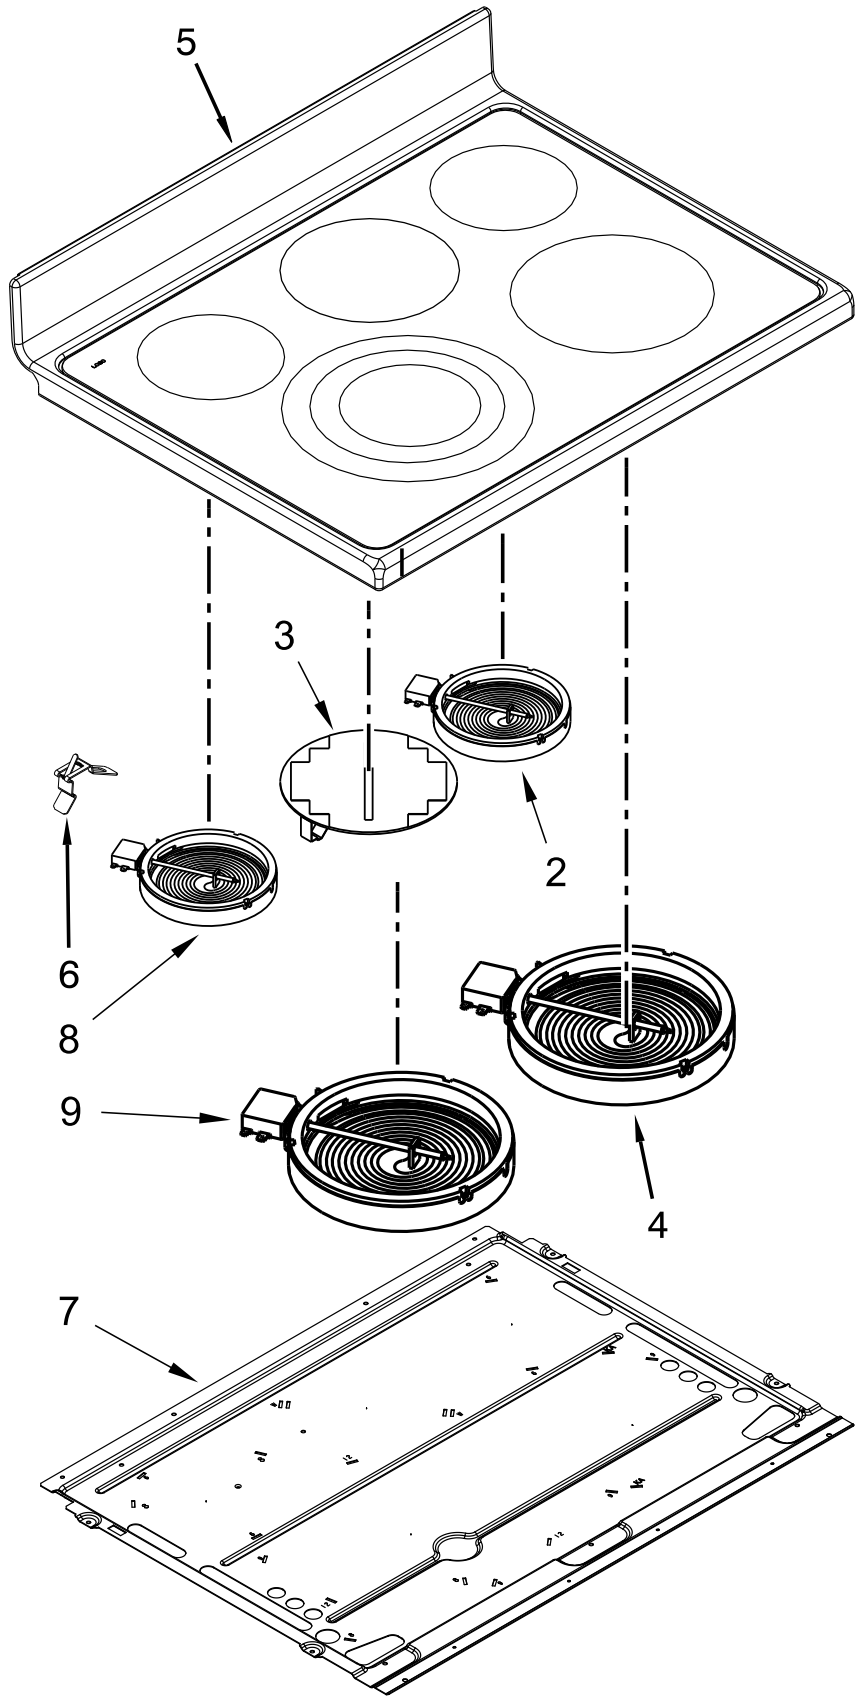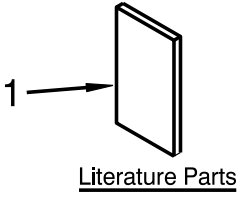


# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts
	W10694055	Guide, Use & Care
	W10694065	Instructions, Installation
	W10647745	Sheet, Tech
	9762761	Tips, Safe Cooking (English)
2	8273994	Element (1200W) (Right Rear)
3	9762851	Element, Warm Zone (120V)
4	W10251108	Element (3200W) (Right Front)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
5		Cooktop
	W10687990	Black
	W10687989	White
	W10687991	Stainless
6	W10225448	Spring, Element
7	W10260946	Support, Element
8	W10270604	Element (700W) (Left Rear)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
9	W10259005	Element (2700W) (Left Front)
		FOLLOWING PARTS NOT ILLUSTRATED
	W10745675	Harness, Main
	W10406512	Harness, Infinite Switch (Left)
	W10406501	Harness, Infinite Switch (Right)
	W10409840	Harness, EOL (MRC)
	W10745683	Harness, Sensor & Locks
	W10219254	Harness, Cooktop
	7101P027-60	Screw, Ground
	7401P157-60	Block, Bare Wire Adapter
	8019P013-60	Clip, Wire Lock

# CONTROL PANEL PARTS

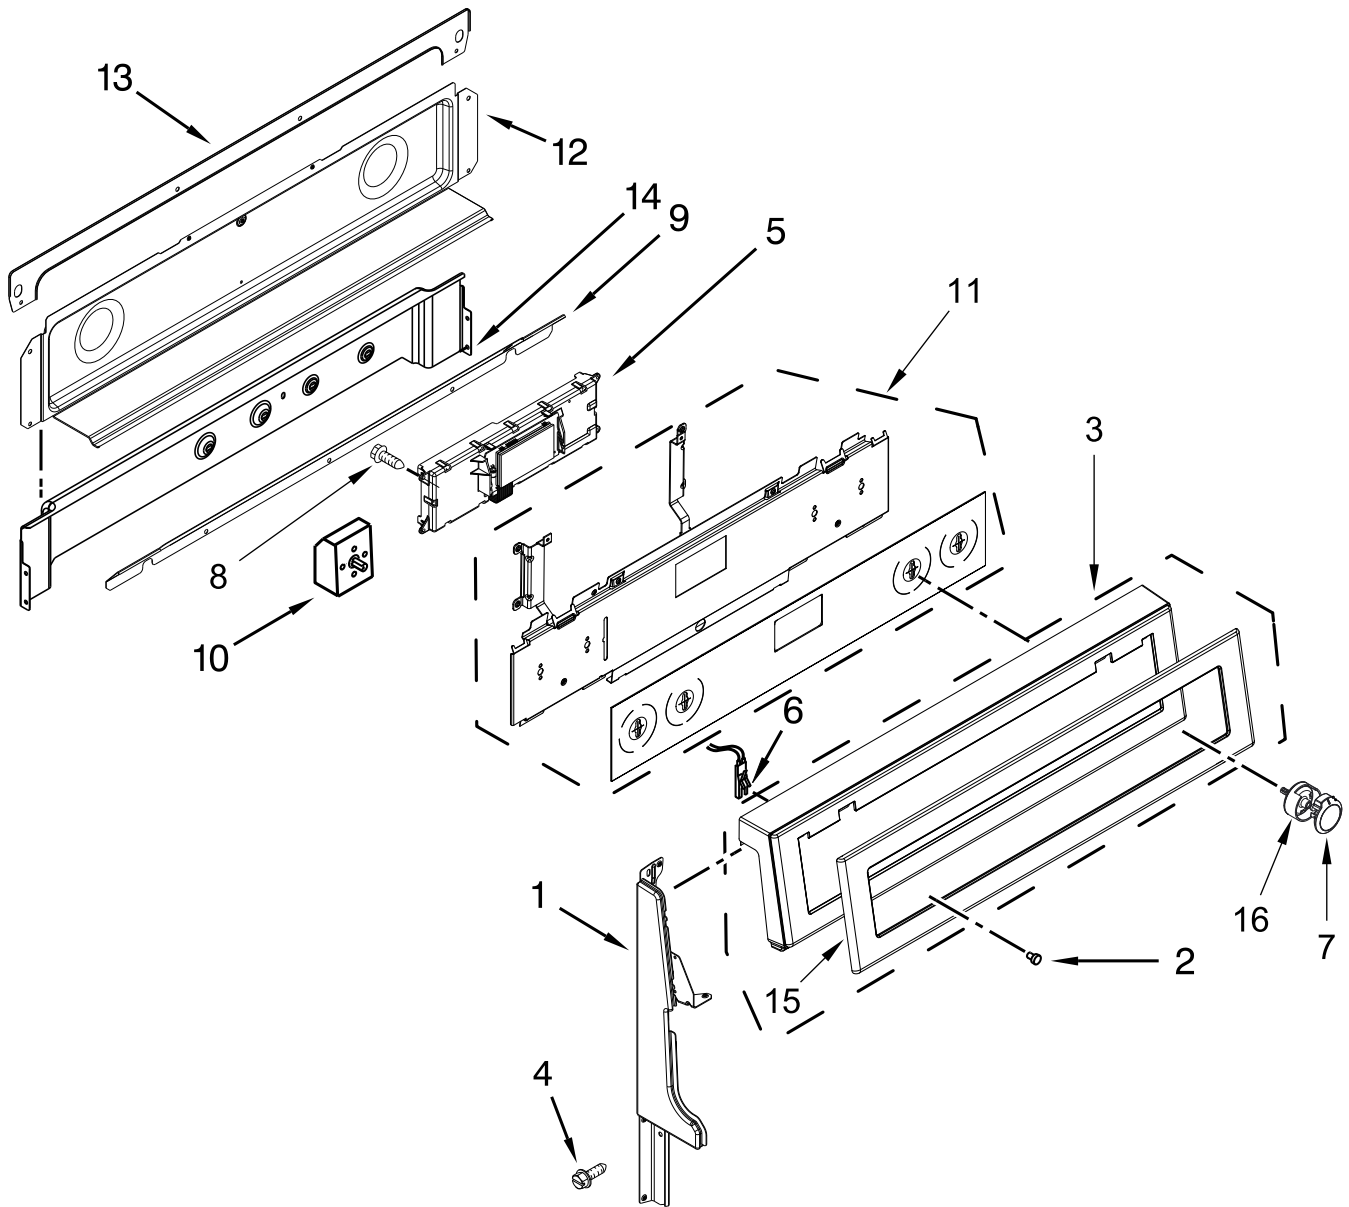


# CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Support, Backguard
	W10782761	Black (Left)
	W10782763	Black (Right)
	W10782762	White (Left)
	W10782764	White (Right)
2	3196068	Lens, Indicator
3		Console
	W10645852	Black
	W10645853	White
	W10645854	Stainless
4	7101P633-60	Screw (Black)
5	W10778305	Control, Electronic
6	7407P136-60	Light, Indicator

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
7		Knob
	W10712809	Stainless
8	7101P434-60	Screw
9	W10299338	Shield, Wire Cover
10	W10296657	Switch, Infinite (Left Front)
	W10295048	Switch, Infinite (Left Rear)
	W10441696	Switch, Infinite (Right Front)
	7403P373-60	Switch, Infinite (Right Rear)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
11		Assembly, User Interface
	W10692155	Black
	W10645824	White
12	W10776098	Cover, Backguard
13	W10292689	Cover, Wire Filler
14	W10278697	Shield, Vent
15		Skin, Control Panel
	W10645840	Black
	W10645841	White
	W10645842	Stainless
16	W10645811	Bezel


# CHASSIS PARTS

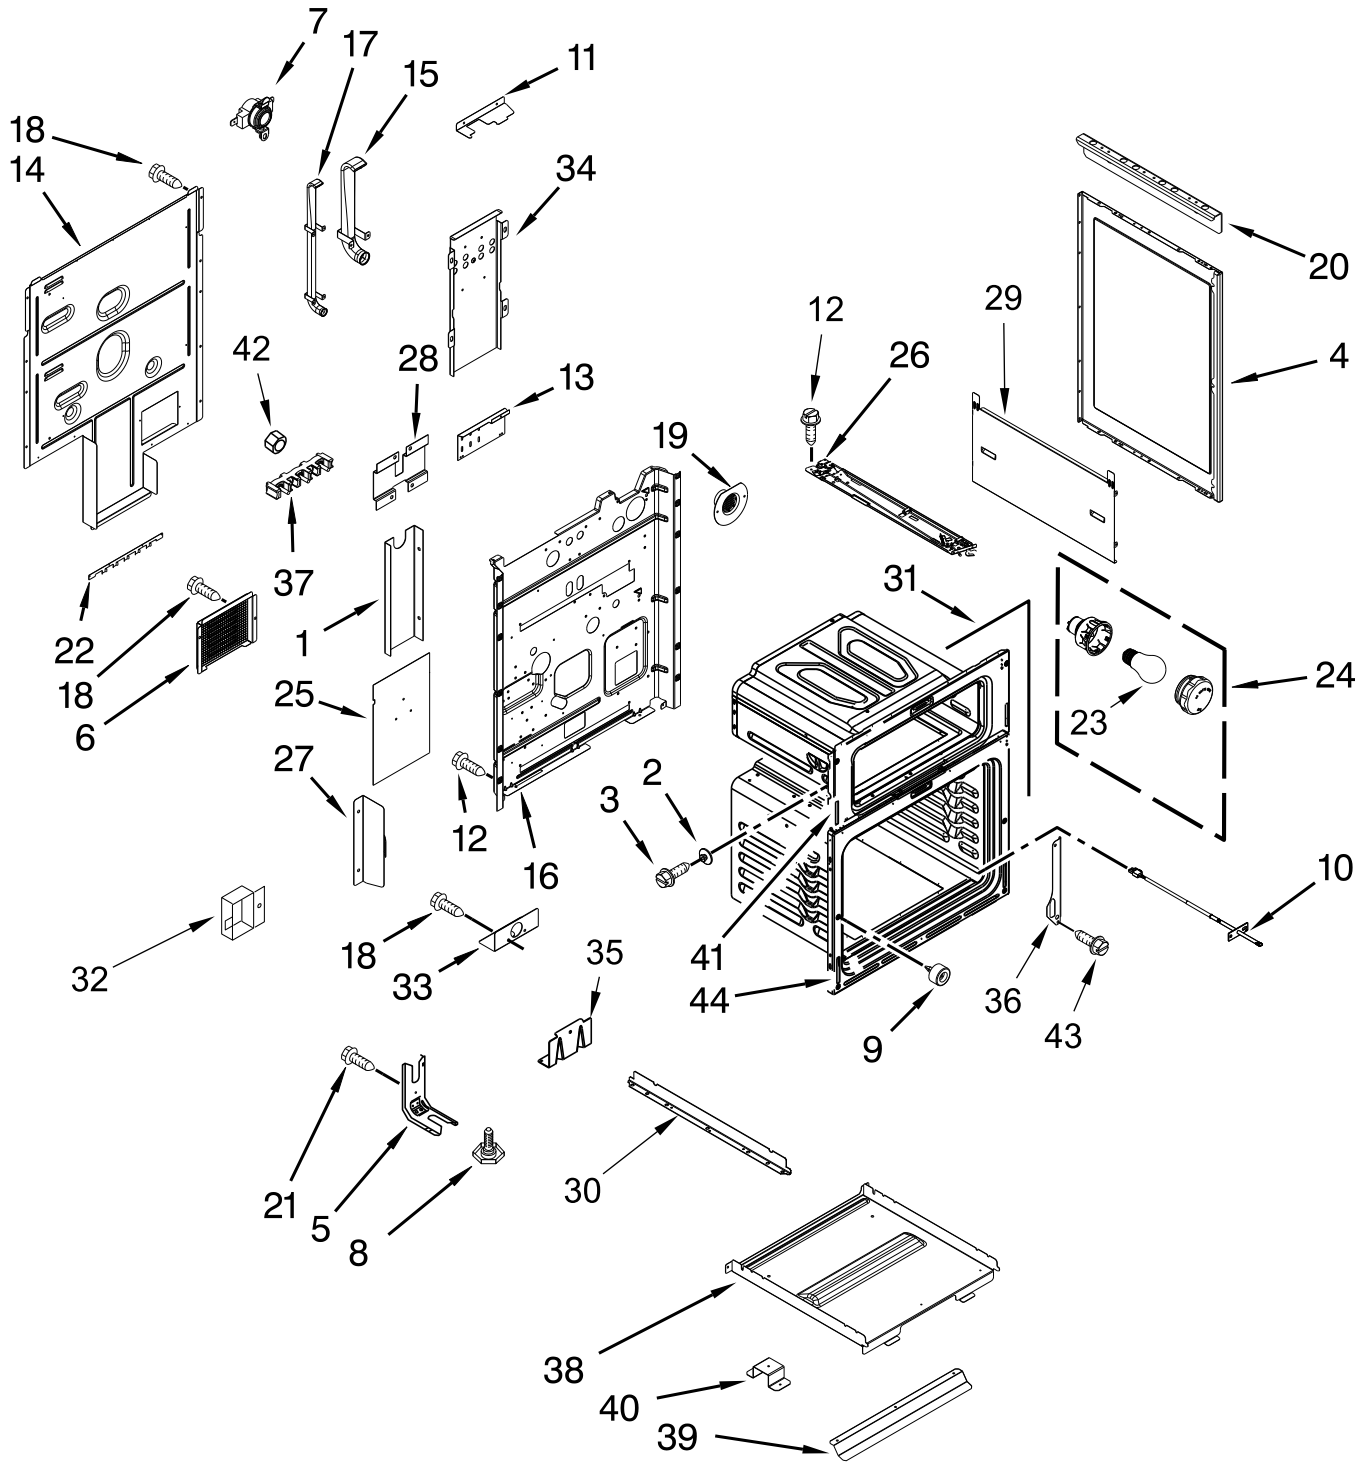

# CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10332459	Shield, Heat	20	W10319087	Bracket, U Channel	36	W10410463	Cover, Hinge (Left)
2	W10237689	Spacer, Side Panel	21	7101P485-60	Screw, Anti-Tip Kit		W10410461	Cover, Hinge (Right)
3	W10267456	Screw, Shoulder	22	8036P012-60	Shield, Power Cord	37	W10245259	Block, Terminal
4		Panel, Side	23	311255	Bulb, Oven Light	38	W10548601	Pan, Element
	W10668723	Black	24	W10454648	Assembly, Light	39	W10253470	Bracket, Retaining
	W10668724	White	25	W10311987	Shield, Cord (Right)	40	W10260545	Clip, Retaining
5	3801F656-51	Bracket, Anti-Tip	26	W10683517	Lock, Rear Mount	41	W10606341	Front, Main (Upper)
6	W10312612	Cover, Access (Terminal Block)	27	W10268560	Cover, Wire Lower	42	3400029	Nut
7	7403P899-60	Switch, High Limit	28	7003P104-60	Insulator, Heat Shield	43	4449040	Screw
8	7101P507-60	Foot, Leveler	29	W10538516	Shield, Side Insulation	44	W10308654	Front, Main (Lower)
9	W10105790	Bumper & Screw	30	W10357697	Bracket, Side Panel			INSULATION
10	7430P044-60	Sensor, Oven	31	W10337392	Gasket, Oven Door	W10271637		Insulation, Floor
11	W10268559	Cover, Lower Wire			(Upper)	W10308393		Insulation, Wrapper
12	7101P426-60	Screw		W10269069	Gasket, Oven Door	W10322111		Insulation, Back
13	W10332449	Shield, Cord			(Lower)	W10204079		Insulation, Middle
14	W10261386	Cover, Main Wire	32	8285593	Cover, Connector	W10204085		Insulation, Main Front Strip
15	W10337391	Tube, Vent (Upper)	33	W10190166	Bracket, Power Supply	W10272326		Insulation, Hidden Bake Pouch
16	W10668730	Back, Main	34	W10261388	Bracket, Terminal			
17	W10323793	Tube, Vent (Lower)	35	W10260703	Support, Lower Oven			
18	7101P434-60	Screw						
19	W10322408	Adapter, Vent Tube						

# INTERNAL OVEN PARTS

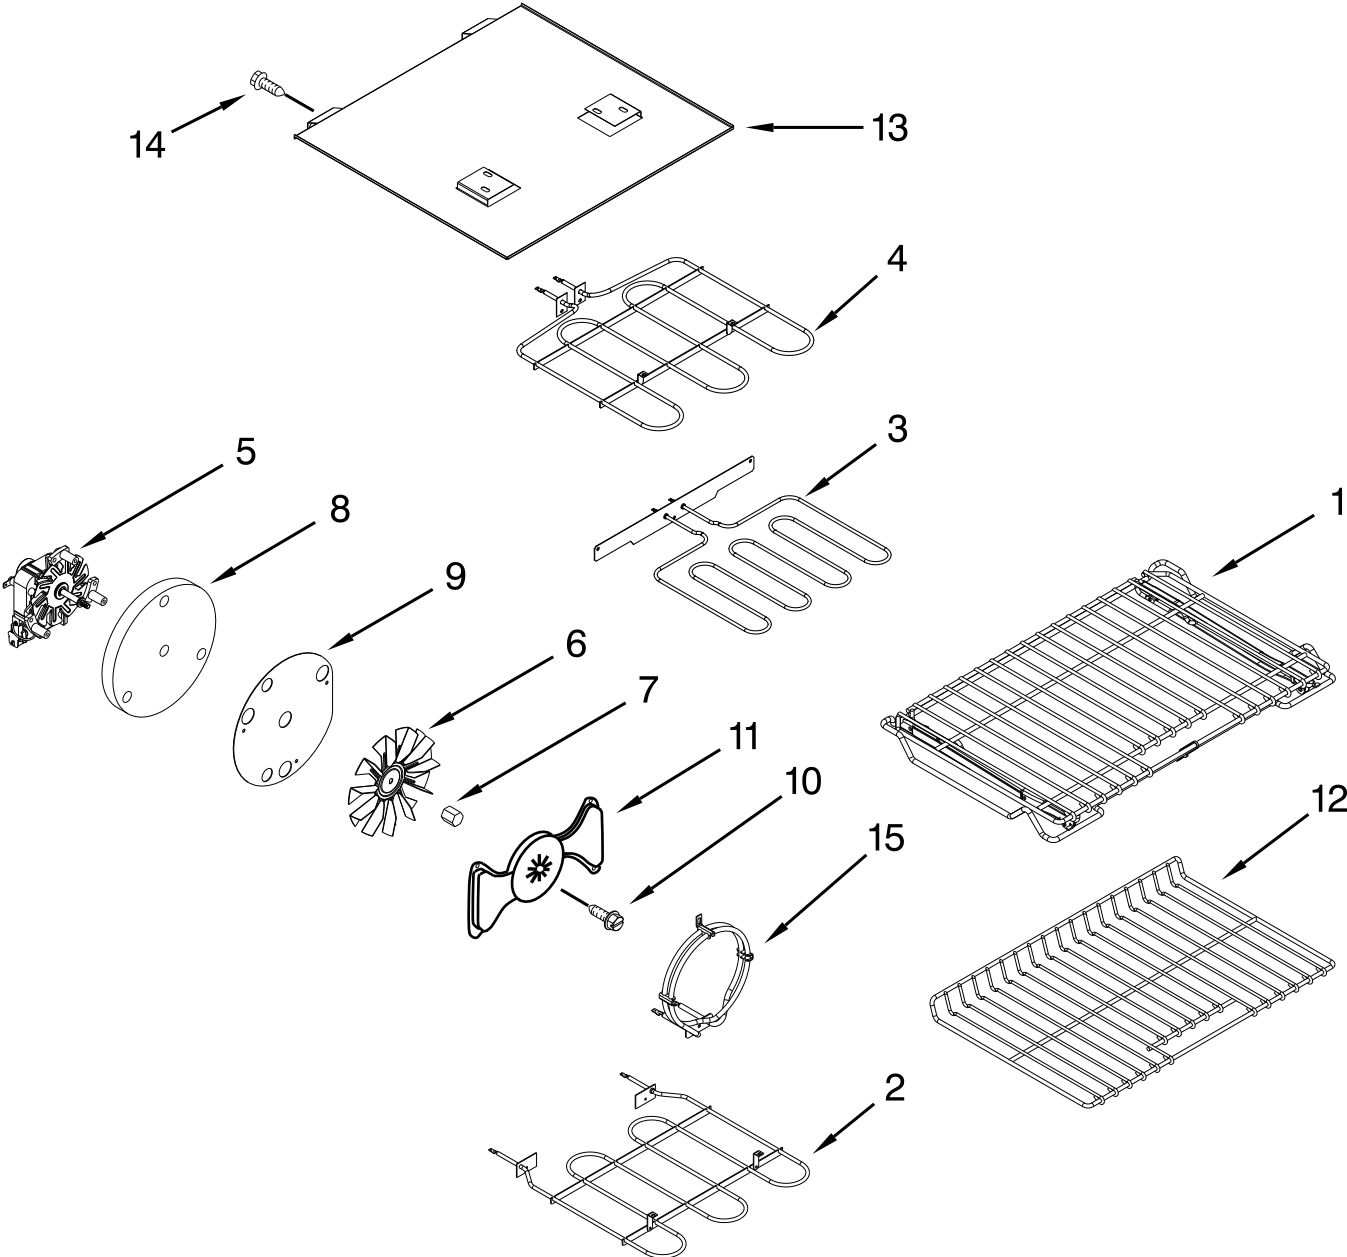




# INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10570870	Rack, Oven (Telescoping)	5	W10631505	Fan, Convection	11	8303962BU	Cover, Fan
2	W10249979	Element, Broil (Lower)	6	W10631503	Blade, Fan	12	W10570887	Rack, Oven
3	W10249981	Element, Bake (Upper & Lower)	7	W10631504	Nut, Acorn	13	W10319762	Shield, Broil
4	W10317476	Element, Broil (Upper)	8	W10274268	Insulation, Convection Motor	14	7101P434-60	Screw
			9	W10339476	Plate, Insulation	15	W10271639	Element, Convection (240VAC)
			10	4449154	Screw			

# UPPER DOOR PARTS

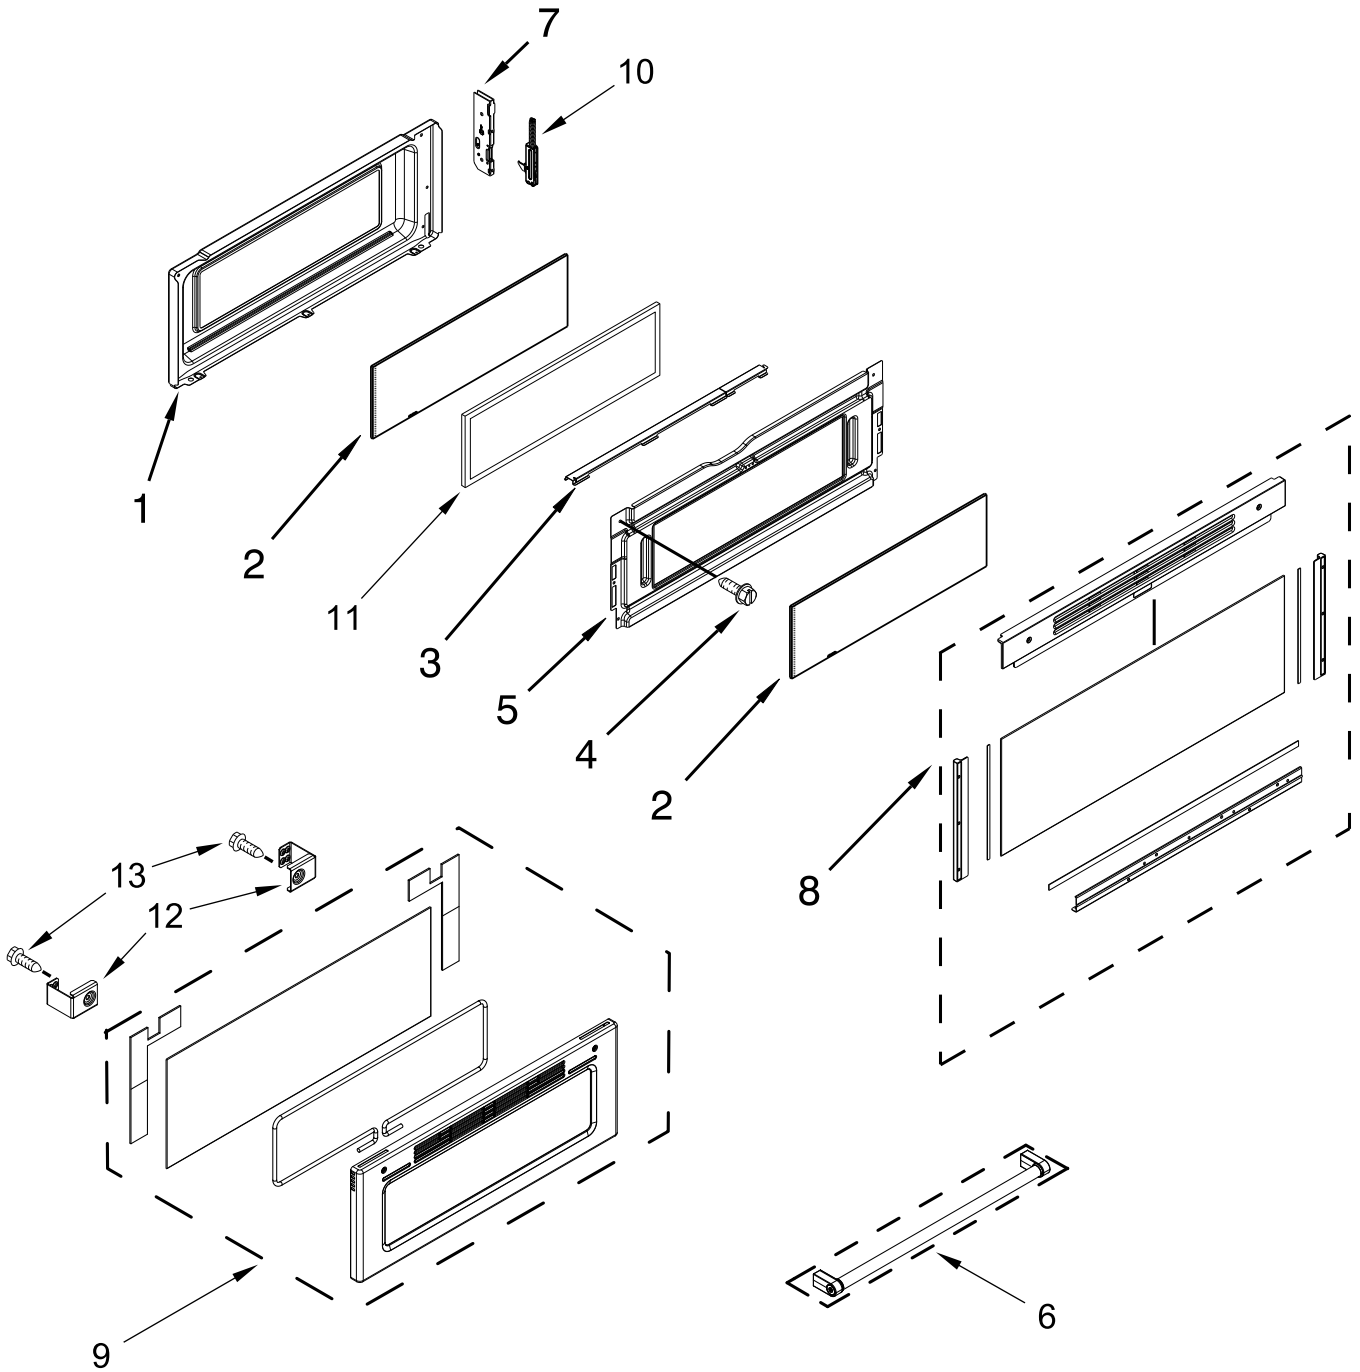


# UPPER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10485721	Lining, Door
2	W10272707	Glass, Inner
3	W10272708	Frame, Glass
4	W10292297	Screw
5	W10485723	Retainer, Insulation
6		Assembly, Handle
	W10674700	Black
	W10674699	White
	W10674701	Stainless

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10289077	Receiver, Hinge
8		Assembly, Door
	W10654438	Black
	W10654437	White
9		Assembly, Door
	W10645192	Stainless
10	W10485733	Hinge, Door (Left)
	W10485732	Hinge, Door (Right)
11	W10321271	Insulation, Door

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
12	W10645182	Bracket, Door Handle
		(Stainless Models Only)
13	W10480830	Screw

# LOWER DOOR PARTS

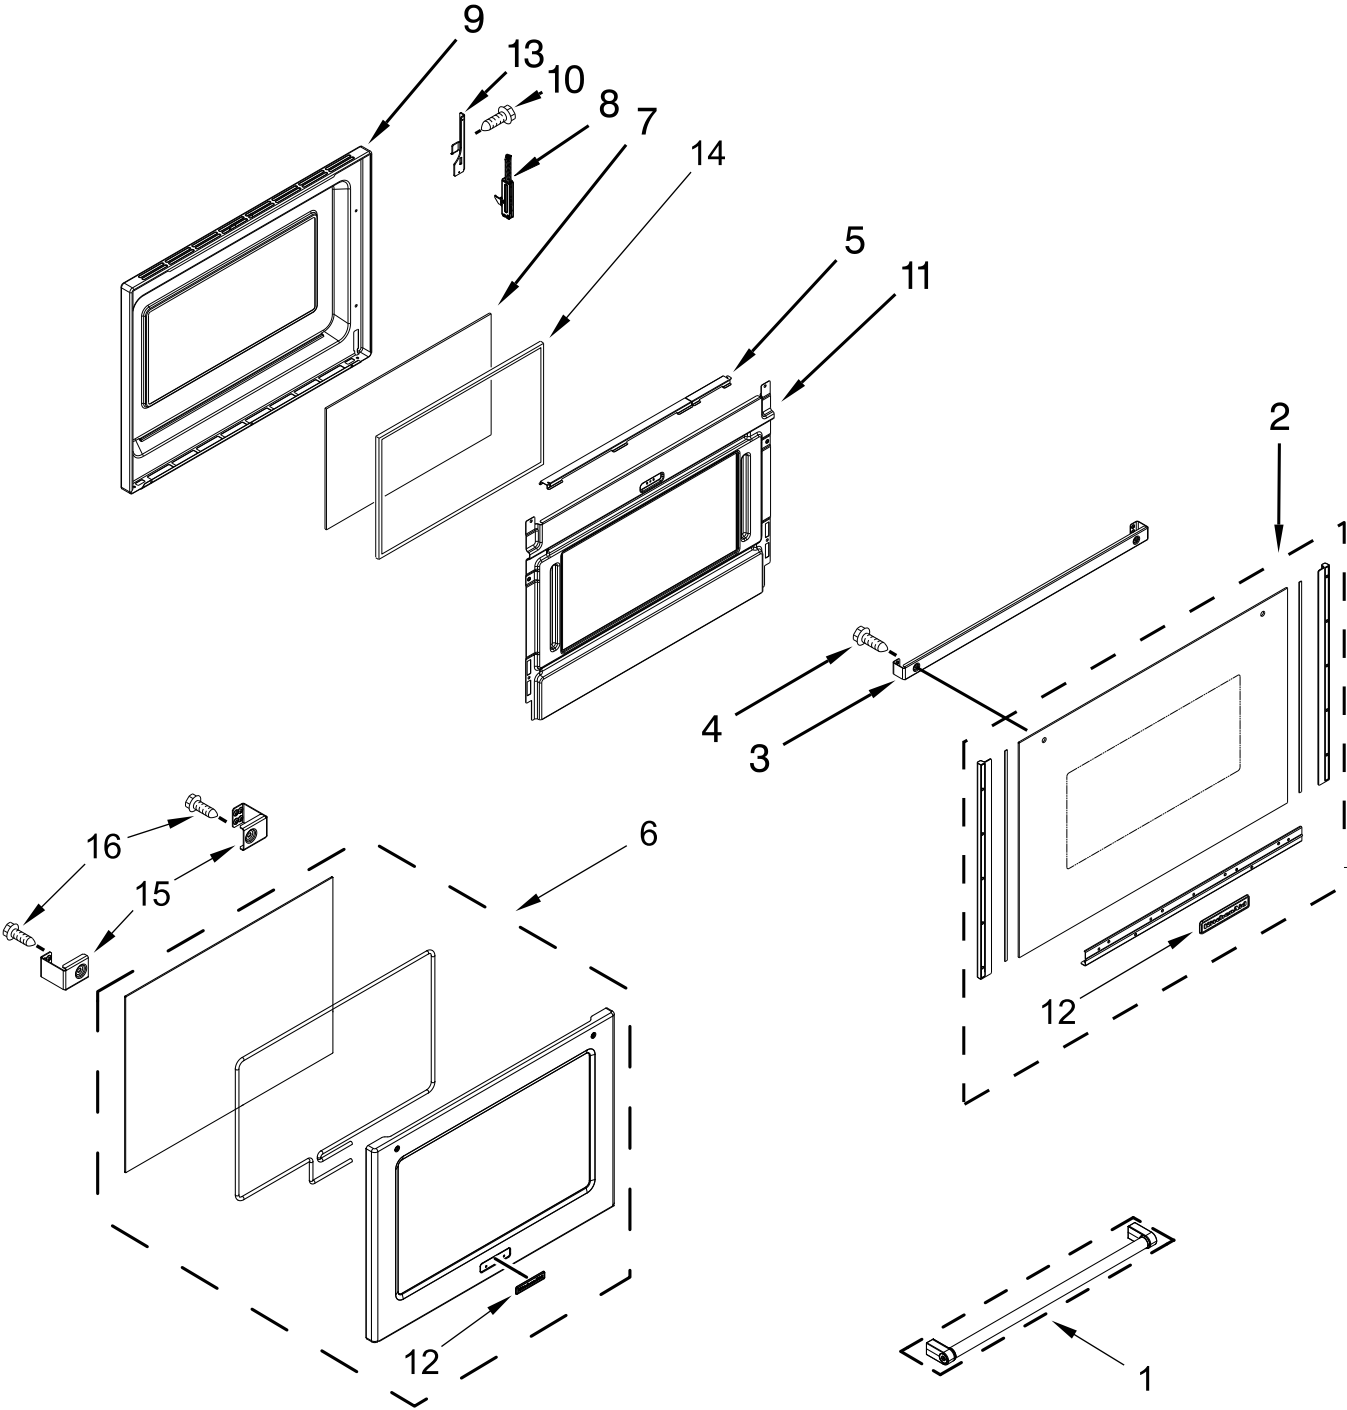

# LOWER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Handle
	W10674700	Black
	W10674699	White
	W10674701	Stainless
2		Assembly, Door
	W10654432	Black
	W10654431	White
3	W10294695	Bracket, Handle
4	W10317886	Screw
5	W10272594	Frame, Glass
6		Assembly, Door
	W10645181	Stainless

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	9757706	Glass, Inner
8	W10335434	Hinge, Door (Left)
	W10335433	Hinge, Door (Right)
9	W10292008	Lining, Door
10	4449040	Screw
11	W10340464	Retainer, Insulation
12		Badge
	W10518672	Grey
13	W10272329	Receiver (Left)
	W10272328	Receiver (Right)
14	W10321285	Insulation, Door

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
15	W10645182	Bracket, Door Handle (Stainless Models Only)
16	W10480830	Screw

# OPTIONAL PARTS (NOT INCLUDED)

## PAIN, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

## PAIN, SPRAY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	4392901	Biscuit/Bisque
	285006	Black
	350956	Almond
	350938	Gray Primer
	350942	White Primer

## ACCESSORIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan & Roasting
	W10355016	Cleaner, Stainless Steel
	W10355010	Cleaner, Kitchen & Appliance
	W10355049	Wipes, Stainless Steel Cleaning