


KitchenAid®

30" GAS DOUBLE OVEN CONVECTION RANGE

MODELS:

KFGD500EBL04 (Black)
KFGD500EWH04 (White)
KFGD500ESS04 (Stainless)

COOKTOP PARTS

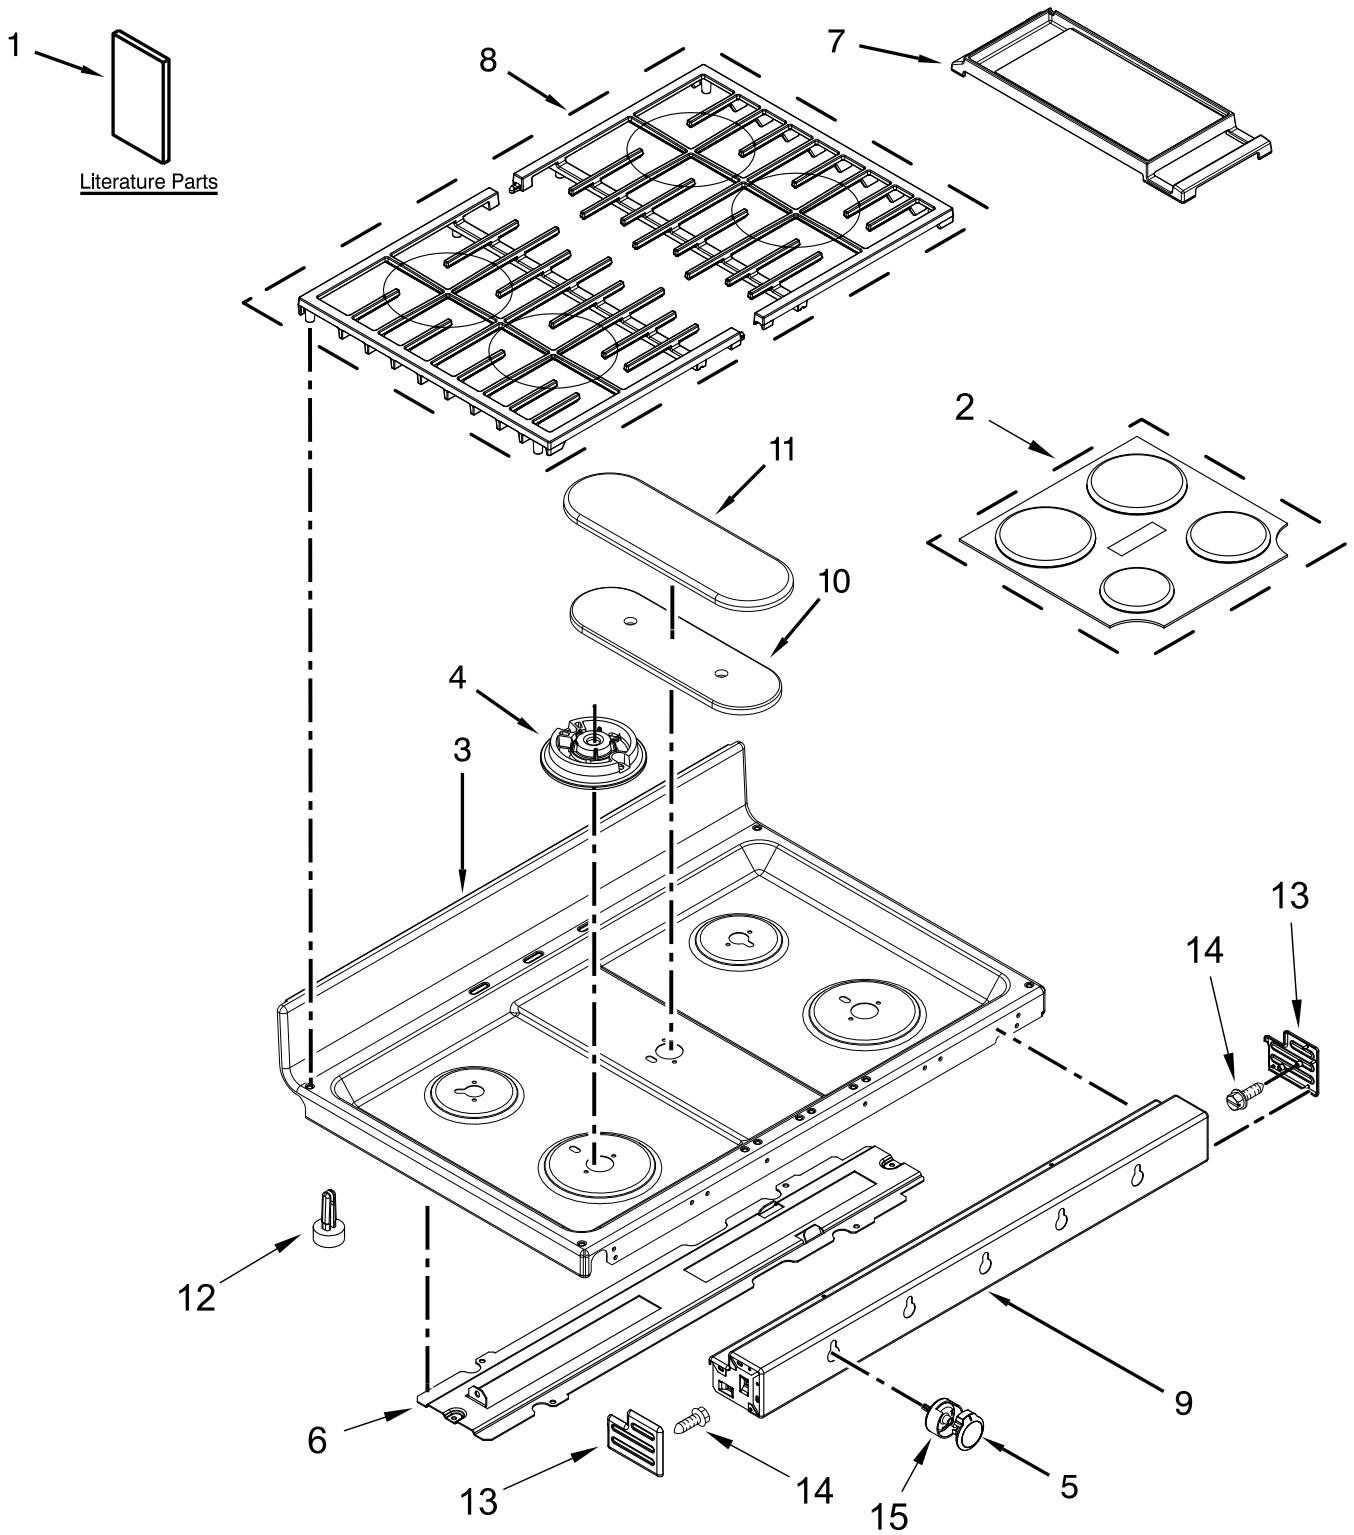


COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts
	W10694059	Guide, Use & Care
	W10694069	Instructions, Installation
	W10647745	Sheet, Tech
	9762761	Tips, Safe Cooking (English)
	W10065852	Tips, Safe Cooking (French)
2		Kit, Burner Cap
	W10299236	Black
3		Cooktop
	W10260169	Black
	W10260170	White
	W10330921	Stainless
4	W10406878	Head, Burner (17.5K)
		(Left Front)
	W10406243	Head, Burner (6K)
		(Left Rear & Right Rear)
	W10406797	Head, Burner (Right Front)
	W10336094	Head, Burner (Center)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
5		Knob, Control
	W10643306	Stainless
6	W10518258	Bracket, Cooktop Support
7	W10432544	Griddle
8	W10649701	Kit, Grate
9		Panel, Manifold
	W10708335	Black
	W10708334	White
	W10711043	Stainless
10	W10333445	Base, Burner (Fish Burner Only)
11		Kit, Burner Cap (Fish Burner Only)
	W10171140	Black
12	8016P022-60	Glide, Main Top
13		Endcap, Manifold
	W10719582	Black (Left)
	W10719581	Black (Right)
	W10719580	White (Left)
	W10719579	White (Right)
	W10772020	Stainless (Left)
	W10772019	Stainless (Right)
14	3196160	Screw

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
15		Bezel
	W10785119	Stainless
		FOLLOWING PARTS NOT ILLUSTRATED
	W10745674	Harness, Main
	W10519934	Harness, DSI 200C
	W10409840	Harness, EOL (MRC)
	W10408058	Harness, Spark
	W10745683	Harness, Sensor & Locks
	7111P017-60	Clamp, Wire
	8019P026-60	Clip, Wire

CONTROL PANEL PARTS

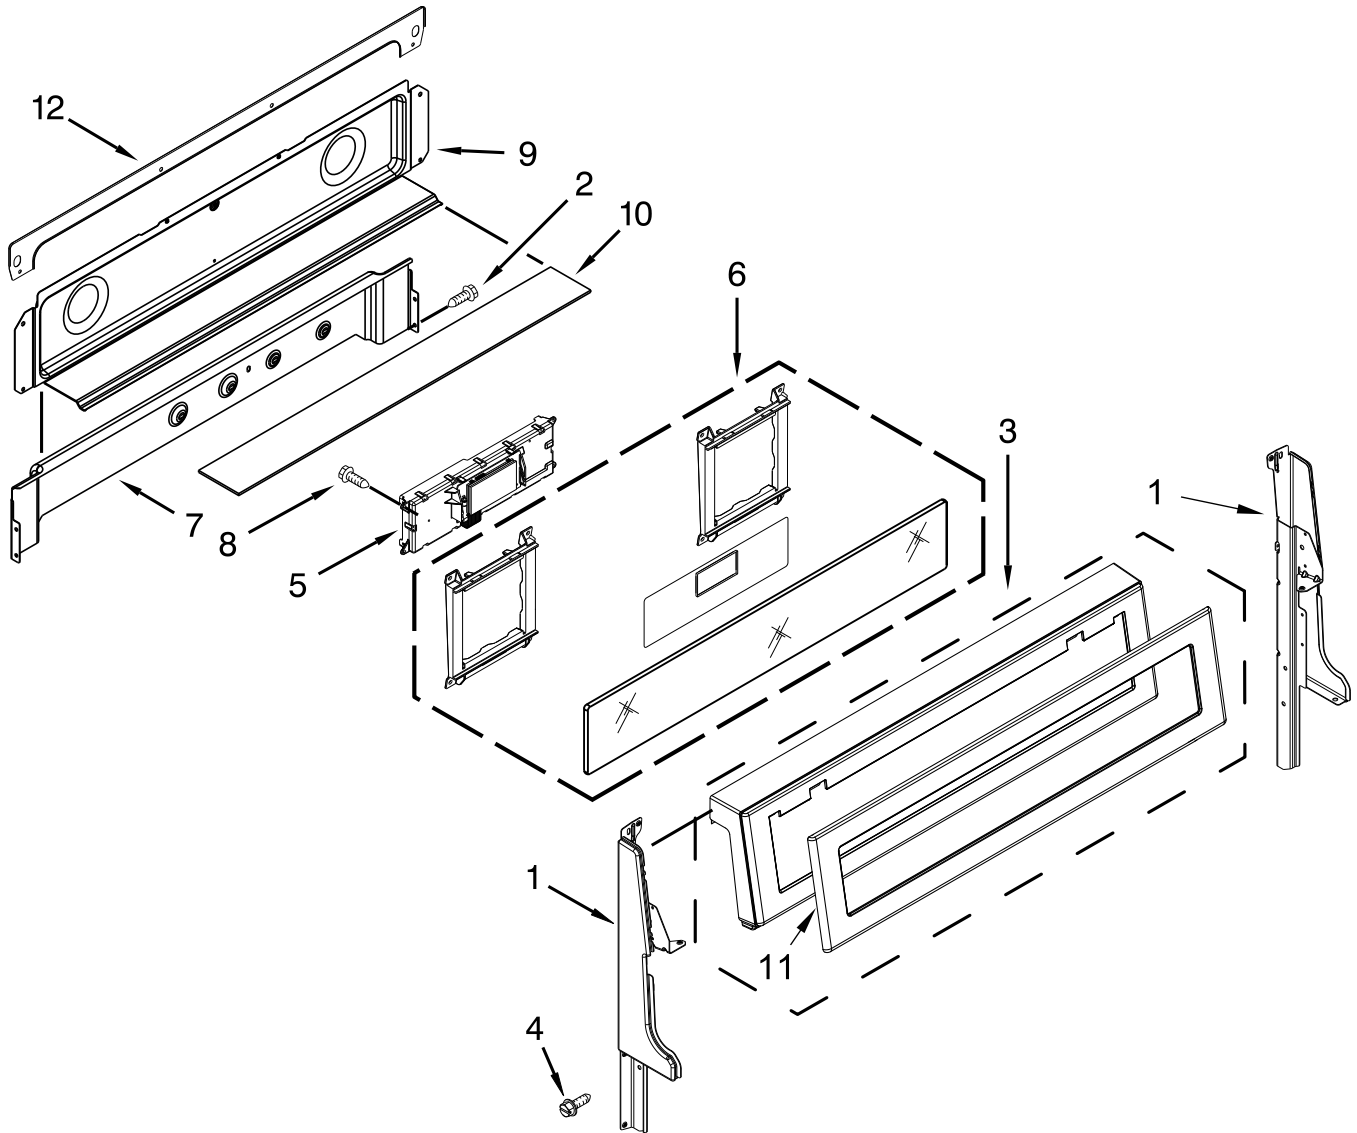


CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Support, Backguard
	W10319109	Black (Left)
	W10319111	Black (Right)
	W10319110	White (Left)
	W10319112	White (Right)
2	7101P426-60	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3		Console
	W10645852	Black
	W10645853	White
	W10645854	Stainless
4	7101P634-60	Screw
5	W10873168	Control, Electronic
6		Assembly, User Interface
	W10619109	Black
	W10692424	White

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10278697	Shield, Vent
8	7101P434-60	Screw
9	W10776098	Cover, Backguard
10	W10309232	Insulation, Wire Cover
11		Skin, Control Panel
	W10645840	Black
	W10645841	White
	W10645842	Stainless
12	W10292689	Cover, Wire Filler

MANIFOLD PARTS

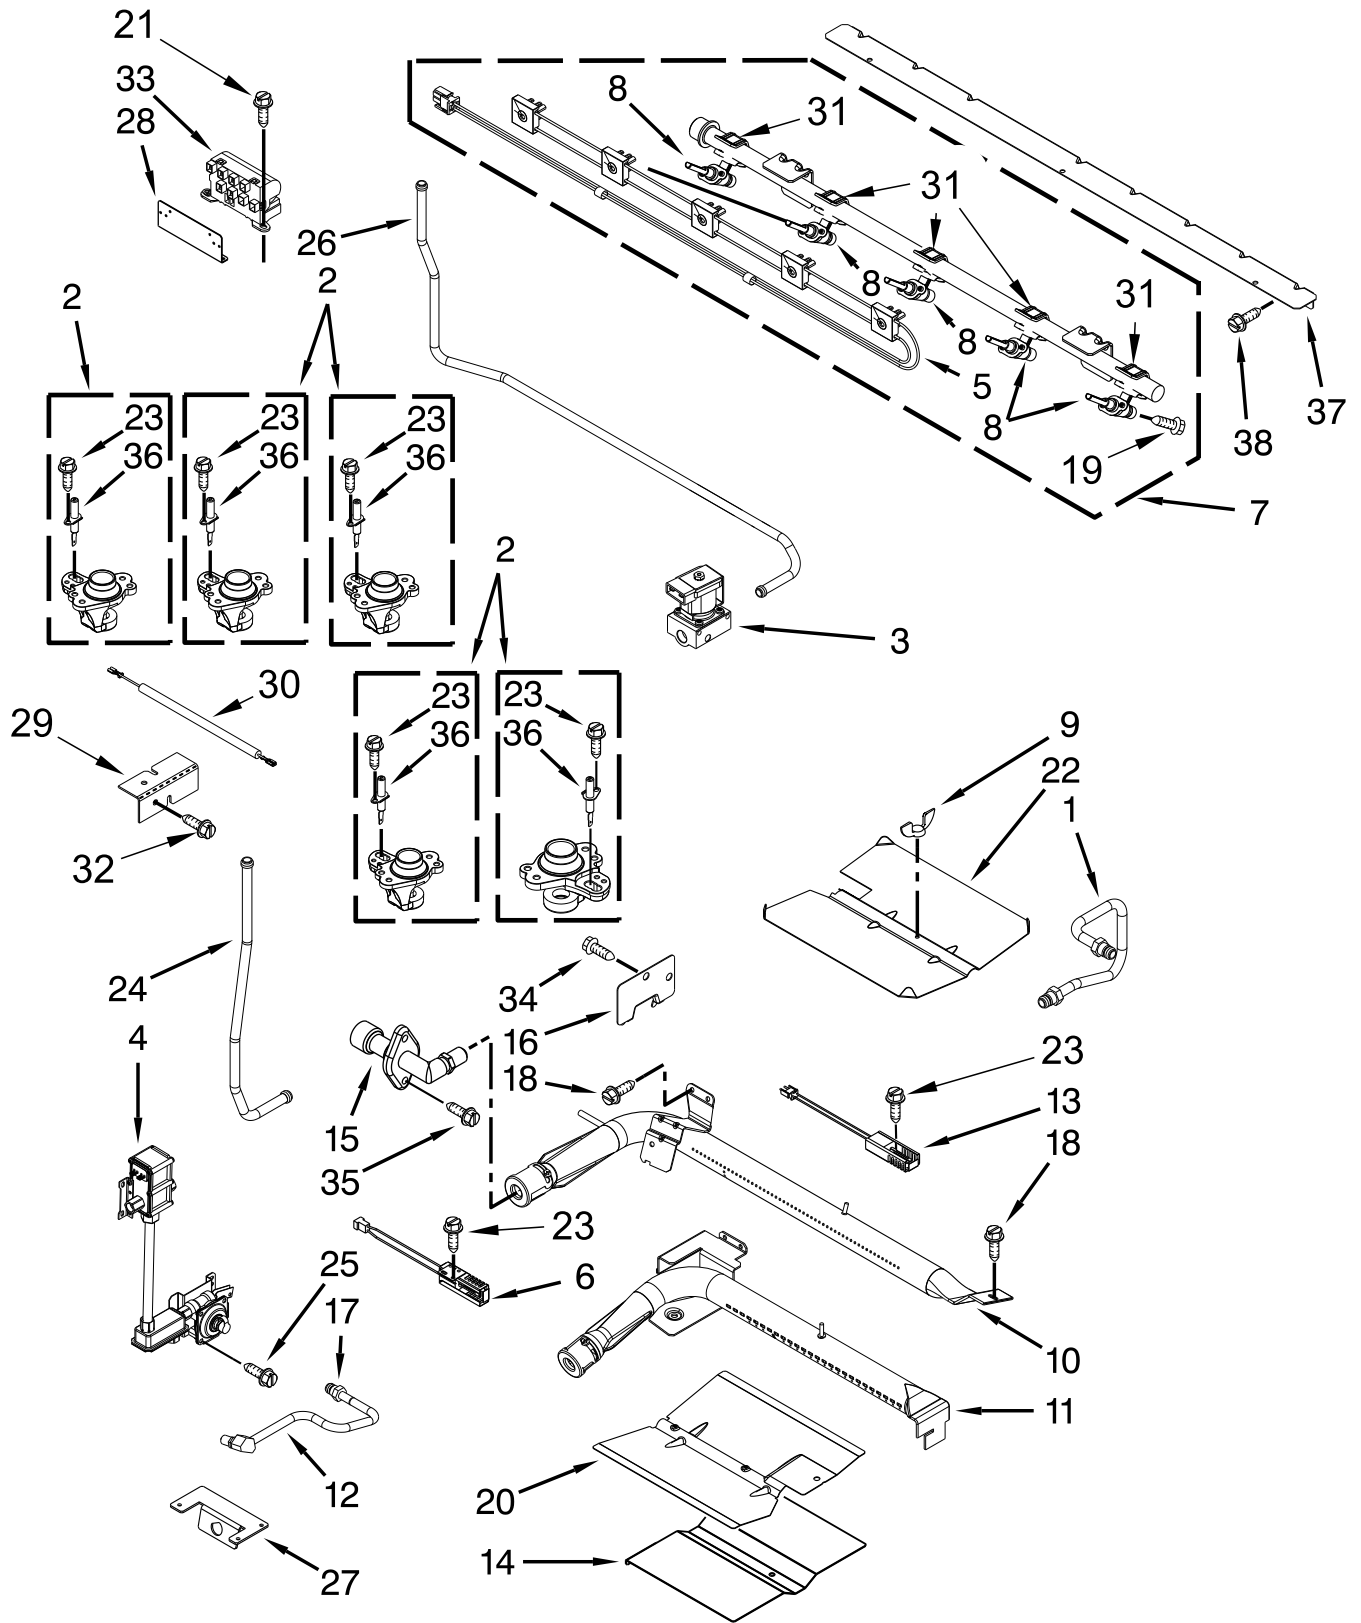


MANIFOLD PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10319002	Tubing, Broil
2	W10643268	Holder, Orifice (17K) (Left Front)
	W10643269	Holder, Orifice (5K) (Left Rear)
	W10643270	Holder, Orifice (10K) (Right Front)
	W10643271	Holder, Orifice (5K) (Right Rear)
	W10643272	Holder, Orifice (7K) (Center)
3	W10368614	Valve, Shut Off
4	W10546238	Valve/Regulator
5	W10664240	Harness, Switch
6	W10324738	Ignitor, Gas
7	W10806878	Assembly, Manifold
8	W10718180	Valve (17K) (Left Front)
	W10718182	Valve (5K) (Left Rear & Right Rear)
	W10718181	Valve (10K) (Right Front & Center)
9	7103P030-60	Nut, Wing

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
10	W10315768	Burner, Broiler
11	W10407912	Burner, Bake
12	W10342662	Orifice, Bake (Upper)
	W10342661	Orifice, Bake (Lower)
13	7432P143-60	Ignitor, Bake
14	W10298865	Shield, Bake
15	W10292293	Fitting, Broiler
16	4005F421-45	Cover, Ignitor Wire
17	7103P195-60	Nut, Mounting
18	7101P426-60	Screw
19	W10295997	Screw, Valve
20	W10272528	Baffle, Bake
21	7101P338-60	Screw
22	3601F358-45	Baffle, Broil Burner
23	7101P282-60	Screw
24	W10524331	Tubing (Supply Regulator to Shutoff)
25	7101P635-60	Screw (Black)
26	W10642388	Tubing (Supply Shutoff To Manifold)
27	W10272520	Bracket, Orifice
28	W10319059	Bracket, Spark Module
29	W10324366	Holder, Electrode Extension

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
30	W10636384	Extension, Electrode
31	W10295996	Bracket, Saddle Valve
32	W10217535	Screw
33	7431P053-60	Module, Spark
34	7101P434-60	Screw
35	7101P502-60	Screw
36	W10565365	Electrode, Spark
	W10637673	Electrode, Fish
37	W10276466	Bracket, Manifold (Bottom)
38	7101P653-60	Screw
		Following Parts Not Illustrated
	W10591270	Kit, LP Conversion
	W10324646	Insulation, Orifice


CHASSIS PARTS

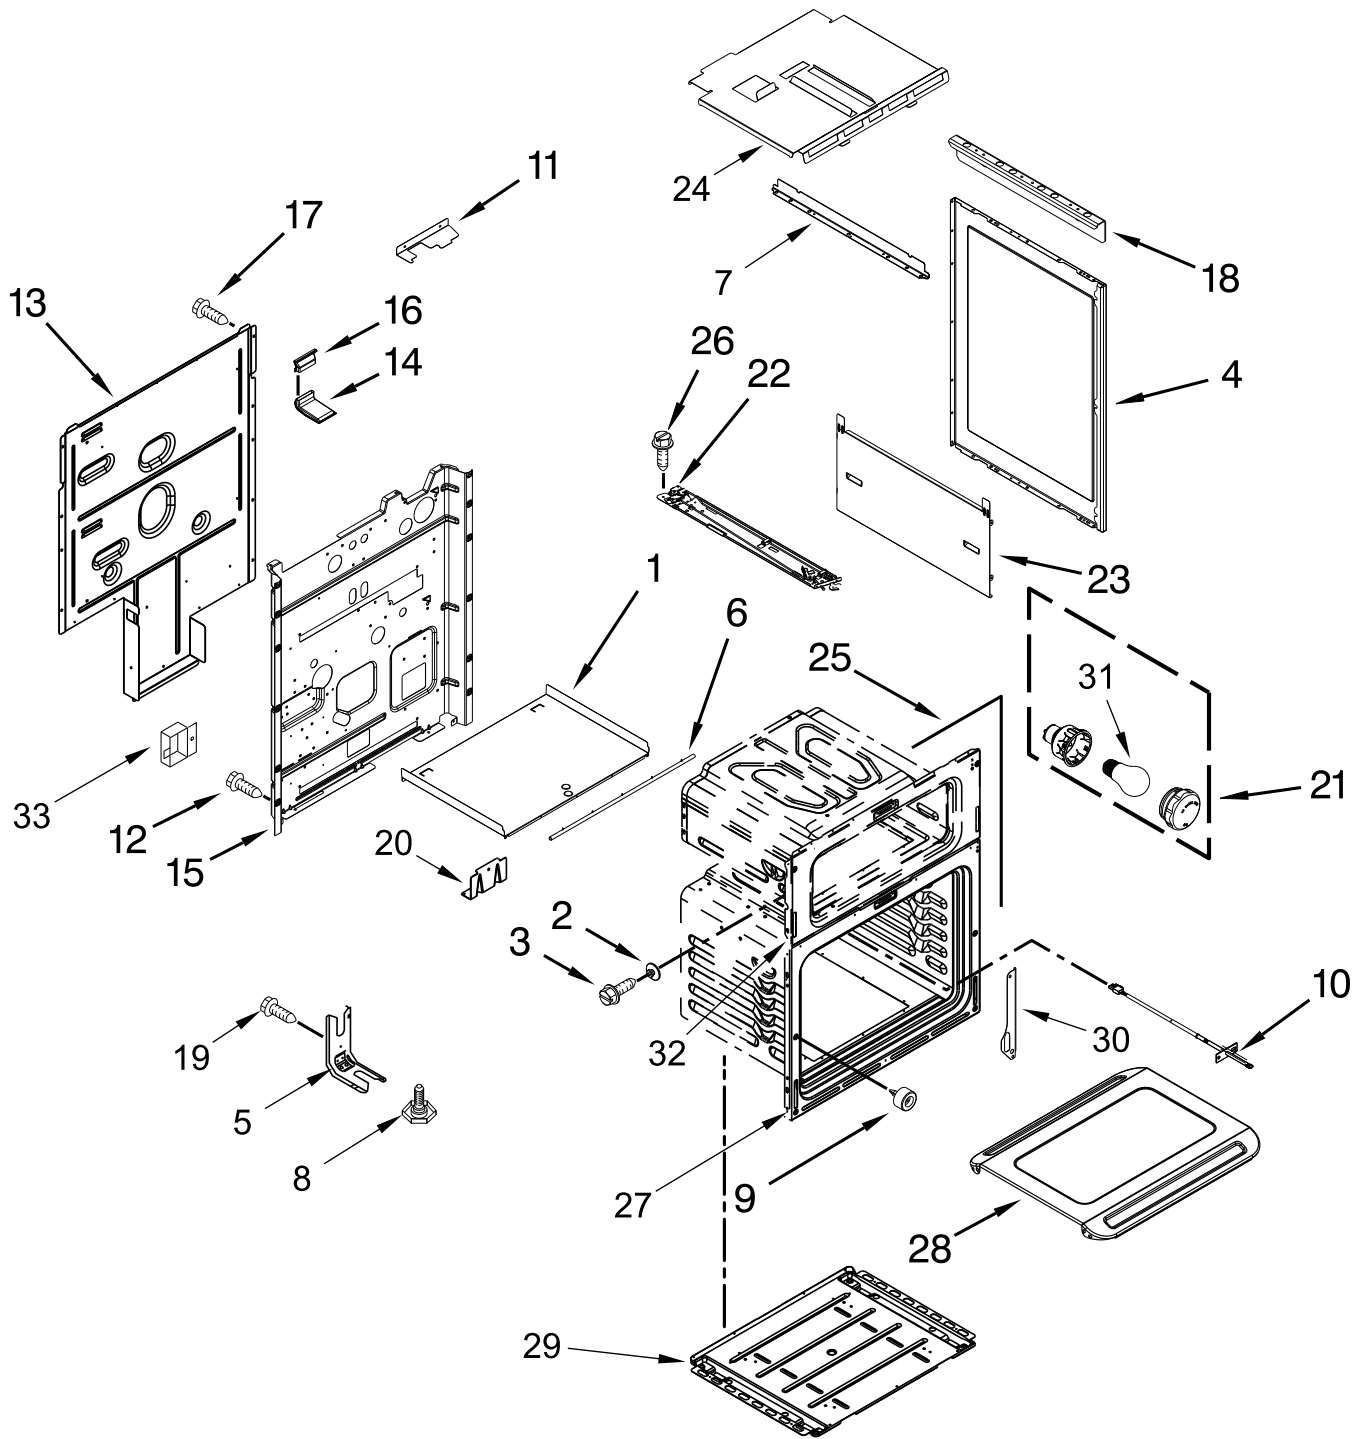

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10319038	Shield, Gemini	16	W10321446	Assembly, Outlet Flue (Upper)	29	W10312768	Base, Gemini
2	W10237689	Spacer, Side Panel		W10321445	Assembly, Outlet Flue (Lower)	30	W10410463	Cover, Hinge (Left)
3	W10267456	Screw, Shoulder	17	7101P426-60	Screw		W10410461	Cover, Hinge (Right)
4		Panel, Side	18	W10319087	Bracket, U Channel	31	311255	Bulb, Oven Light
	W10330375	Black	19	7101P485-60	Screw, Anti-Tip Kit	32	W10606341	Front, Main (Upper)
	W10330376	White	20	W10260703	Support, Lower Oven	33	8285593	Cover, Connector
5	3801F656-51	Bracket, Anti-Tip	21	W10454648	Assembly, Light			Following Parts Not Illustrated (Upper)
6	W10319000	Gasket, Gemini Oven Shield	22	W10683517	Lock, Rear Mount		W10344586	Insulation, Floor
7	W10357697	Bracket, Side Panel	23	W10538516	Shield, Side Insulation		W10318910	Insulation, Wrapper
8	7101P507-60	Foot, Leveler	24	W10324643	Support, Insulation		W10318918	Insulation, Back (Lower)
9	W10105790	Bumper & Screw	25	W10318928	Gasket, Oven Door (Upper)		W10318911	Insulation, Wrapper
10	7430P044-60	Sensor, Oven		W10269069	Gasket, Oven Door (Lower)		W10204081	Insulation, Back
11	W10268558	Cover, Lower Wire	26	7101P375-60	Screw			
12	7101P635-60	Screw (Black)	27	W10308654	Front, Main (Lower)			
13	W10261387	Cover, Main Wire	28	W10292551	Pan, Oven Bottom			
14	W10311326	Assembly, Flue (Upper)						
	W10272519	Assembly, Flue (Lower)						
15	W10668728	Back, Main						

UPPER DOOR PARTS

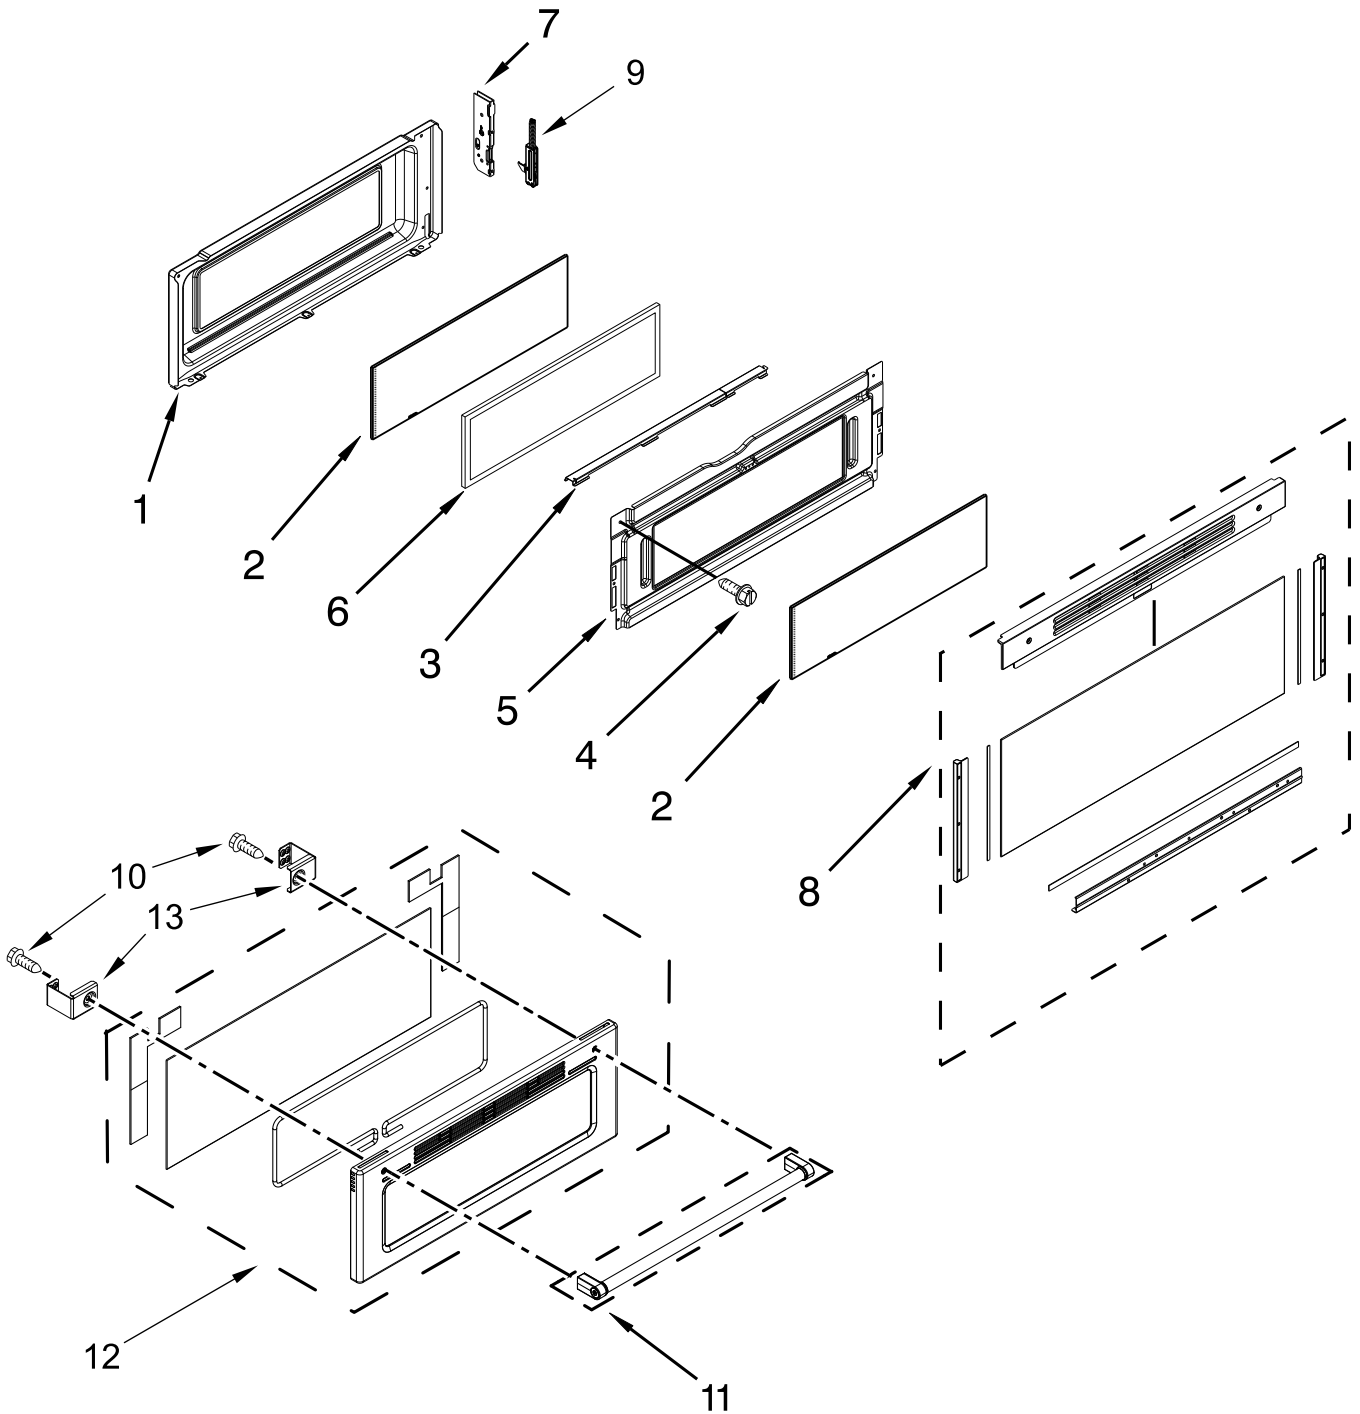


UPPER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10485721	Lining, Door
2	W10272707	Glass, Inner
3	W10272708	Frame, Glass
4	W10292297	Screw
5	W10485723	Retainer, Insulation
6	W10321271	Insulation, Door
7	W10289077	Receiver, Hinge

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
8		Assembly, Door
	W10654438	Black
	W10654437	White
9	W10485733	Hinge, Door (Left)
	W10485732	Hinge, Door (Right)
10	W10480830	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
11		Assembly, Handle
	W10674700	Black
	W10674699	White
	W10674701	Stainless
12		Assembly, Door
	W10645192	Stainless
13	W10645182	Bracket, Door Handle

LOWER DOOR PARTS

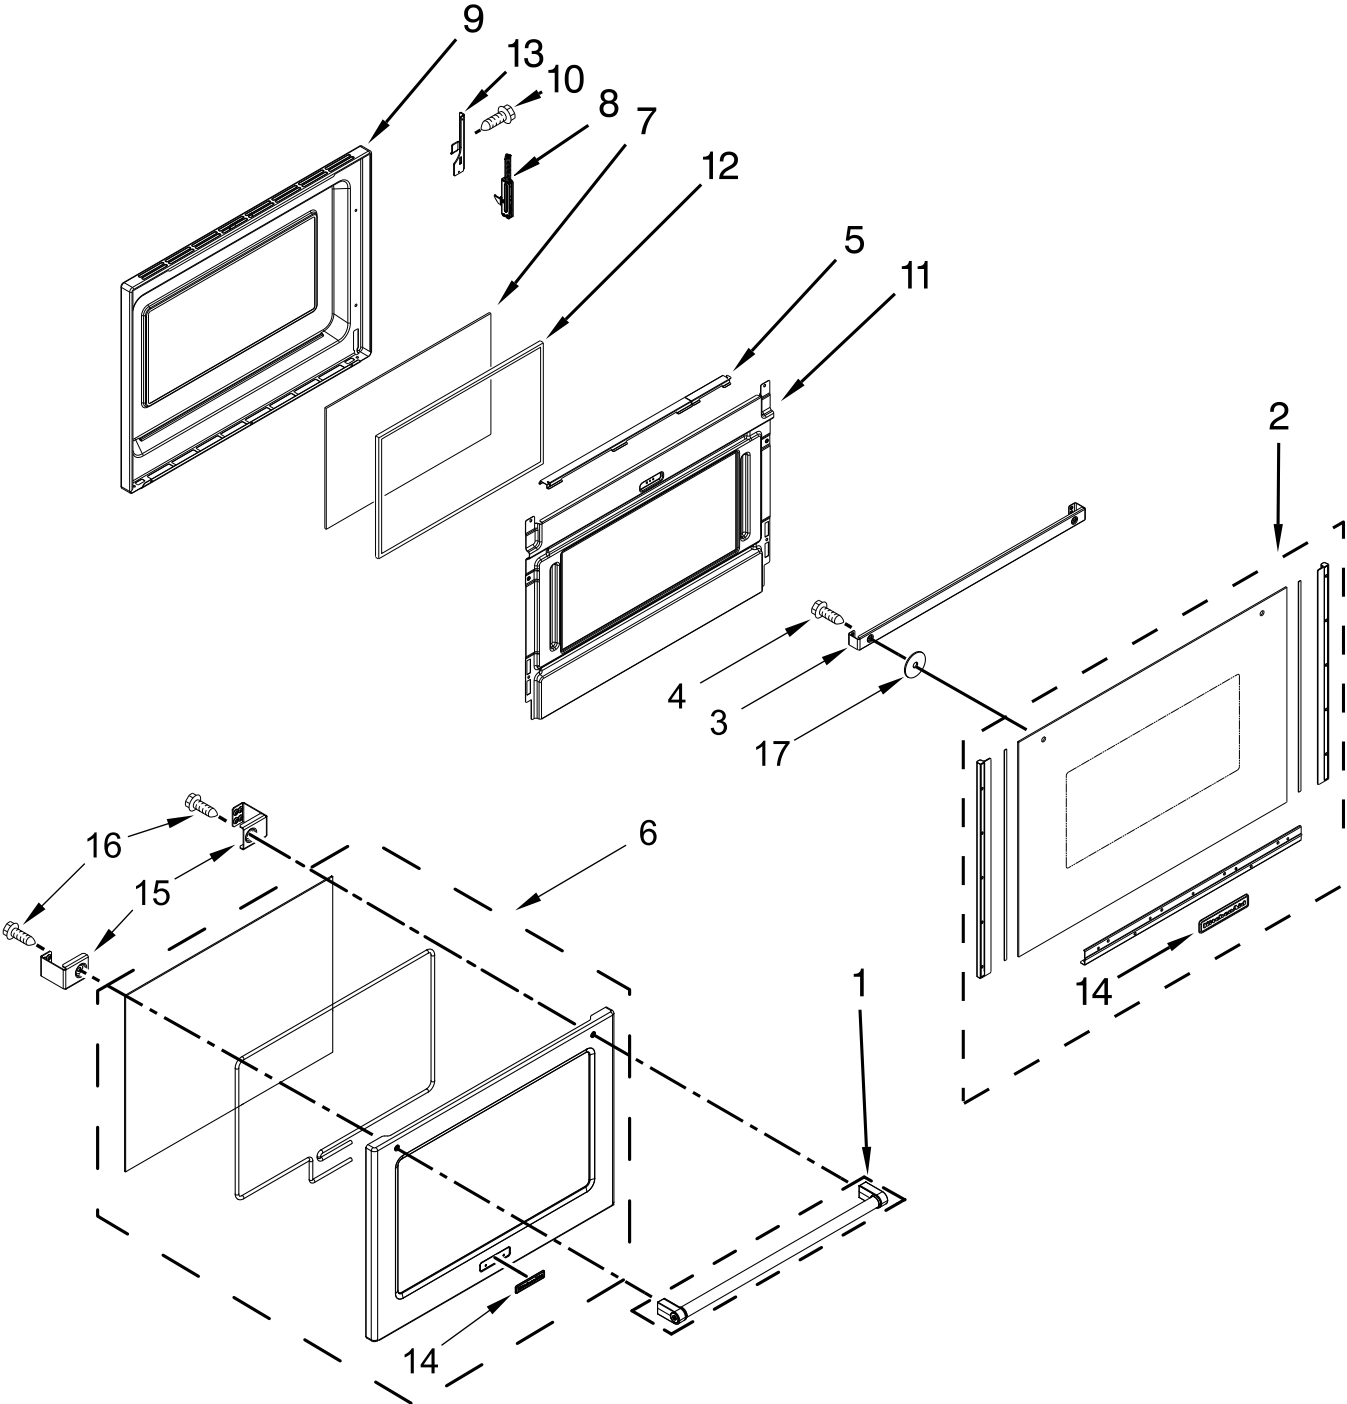


LOWER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Handle
	W10674700	Black
	W10674699	White
	W10674701	Stainless
2		Assembly, Door
	W10654432	Black
	W10654431	White
3	W10294695	Bracket, Handle
4	W10317886	Screw
5	W10272594	Frame, Glass

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
6		Assembly, Door
	W10645181	Stainless
7	9757706	Glass, Inner
8	W10335434	Hinge, Door (Left)
	W10335433	Hinge, Door (Right)
9	W10292008	Lining, Door
10	W10292297	Screw
11	W10340464	Retainer, Insulation
12	W10321285	Insulation, Door

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
13	W10272329	Receiver (Left)
	W10272328	Receiver (Right)
14		Badge
	W10518672	Grey
15	W10645182	Bracket, Door Handle
16	W10480830	Screw
17	7109P084-60	Washer, Fiber

INTERNAL OVEN PARTS

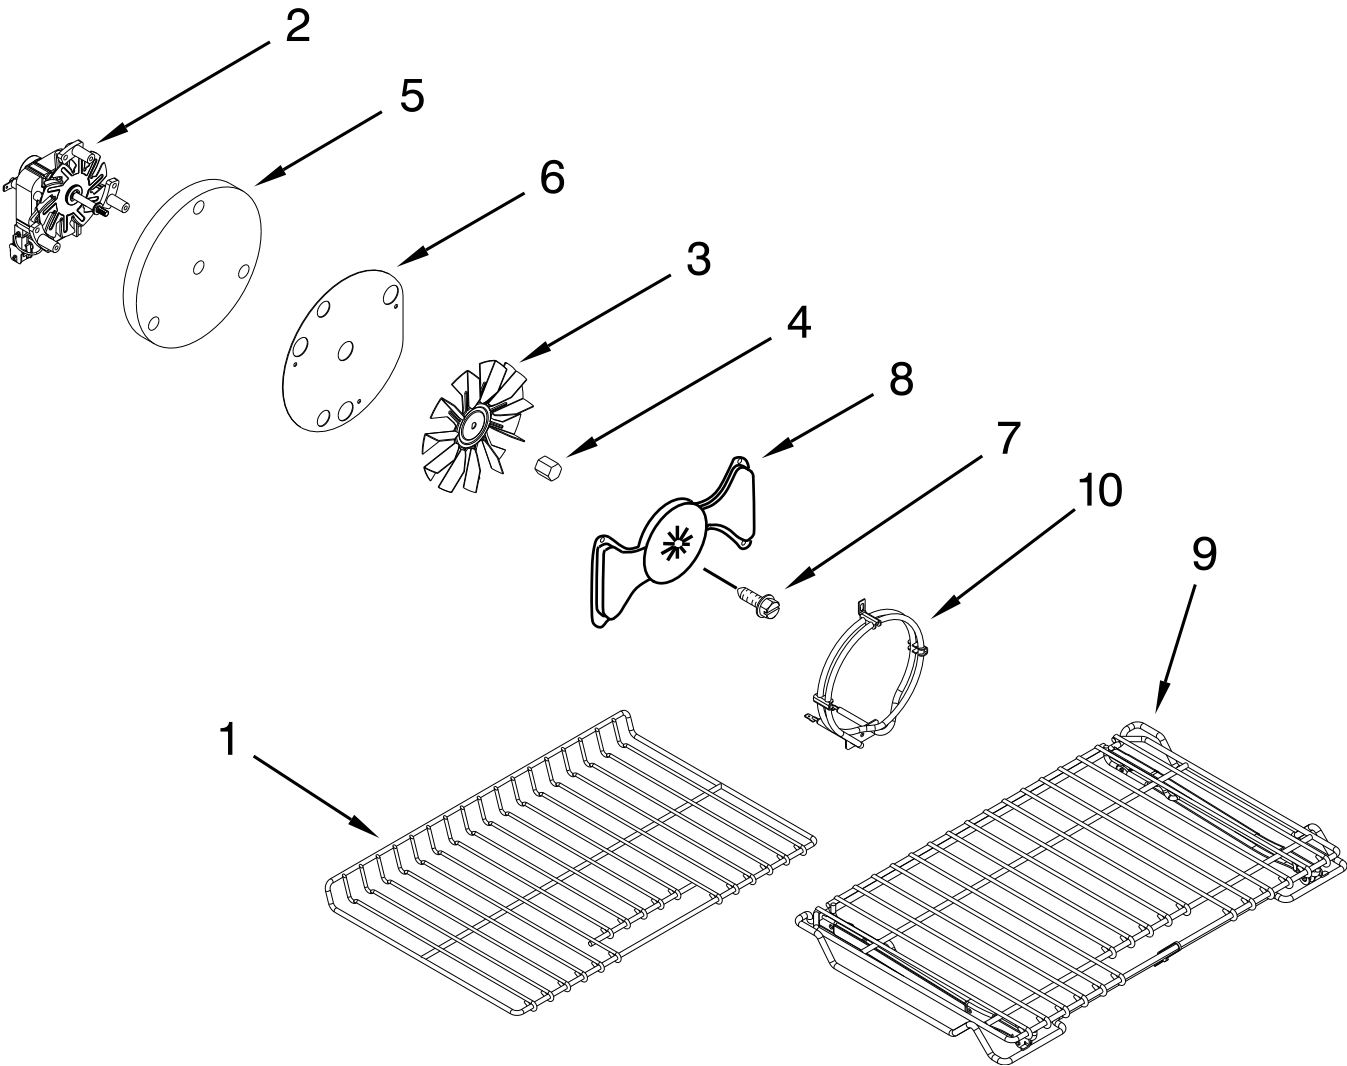

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10570887	Rack, Oven
2	W10631506	Motor, Convection
3	W10631503	Blade, Fan
4	W10631504	Nut, Acorn

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5	W10274268	Insulation, Convection Motor
6	W10339476	Plate, Insulation
7	4449154	Screw
8	W10322230	Baffle, Convection

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
9	W10570870	Rack, Oven (Telescoping)
10	W10249980	Element, Convection (120 VAC)

OPTIONAL PARTS (NOT INCLUDED)

PAINTE, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

PAINTE, SPRAY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	4392901	Biscuit/Bisque
	285006	Black
	350956	Almond
	350938	Gray Primer
	350942	White Primer

ACCESSORIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan & Roasting
	W10355016	Cleaner, Stainless Steel
	W10355010	Cleaner, Kitchen & Appliance
	W10355049	Wipes, Stainless Steel Cleaning

PAINTE, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)