


KitchenAid®

**30" INDUCTION SLIDE-IN RANGE
(Even-Heat True Convection)**

MODELS:

KSIB900ESS0 (Stainless)

COOKTOP PARTS

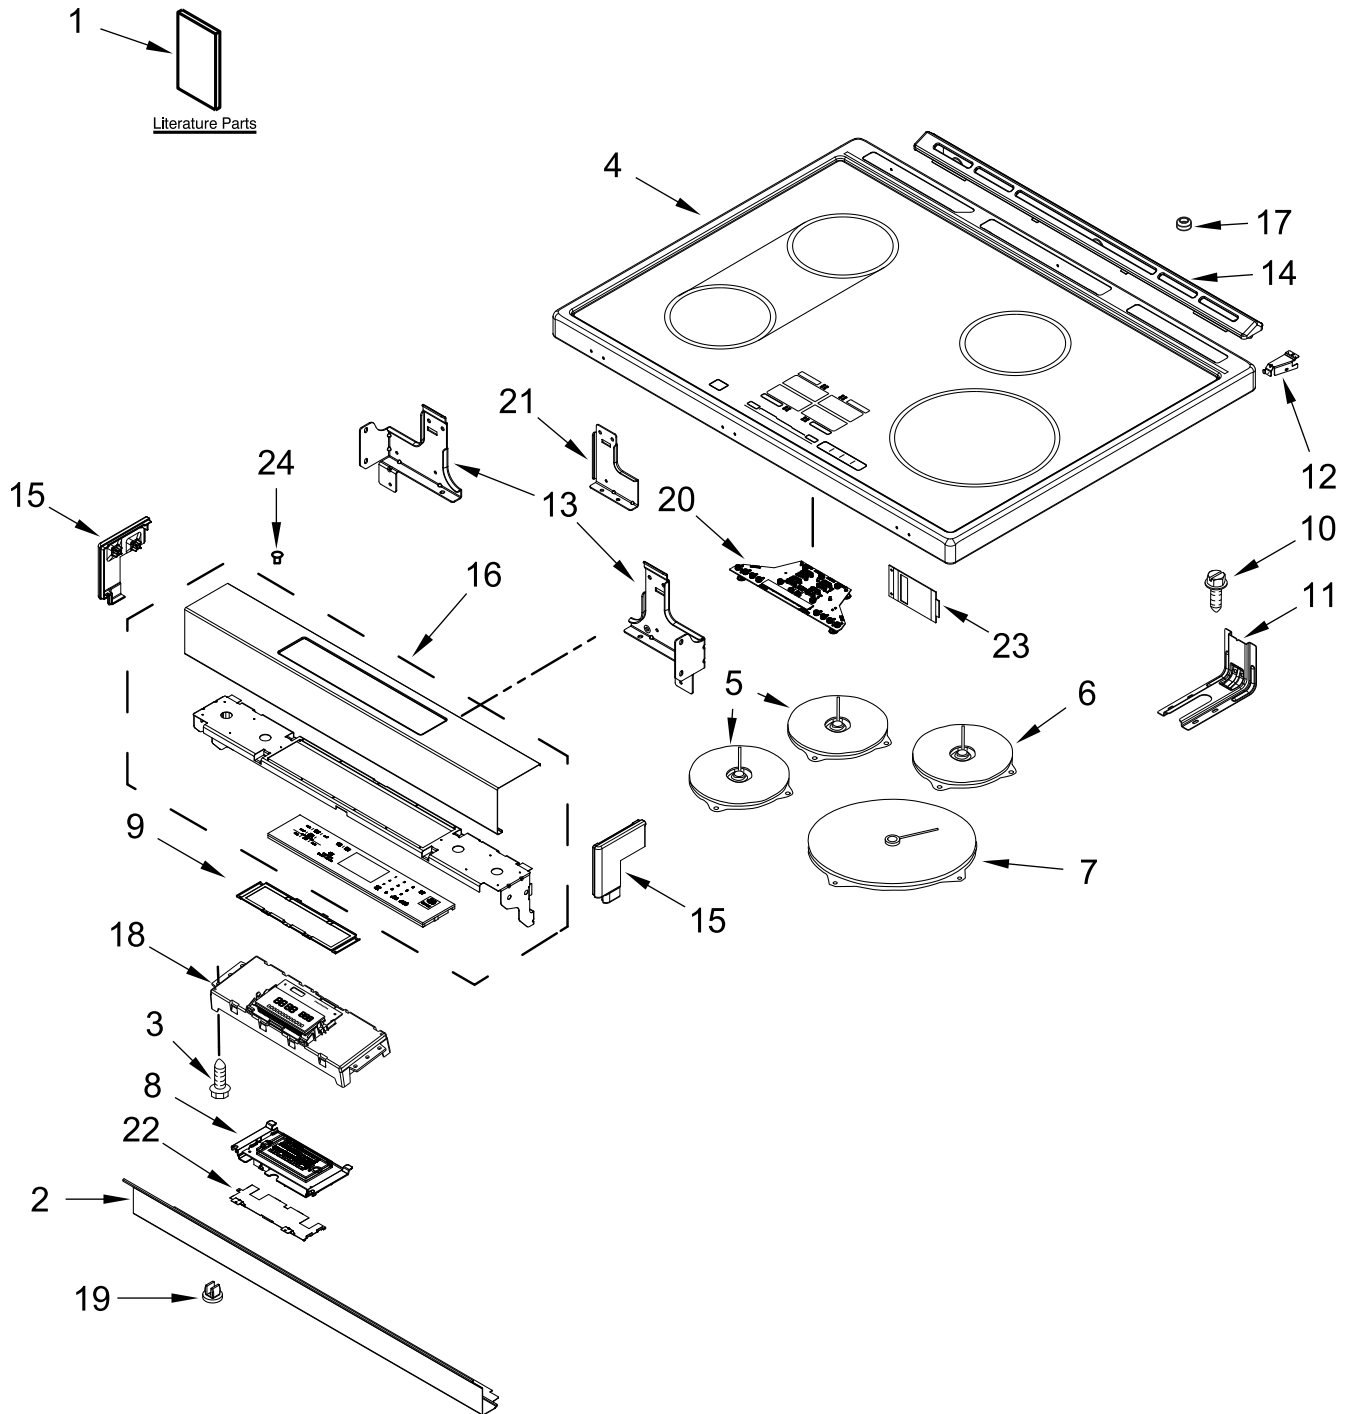


COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts
	W10744014	Installation, Instructions
	W10722062	Use and Care Guide
	W10665227	Sheet, Tech
	9762761	Tips, Safe Cooking (English)
	W10065852	Tips, Safe Cooking (French)
	W10400064	Guide, Quick Start (English)
	W10400065	Guide, Quick Start (French)
	W10703187	Wiring Diagram
2		Bracket, Mounting
	W10743276	Stainless
3	3196178	Screw
4		Cooktop
	W10536317	Black
5	W10636723	Element (Left Front and Left Rear)
6	W10410580	Hotplate (Right Rear)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10410578	Element (Right Front)
8	W10603094	Assembly, Display
9	W10555923	Bracket, User Interface
10	7101P485-60	Screw, Anti-Tip Kit
11	W10606241	Bracket, Anti-Tip
12	W10162253	Brace, Corner (Left)
	W10162252	Brace, Corner (Right)
13	W10289169	Support, Cooktop (Right)
	W10289170	Support, Cooktop (Left)
14		Vent, Trim Top
	W10636529	Stainless
15		Endcap
	W10555937	Stainless (Left)
	W10555940	Stainless (Right)
16		Console, Panel
	W10547093	Stainless
17	W10664705	Bumper

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
18	W10711461	Control, MRC2
19	W10645947	Grommet
20	W10808070	Interface, User
21	W10598048	Bracket, Console (Center)
22	W10558372	Bracket, Control
23	W10757531	Keypad, Shield
24	3196068	Lens, Indicator
		FOLLOWING PARTS NOT ILLUSTRATED
	W10740211	Harness, Main
	W10598170	Harness, Display
	W10575120	Harness, Keypad
	W10580316	Harness, Bake Drawer
	3196520	Clip, Wire


INTERIOR PARTS

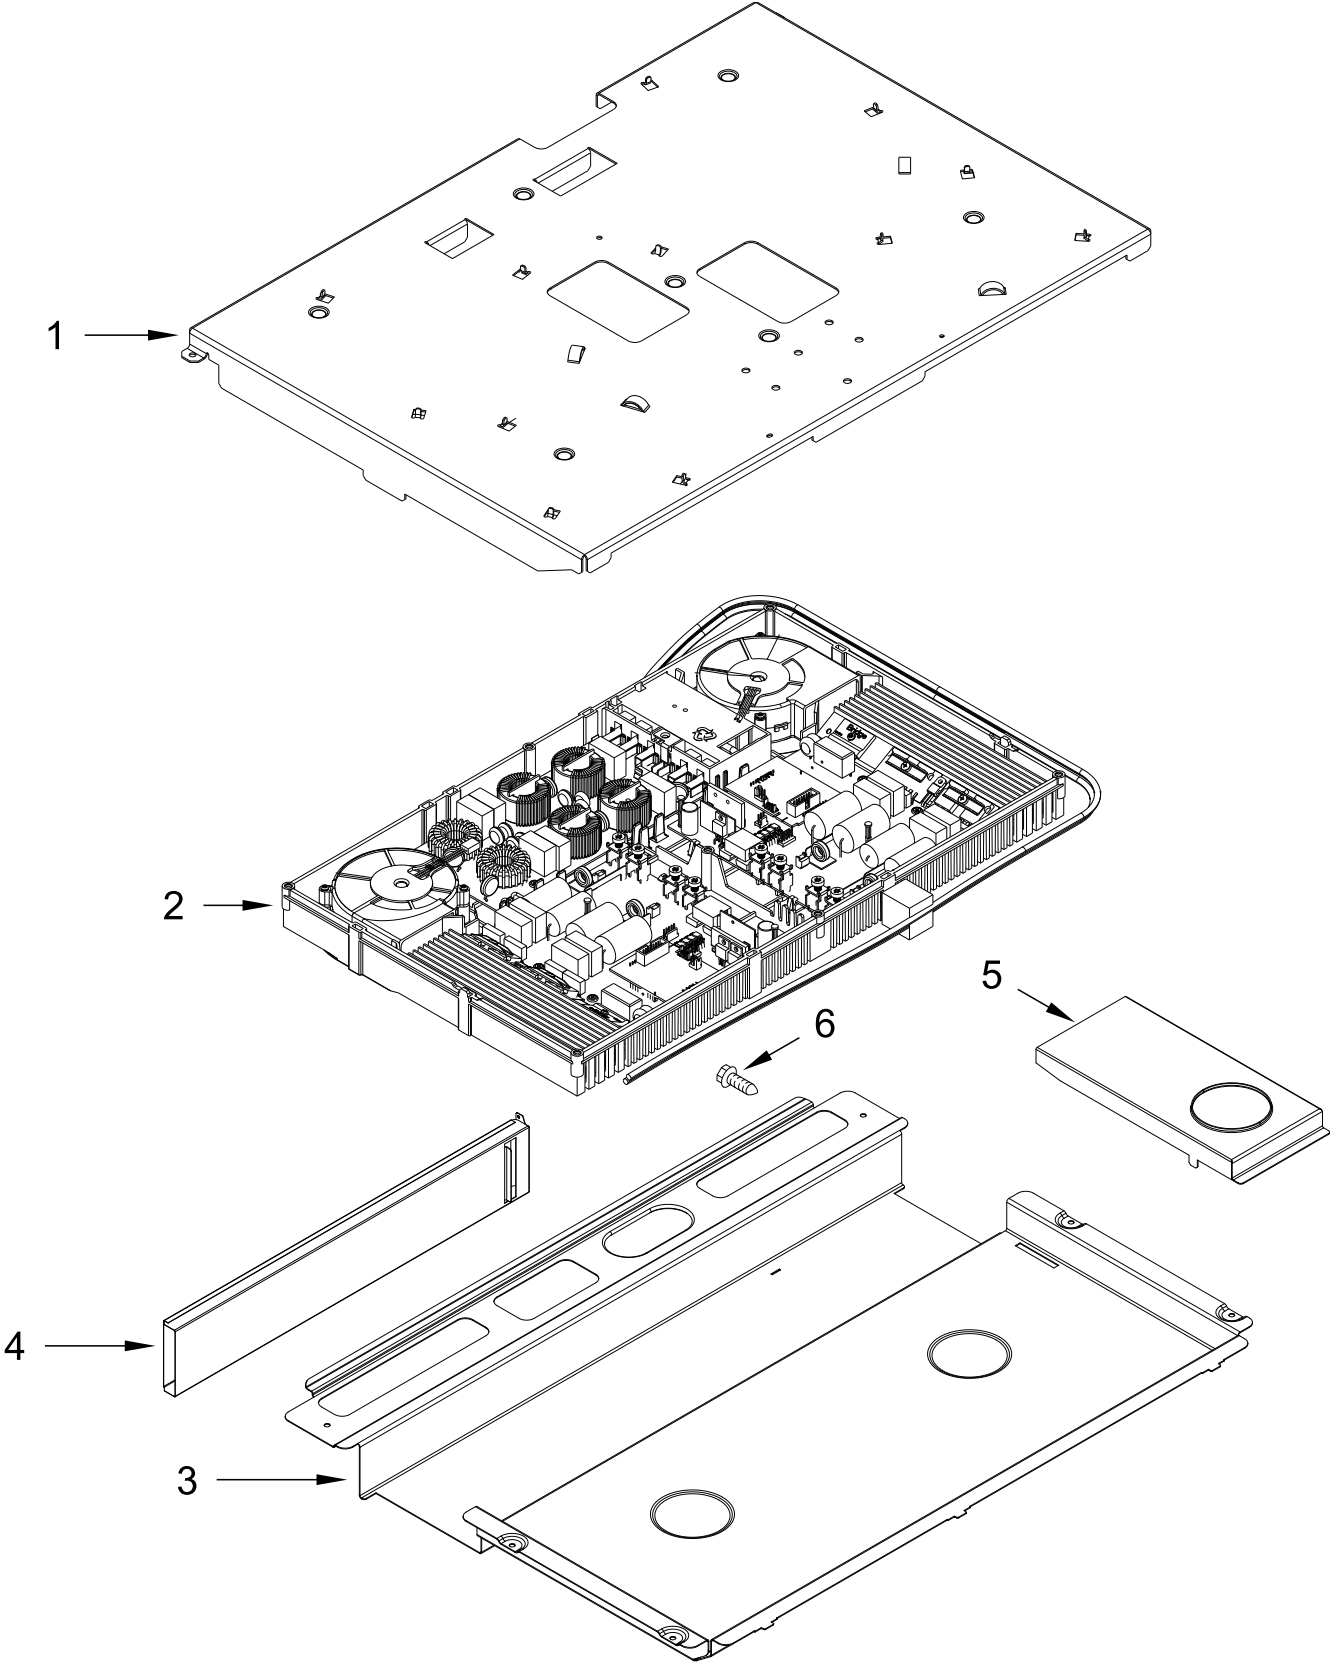

INTERIOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10536323	Pan, Induction (Upper)	3	W10536319	Pan, Induction (Lower)	5	W10606133	Duct, Recirculation Plate
2	W10794342	Assembly, Induction Module	4	W10719194	Assembly, Induction Side Duct	6	3196169	Screw


CHASSIS PARTS

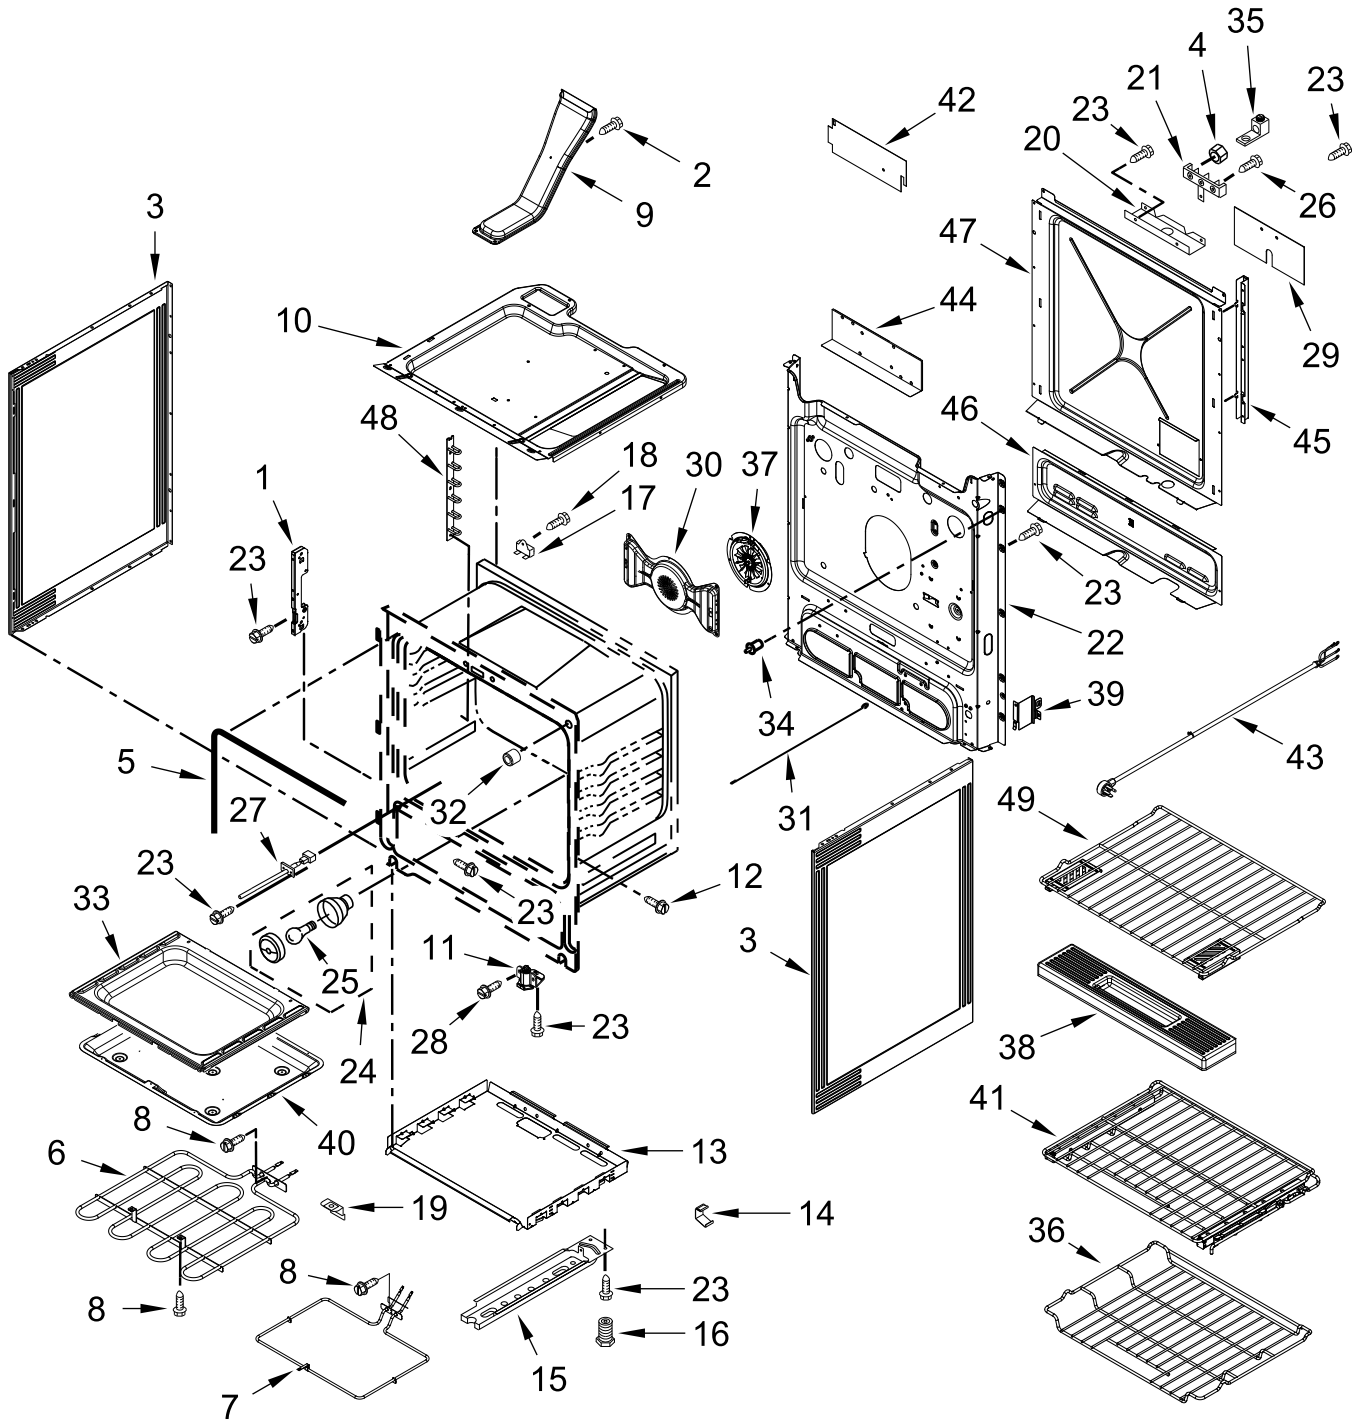

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	20	3186034	Bracket, Service	40	W10346147	Pan, Bake
2	W10362924	Screw	21	W10245259	Block, Terminal	41	W10554008	Rack, Sliding
3		Panel, Side	22	W10289166	Back, Main	42	W10813366	Shield, Wire
	W10162245	Black	23	3196178	Screw	43	W10624592	Cord, Power
4	3400029	Nut	24	W10454648	Assembly, Light	44	W10162260	Shield, Heat
5	W10162385	Gasket, Door	25	311255	Bulb, Oven Light	45	W10162241	Channel, Rear
6	W10544952	Element, Broil	26	3400016	Screw	46	W10162248	Cover, Wire
7	W10774342	Element, Bake	27	W10586204	Sensor	47	W10289172	Cover, Back
8	W10362924	Screw	28	3196169	Screw	48	W10603482	Rack, Ladder
9	W10613792	Assembly, Flue	29	W10655441	Shield, Power Cord	49	W10554007	Rack, Steam
10	W10289168	Box, Burner	30	W10346153	Baffle, Full Convection			INSULATION
11	W10341186	Assembly, Front Foot	31	W10273192	Rod, Door Switch		W10655489	Insulation, Wrapper
12	W10067840	Screw	32	9758701	Spacer, Door		W10655490	Insulation, Main Back
13	W10541959	Shield, Bake	33	W10774446	Bottom, Oven		W10655442	Insulation, Heat Shield
14	W10137382	Clip, Panel	34	W10627802	Switch, Door		W10575374	Insulation, Bottom
15	W10390008	Assembly, Base Rail (Left)	35	W10281322	Kit, Bare Wire Adapter Block		4820F015-59	Insulation, Strap
	W10390007	Assembly, Base Rail (Right)	36	W10554006	Rack, Maximum Capacity		7111P017-60	Clamp, Wire
16	W10058460	Foot, Leveling	37	W10563084	Assembly, Convection			
17	3196548	Fuse, Thermal	38	W10686408	Kit, Reservoir (Steam Rack)			
18	3196172	Screw	39	W10273002	Bracket, Oven Support			
19	W10035900	Support, Oven Bottom						

DOOR PARTS

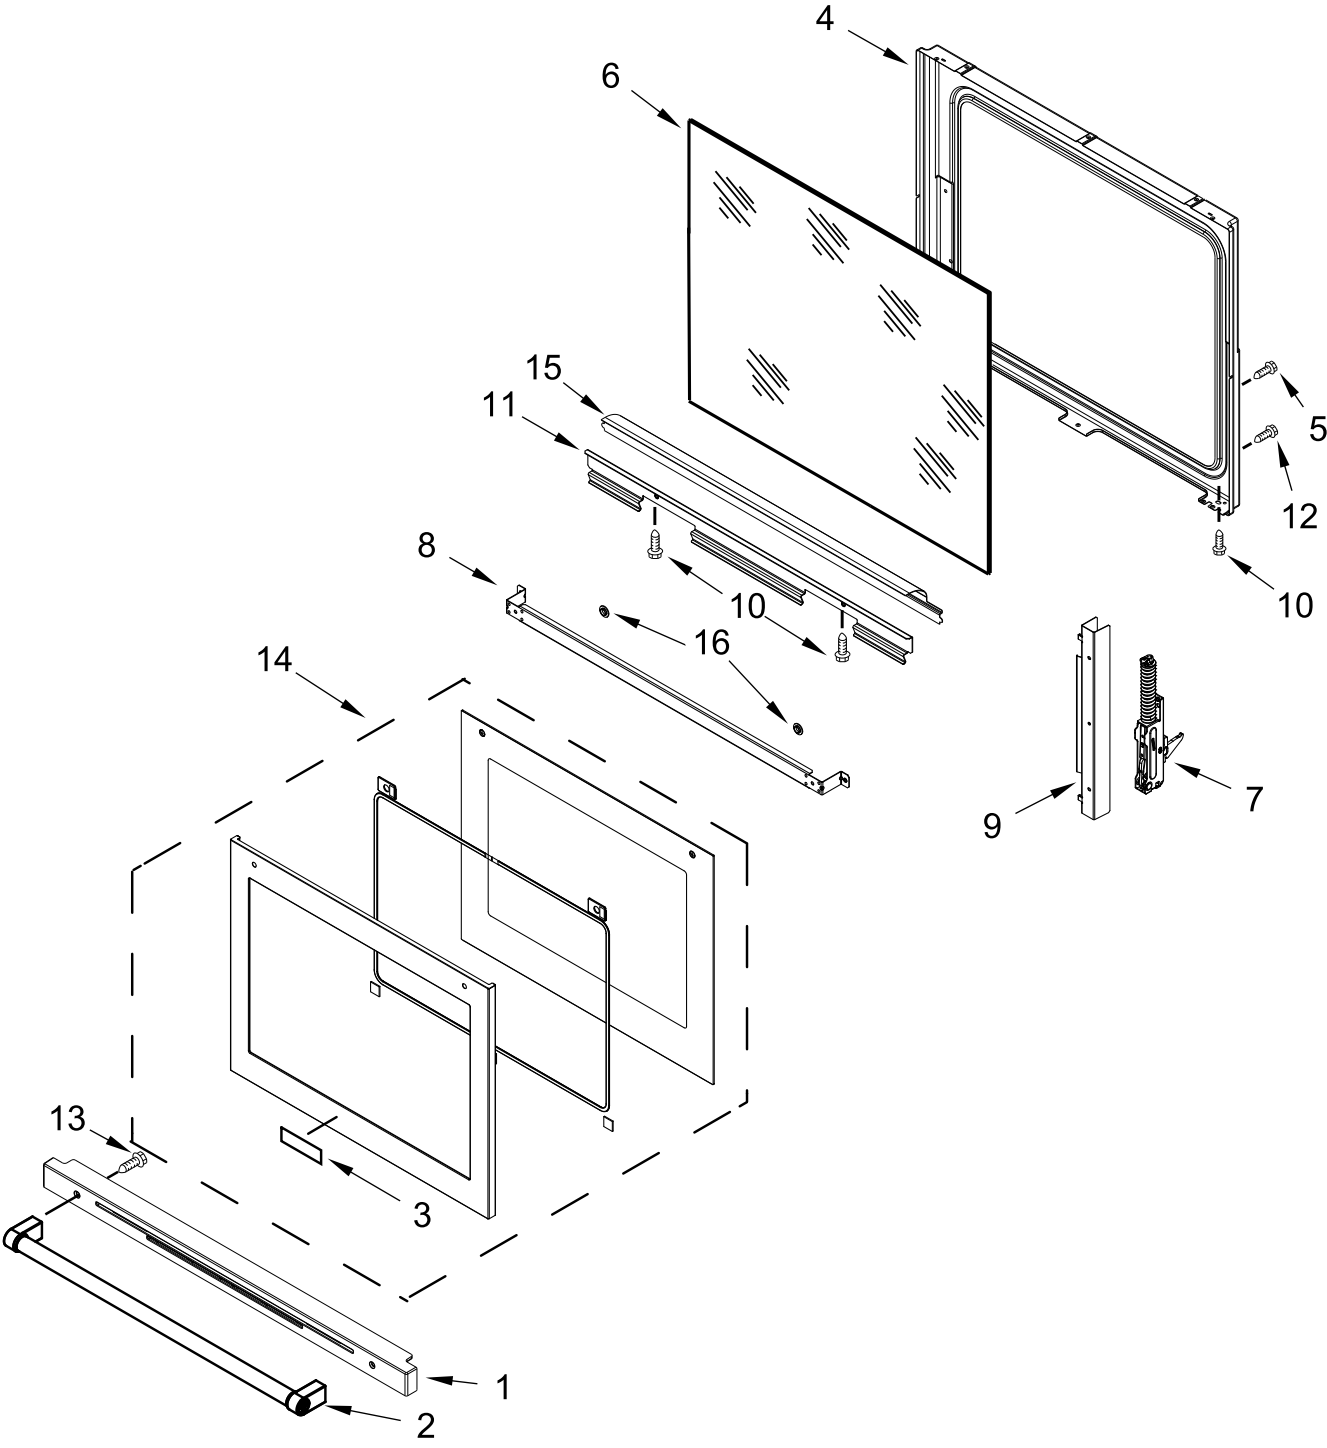


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Vent
	W10636529	Stainless
2		Handle, Door
	W10551000	Stainless
3		Badge
	W10518672	Grey
4	W10541882	Liner, Door
5	W10031790	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
6	W10541888	Glass, Inner
7	W10388635	Hinge, Door (Active)
8	W10541911	Bracket, Glass Upper
		Handle
9	W10541883	Hinge, Support Rail
10	9780274	Screw
11	W10541885	Support, Glass
12	W10031780	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
13	8533988	Screw
14		Assembly, Outer Door
	W10634271	Stainless
15		Scoop, Door
	W10551024	Stainless
16	W10319024	Washer, Door

DRAWER PARTS

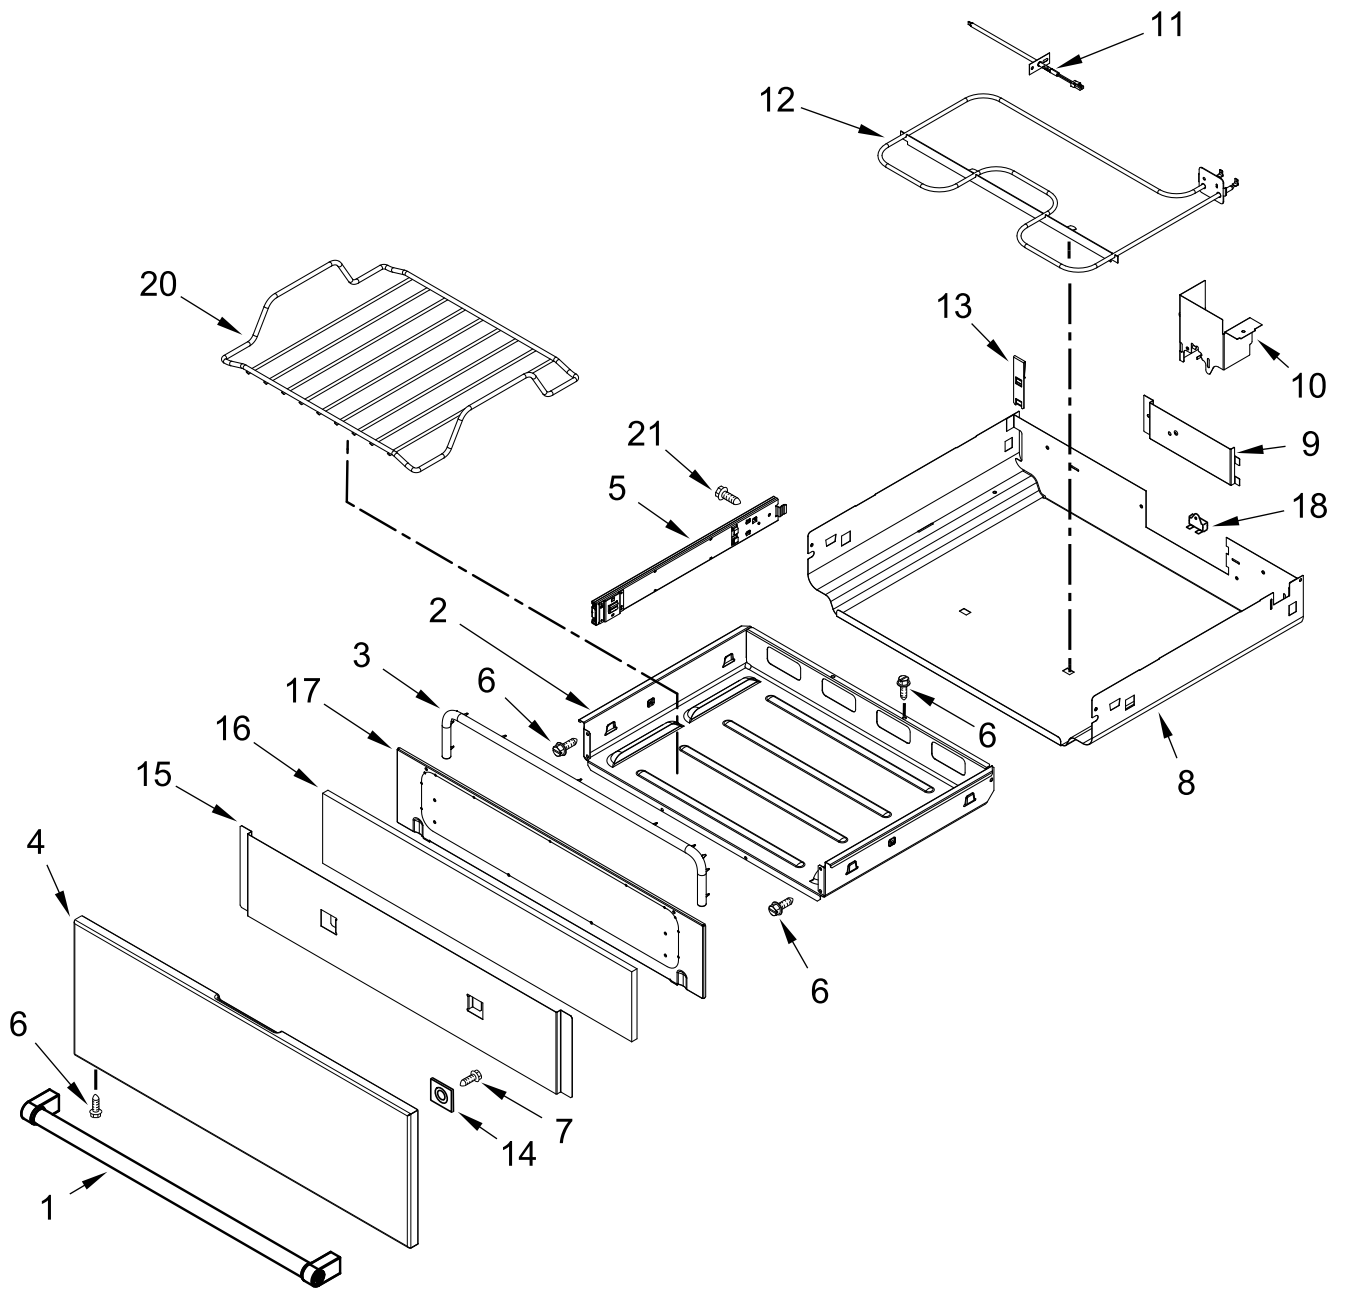

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle, Drawer	6	3196560	Screw	14	3823F017-45	Spacer, Handle
	W10551000	Stainless	7	3400882	Screw	15	W10551018	Insulation, Drawer Front
2	W10757442	Drawer, Bake	8	W10634260	Enclosure, Warming	16	W10550982	Insulation, Drawer
3	W10550987	Seal, Drawer	9	W10727084	Cover, Gas Valve	17	W10541947	Panel, Front Inner
4		Panel, Drawer Front	10	W10634259	Cover, Wire	18	W10729897	Fuse, Thermal
	W10541954	Stainless	11	W10720530	Sensor	19	3196560	Screw
5	W10541946	Slide, Drawer (Left)	12	W10541944	Element, Bake	20	W10602493	Rack, Bake Drawer
	W10541945	Slide, Drawer (Right)	13	W10551019	Cover, Side			

OPTIONAL PARTS (NOT INCLUDED)

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	4392901	Biscuit/Bisque

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		CLEANERS / POLISHES
	31605	Kit, Cooktop Care
	31463A	Protectant, Cooktop
	W10355051	Cleaner, Cooktop
	W10355016	Cleaner, Stainless Steel
	WA906B	Scraper, Cooktop
	W10355049	Wipes, Stainless Steel Cleaning
	W10355010	Cleaner, Kitchen & Appliance
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	W10432019	Alt Cleaning Kit
	W10391473	Pad, Cooktop Cleaning
		MISCELLANEOUS
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan & Roasting
	W10432539	Griddle
	W10432545	Kit, Grill
	242905	Kit, Canning Unit
		TRIM KITS
	W10675026	Black
	W10675027	White
	W10675028	Stainless
		BACKSPLASH ASSEMBLY
	W10655449	Black
	W10655448	White
	W10655450	Stainless