


KitchenAid®

27" BUILT-IN COMBINATION MICROWAVE WALL OVEN

MODELS:

KOCE507EBL05 (Black)
KOCE507EWH05 (White)
KOCE507ESS05 (Stainless)


CONTROL PANEL PARTS

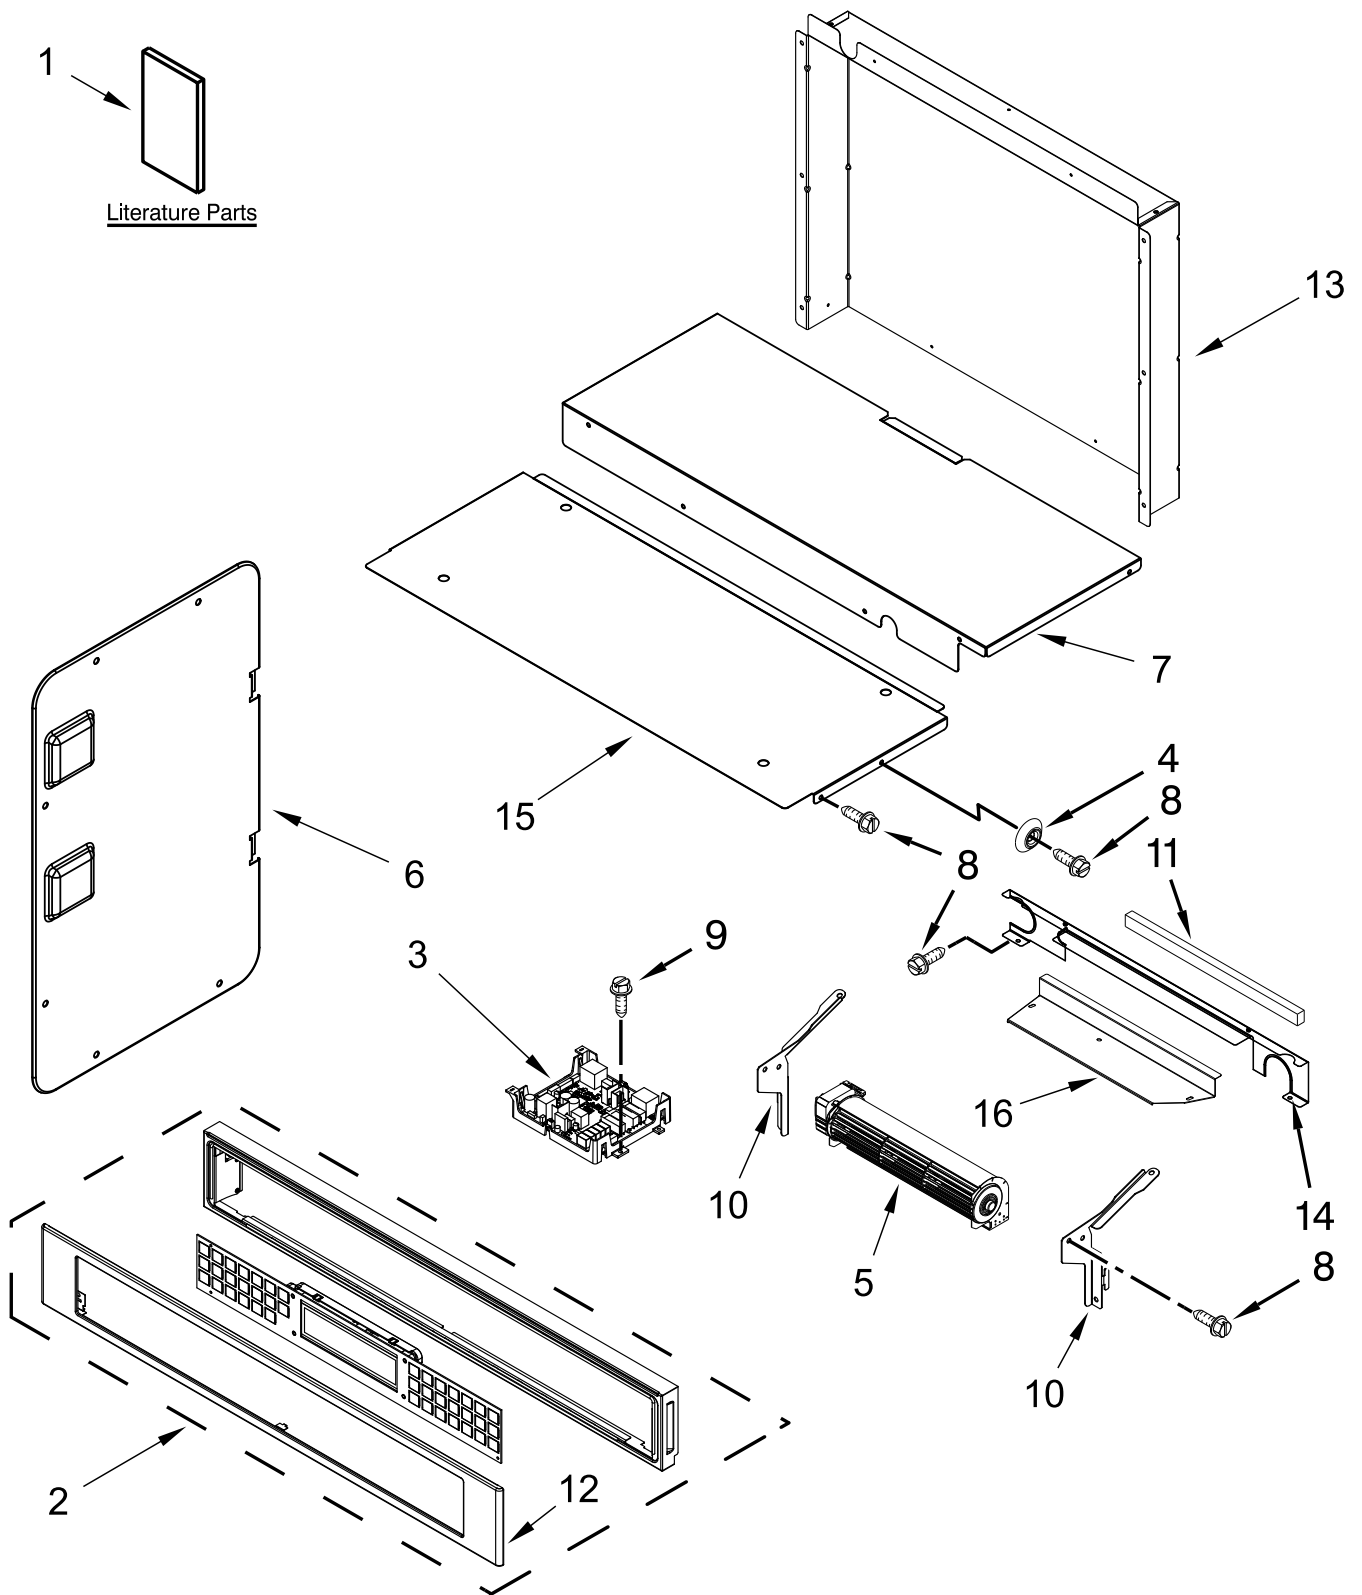

CONTROL PANEL PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	7	W10283032	Chassis, Cover Top	16	W10681157	Cover, Combo Blower
	W10725683	Instructions, Installation			Back 27"			
	W10643472	Guide, Use & Care (Oven)	8	7101P426-60	Screw			FOLLOWING PARTS NOT ILLUSTRATED
	W10643473	Guide, Use & Care (Microwave Oven)	9	7101P434-60	Screw	W10789996		Harness, Main
	W10756611	Sheet, Tech (English)	10	W10655463	Bracket, Blower (Left)	W10789995		Harness, Signal
				W10655462	Bracket, Blower (Right)	W10775068		Harness, Door Latch
2		Assembly, Control Panel (Includes Overlay)	11	4451758	Block, Foam	W10603949		Harness, Communication
	W10890571	Black	12		Skin, Control Panel	W10406103		Harness, Inverter
	W10890567	White		W10588745	Black		4450800	Screw, Grounding
	W10890570	Stainless		W10588747	White	W10392129		Strap, Ground
3	W10777215	Control (With Power Supply)		W10588741	Stainless		4448664	Clamp, Conduit
4	W10618105	Spacer, Lateral	13	W10519703	Cover, Back Duct	W10017410		Fuse, Time Delay
5	W10669823	Blower	14	W10618126	Chassis, Back Divider		4454949	Holder, Fuse
6	W10655467	Chassis, Combo Side	15	W10318159	Chassis, Cover Top Front 27"			


CABINET AND STIRRER PARTS

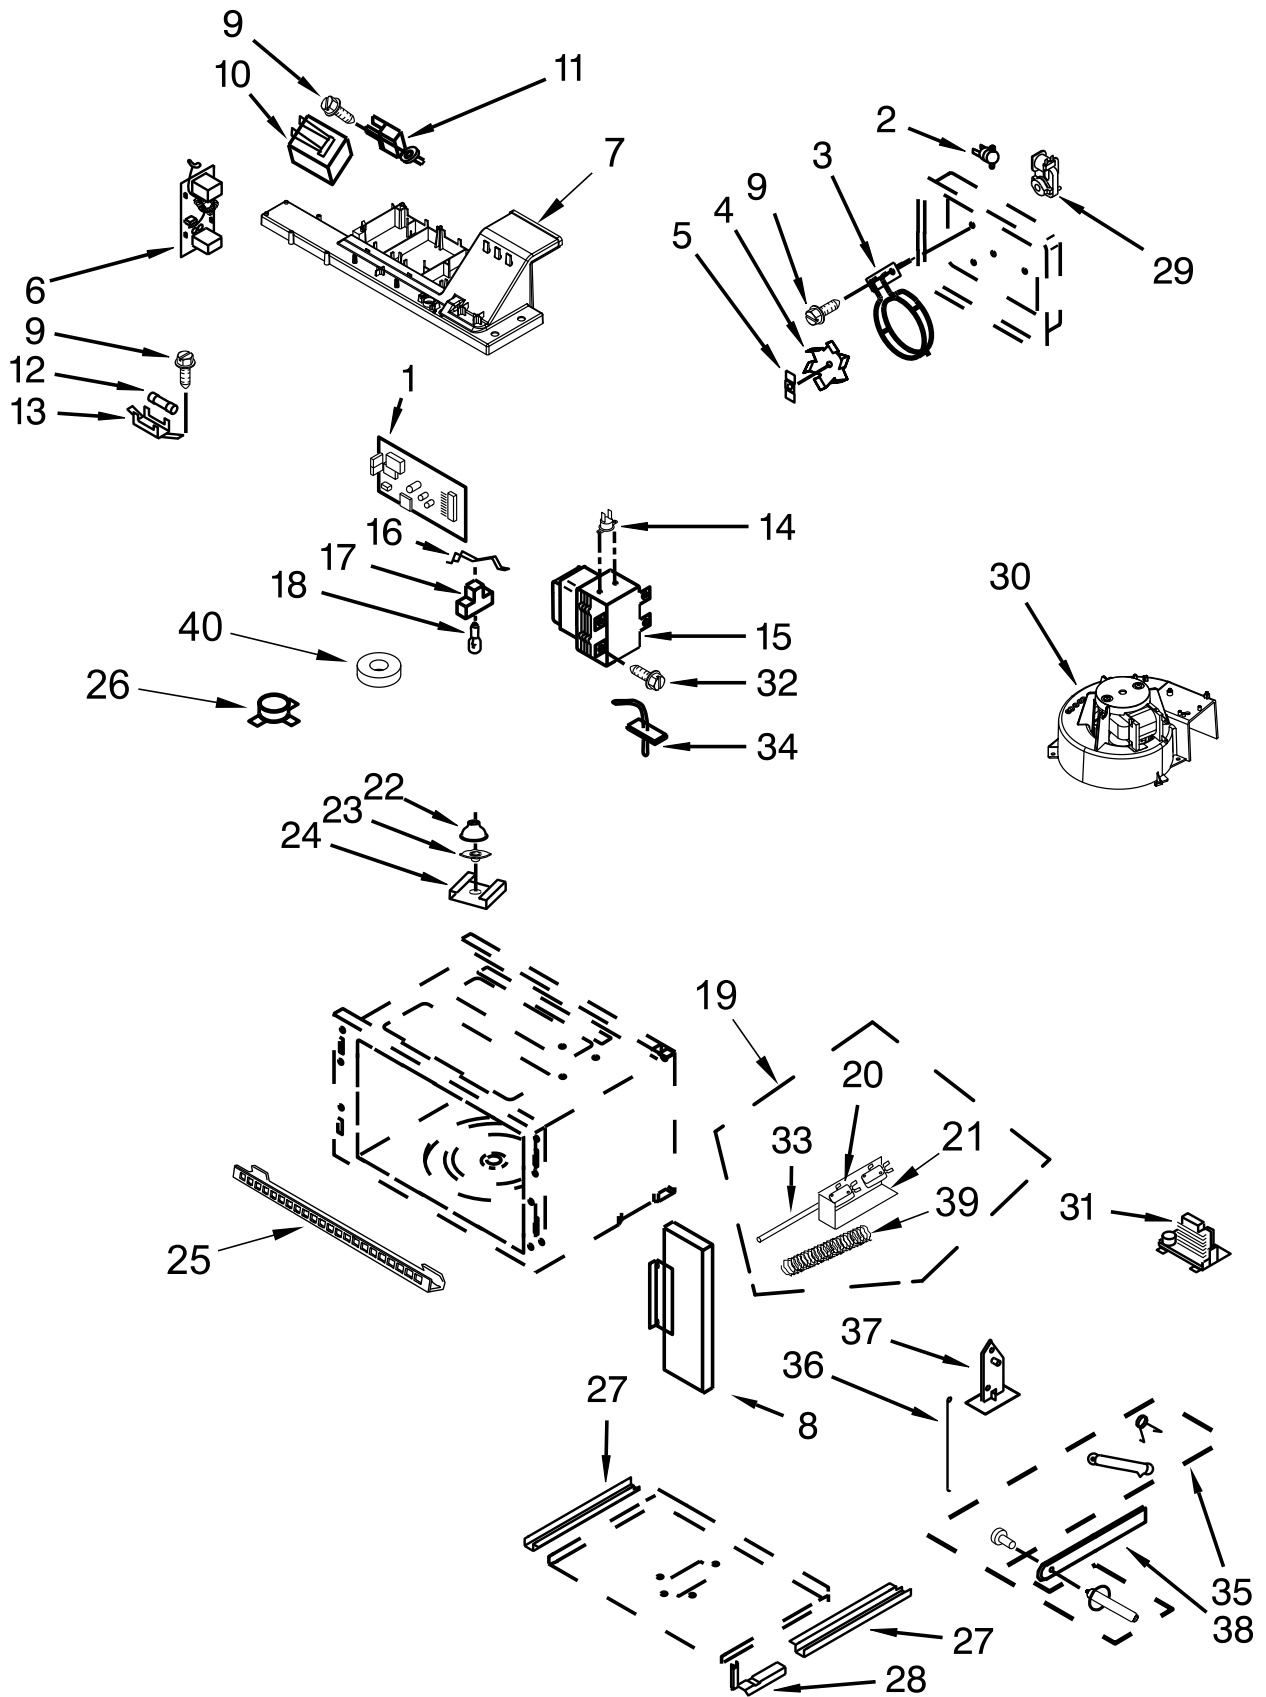

CABINET AND STIRRER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10577815	Manager, Appliance	14	461967846741	Thermostat, Magnetron	30	461968969271	Assembly, Cooling Fan
2	423107845441	Sensor, Convection	15	461967847321	Magnetron	31	W10468206	Inverter
3	461967848711	Heater, Convection Element	16	W10465869	Spring, Lamp	32	46196782538	Screw
4	461967001792	Fan, Convection	17	W10490593	Holder, Lamp	33	W10120235	Rod, Release
5	W10120233	Nut, Speed	18	W10795595	Lamp, Halogen	34	241960100002	Sensor, Temperature
6	W10692851	Filter, Noise	19	W10371813	Harness, Convection	35	461967510191	Bushing
7	461967754821	Duct, Magnetron	20	W10330566	Switch	36	461967570351	Spring, Torsion
8	461967017511	Trim, Side (Left)	21	8205683	Holder, Switch	37	461967750494	Support
	461967017501	Trim, Side (Right)	22	423107022541	Reflector	38	461967750483	Arm, Sliding
9	461967825321	Screw	23	423107720491	Lens, Lamp	39	423107570871	Spring, Release Rod
10	461967848621	Transformer, Light (20V)	24	461967010591	Clip, Spring	40	W10769147	Sealing, Lamp
11	461967842541	Thermoactuator	25	461968973251	Vent, Top			Miscellaneous Parts
12	241908600053	Fuse	26	W10460457	Sensor, Humidity		W10389372	Harness, Fan & Turntable
13	4375231	Block, Fuse	27	461967008461	Support, Bottom			
			28	461968979601	Hinge, Door			
			29	461967848251	Motor, Convection Fan			


MICROWAVE DOOR PARTS

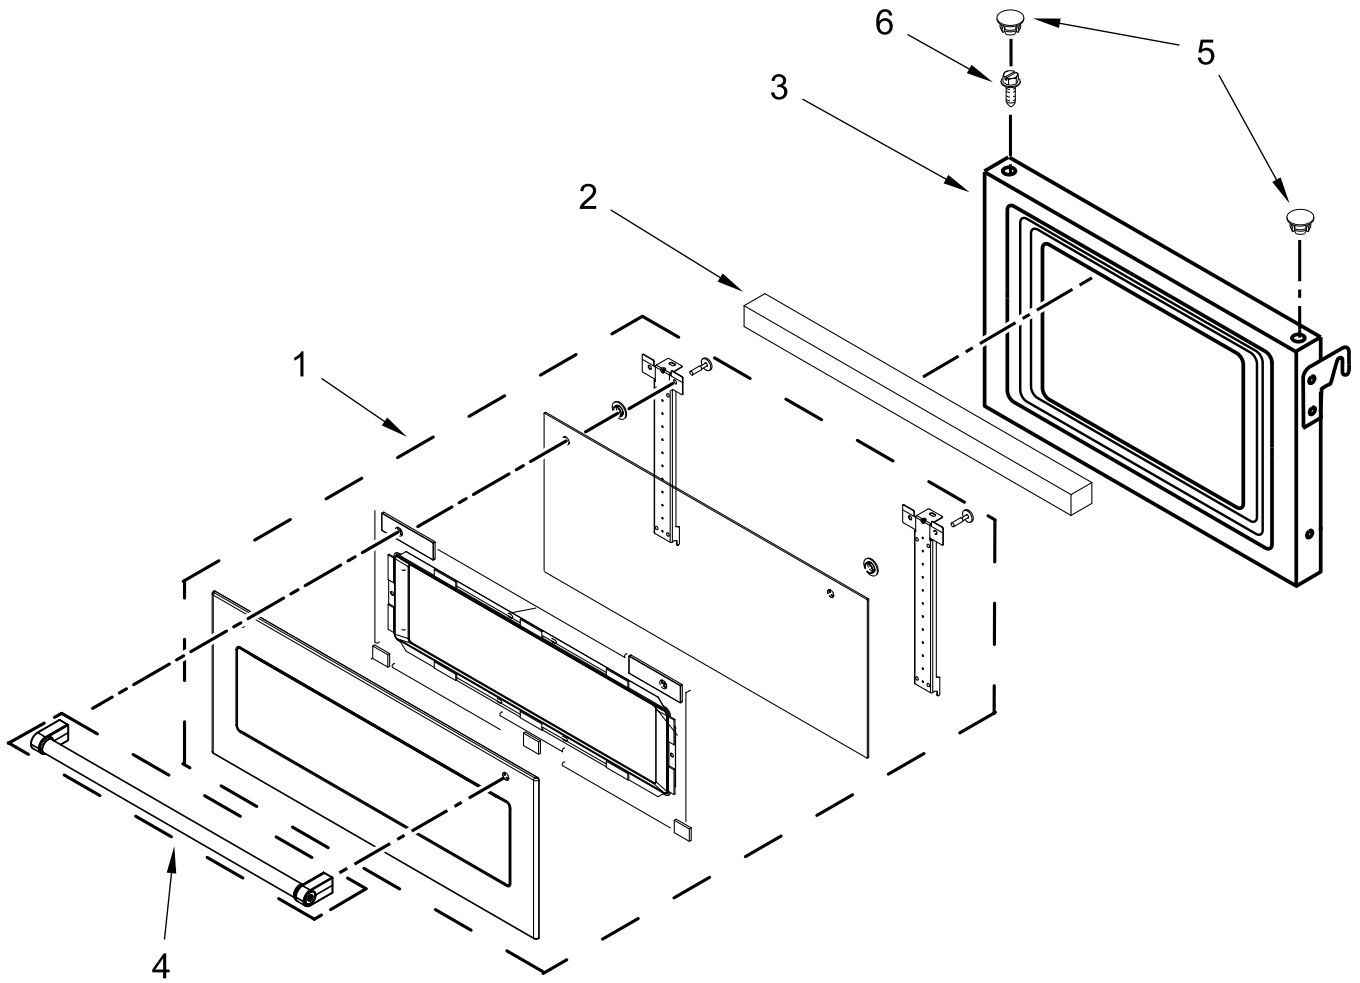

MICROWAVE DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Door	3	W10737653	Assembly, Inner Door	5	8304588BL	Cap, Screw
	W10615381	White	4		Assembly, Handle	6	W10143304	Screw
	W10615380	Black		W10640874	Stainless			
	W10615379	Stainless						
2	W10359769	Foam, Door Handle						

INTERNAL MICROWAVE PARTS

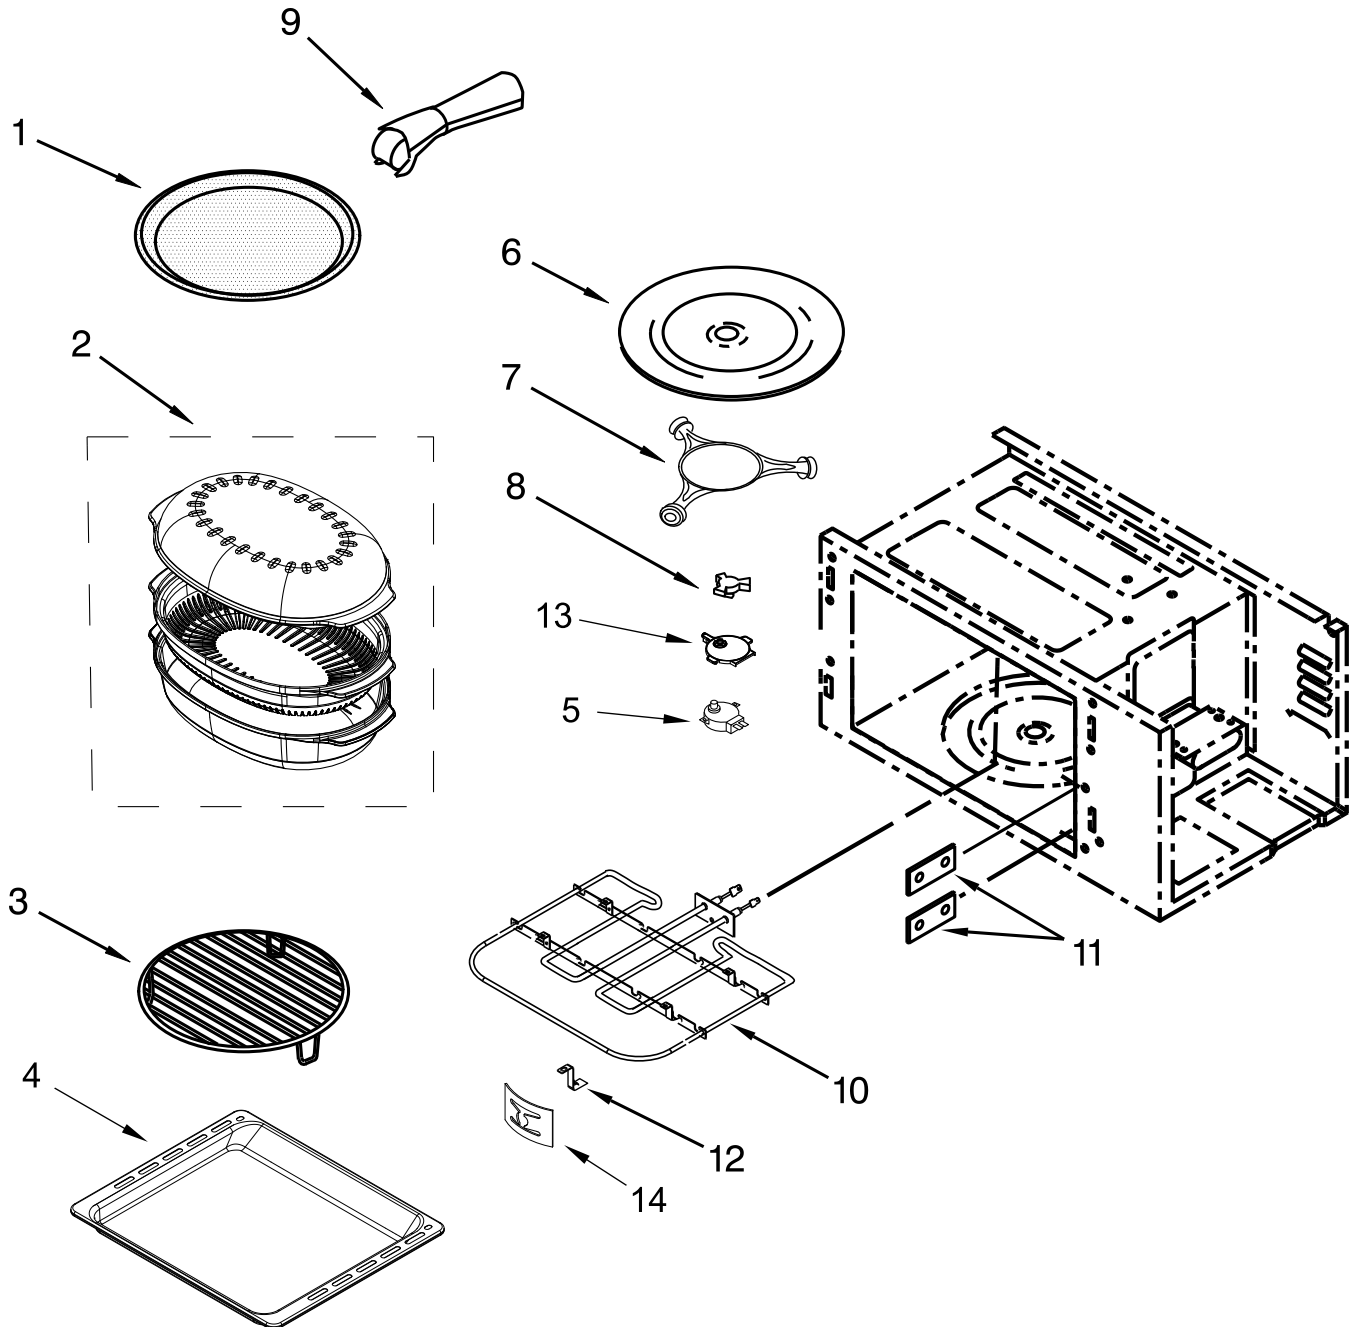


INTERNAL MICROWAVE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	461968977491	Plate, Crisp
2	461965699731	Steamer
3	W10748279	Rack, Low Convection
4	W10750839	Plate, Baking
5	461967848971	Motor, Turntable

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
6	461967721091	Turntable
7	W10367316	Ring, Turntable
8	W10545578	Drive, Turntable
9	461968929542	Handle, Pan
10	W10387651	Element, Grill

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
11	461967451001	Plate, Cover
12	461967753871	Support, Element
13	461967753742	Adapter, Turntable Motor
14	252262898008	Support, Spring Lock Grill


OVEN PARTS

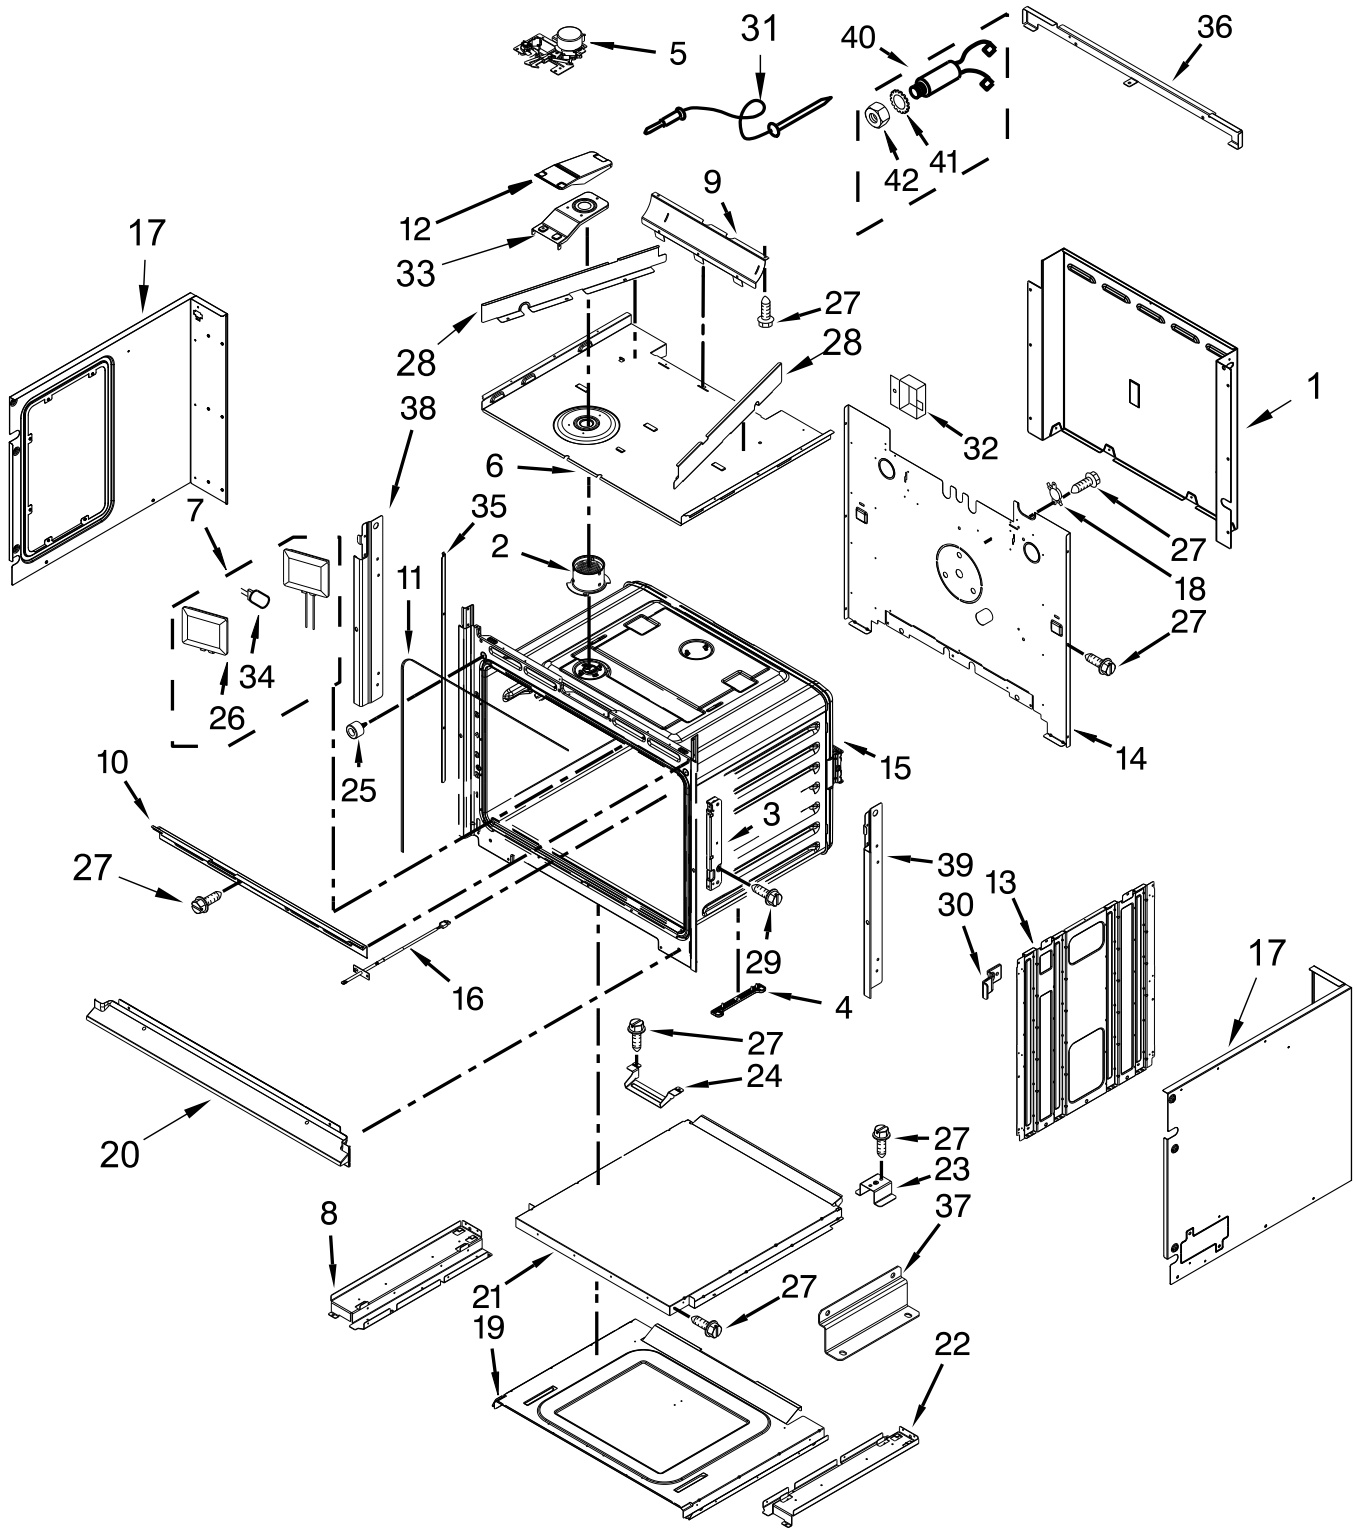

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10519707	Cover, Back Duct	18	4449751	Thermostat (TOD)	33	W10616809	Base, Vent Exhaust
2	W10282946	Tube, Vent	19	W10282901	Base, Chassis	34	W10472384	Bulb, Light
3	W10616802	Receiver, Hinge	20		Assembly, Bottom Vent	35		Trim, Side
4	W10618102	Spacer, Base		W10327375	Black		W10344483	Black (Left)
5	W10618131	Latch, Motorized		W10506349	White		W10344482	Black (Right)
6	W10813744	Chassis, Top		W10351280	Stainless	36	W10283023	Support, Crossbar
7	W10519866	Assembly, Oven Light	21	W10283008	Chassis, Bottom Duct	37	W10283025	Side, Bracket
8	W10283020	Support, Base (Left)	22	W10283021	Support, Base (Right)	38	W10360517	Rail, Side (Left)
9	W10641572	Deflector, Blower	23	W10213759	Support, Air Channel	39	W10360519	Rail, Side (Right)
10	W10495155	Vent, Center 27"	24	W10351308	Spacer, Chassis Bottom Duct	40	W10696226	Jack, Meat Probe
11	W10282961	Gasket	25	W10351278	Bumper & Screw	41	9755547	Washer, Lock
12	W10616810	Cover, Vent Exhaust	26	W10472386	Lens, Light	42	9755546	Nut, Hidden
13	W10318190	Side, Chassis	27	7101P426-60	Screw			Following Parts Not Illustrated
14	W10813734	Back, Chassis	28	W10681156	Deflector, Chassis		W10520716	Insulation, Wrap
15		Liner, Oven (Not Serviceable)	29	W10254050	Screw		W10282945	Insulation, Back
16	W10622170	Probe, Sensor	30	W10347649	Spacers, Front			
17	W10655466	Chassis, Combo Side (Left)	31	9755542	Probe, Temperature			
	W10351301	Chassis, Combo Side (Right)	32	8285593	Cover, Connector			

OVEN DOOR PARTS

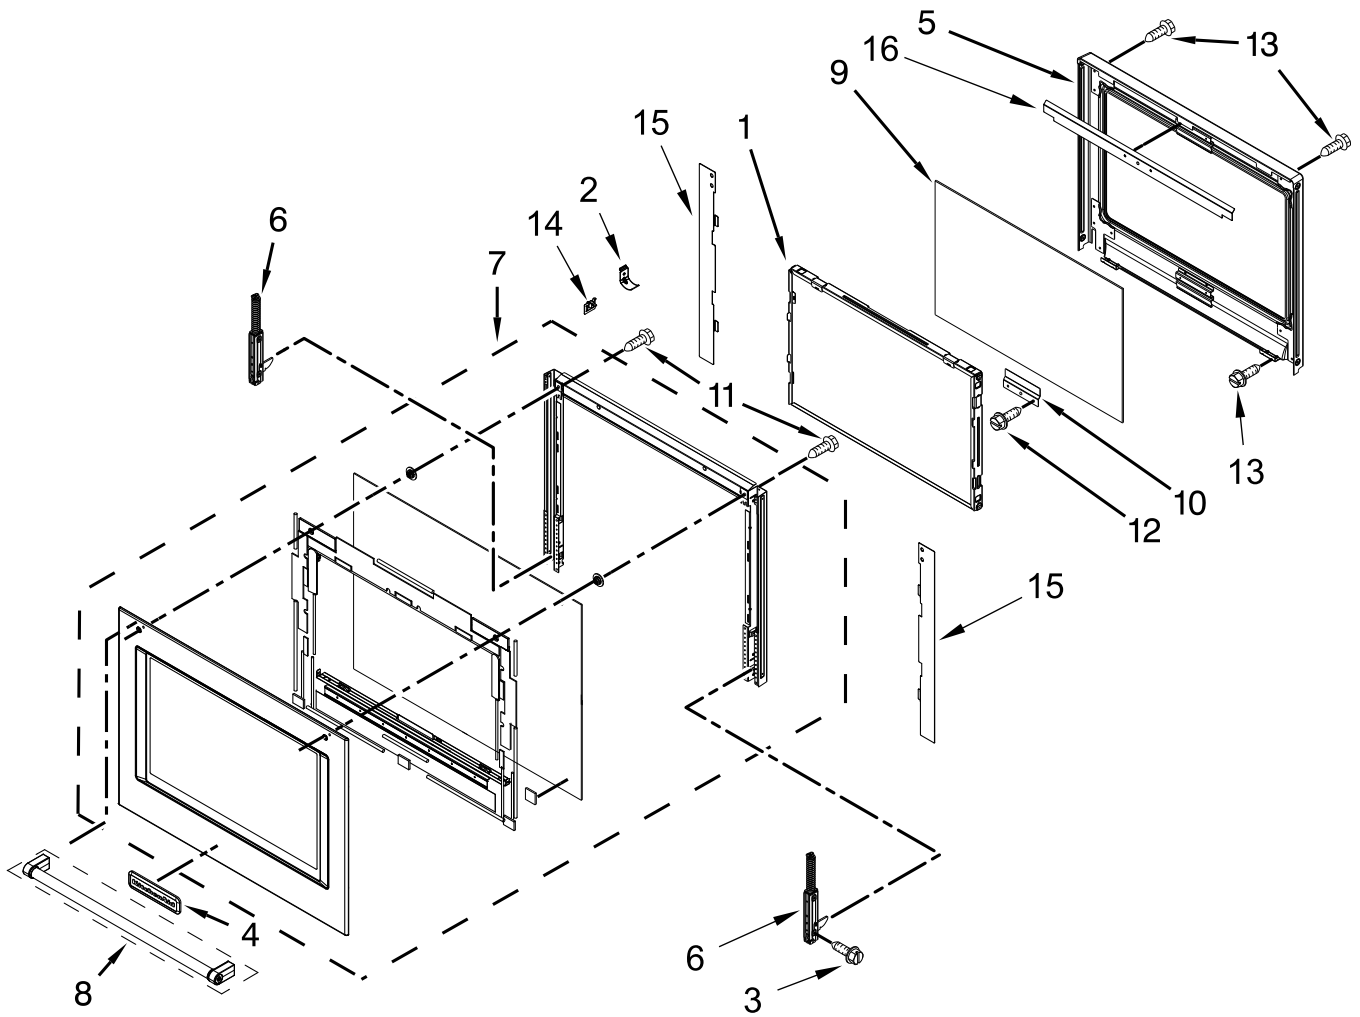


OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10347597	Assembly, Window Pack
2	W10284285	Spring, Door Glass Fixation
3	3196183	Screw
4		Badge
	W10518672	Grey
5	W10320793	Assembly, Liner
6	W10639067	Hinge, Door

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7		Assembly, Door
	W10615246	Black
	W10615247	White
	W10615245	Stainless
8		Assembly, Handle
	W10640874	Stainless
9	W10678525	Glass, Inner
10	W10284297	Bracket, Glass
11	W10480830	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
12	7101P426-60	Screw
13	7101P635-60	Screw (Black)
14	W10653954	Clip, Spring Metal
15	W10687815	Extension, Side Rail (Left)
	W10687814	Extension, Side Rail (Right)
16	W10669415	Shield, Door Liner

INTERNAL OVEN PARTS

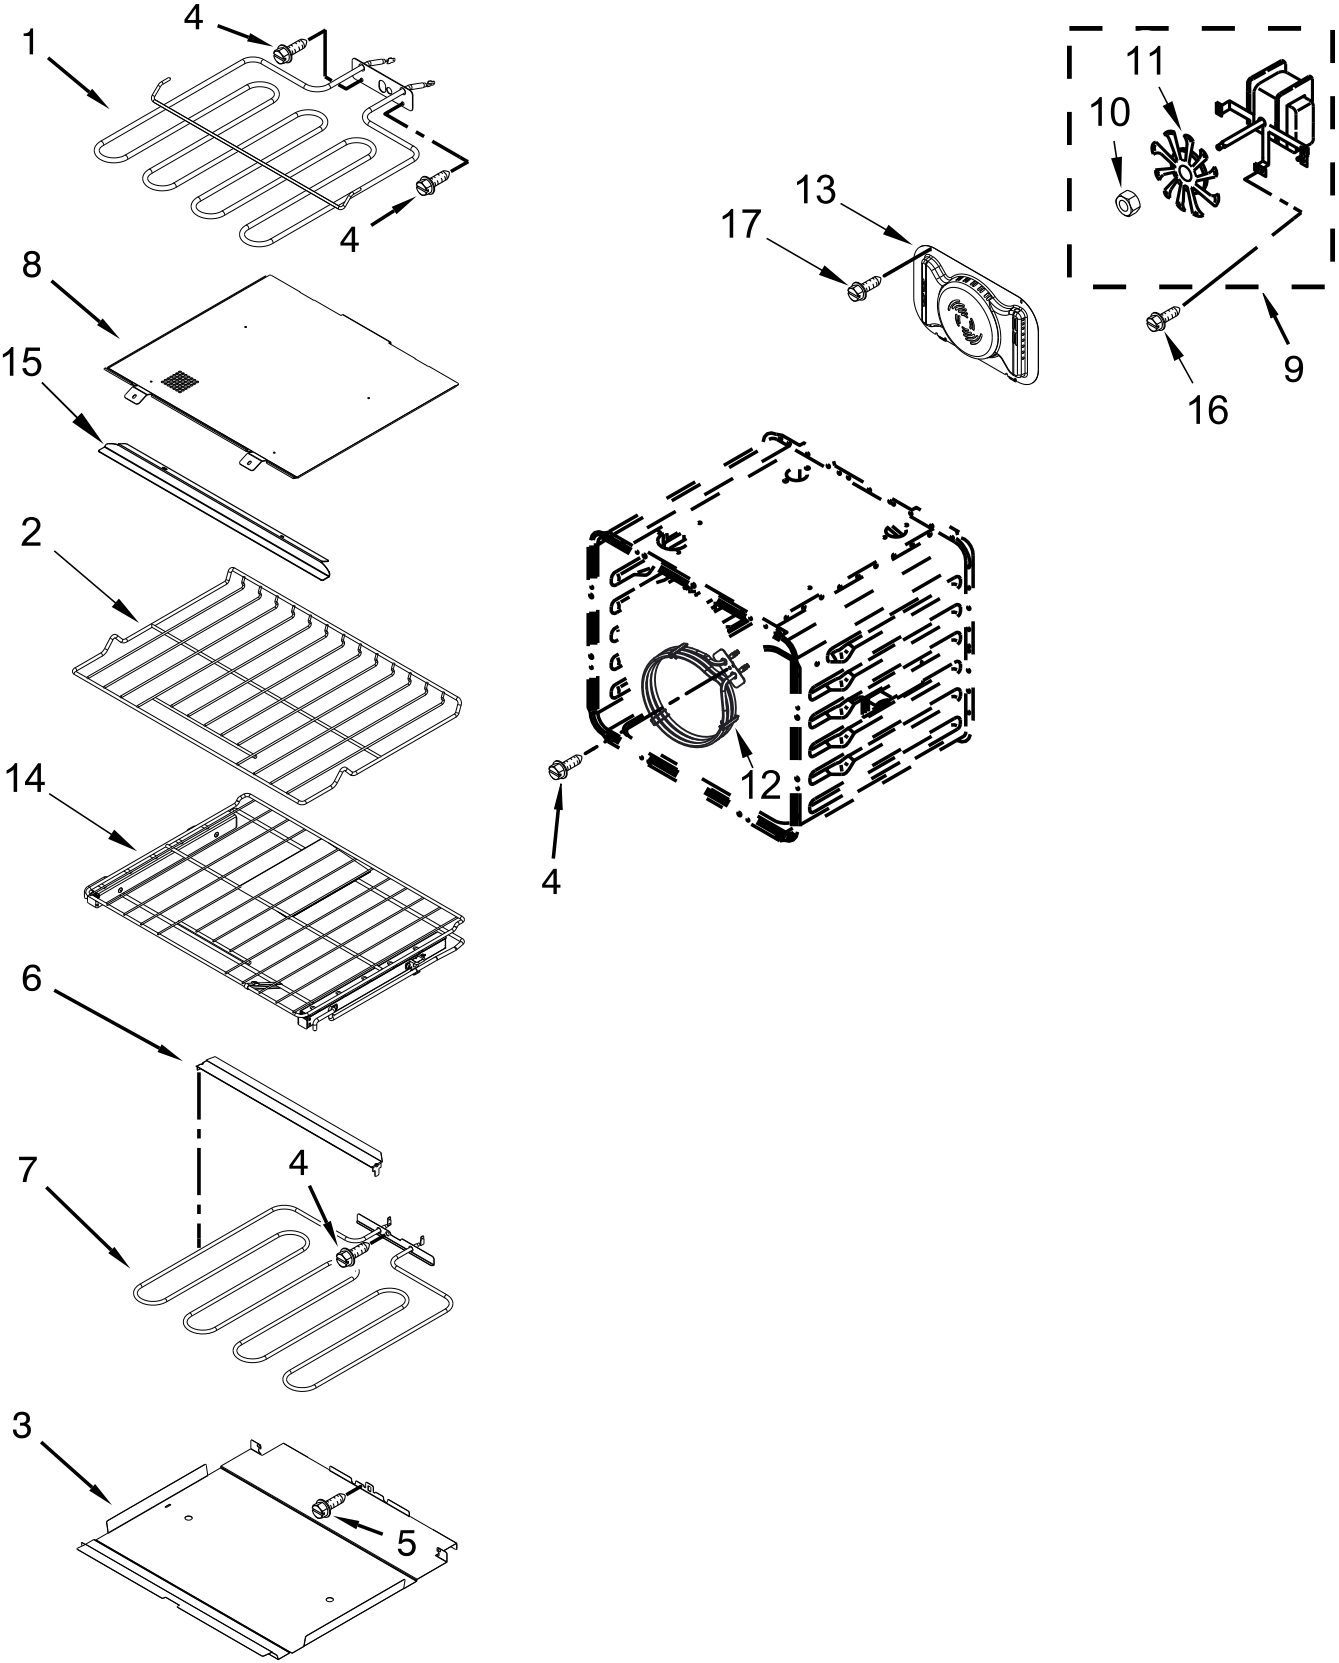

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10764078	Element, Broil
2	W10554529	Rack, Oven
3	W10318198	Tray, Hidden Bake
4	7101P434-60	Screw
5	7101P426-60	Screw
6	W10282957	Crossbar, Hidden Bake Tray

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10546517	Element, Bake
8	W10318164	Shield, Broil Element
9	W10722667	Fan, Convection
10	W10631504	Nut, Acorn
11	W10631503	Blade, Fan
12	W10546519	Element, Convection

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
13	W10359277	Baffle, Bow Tie
14	W10554532	Rack, Sliding
15	W10588738	Shield, Broil Front
16	W10720084	Screw
17	7101P500-60	Screw

OPTIONAL PARTS

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black

PAINT, SPRAY

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	261900	Citrine White
	830864	Black

ADHESIVE

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	482338	Sealer, Silastic

ACCESSORIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355049	Wipes, Stainless Steel Cleaning
	W10355010	Cleaner, Kitchen & Appliance
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan & Roasting