


**KitchenAid®**

**30" SLIDE IN DUAL FUEL RANGE**

**MODELS:**

KSDB900ESS0 (Stainless)


# COOKTOP PARTS

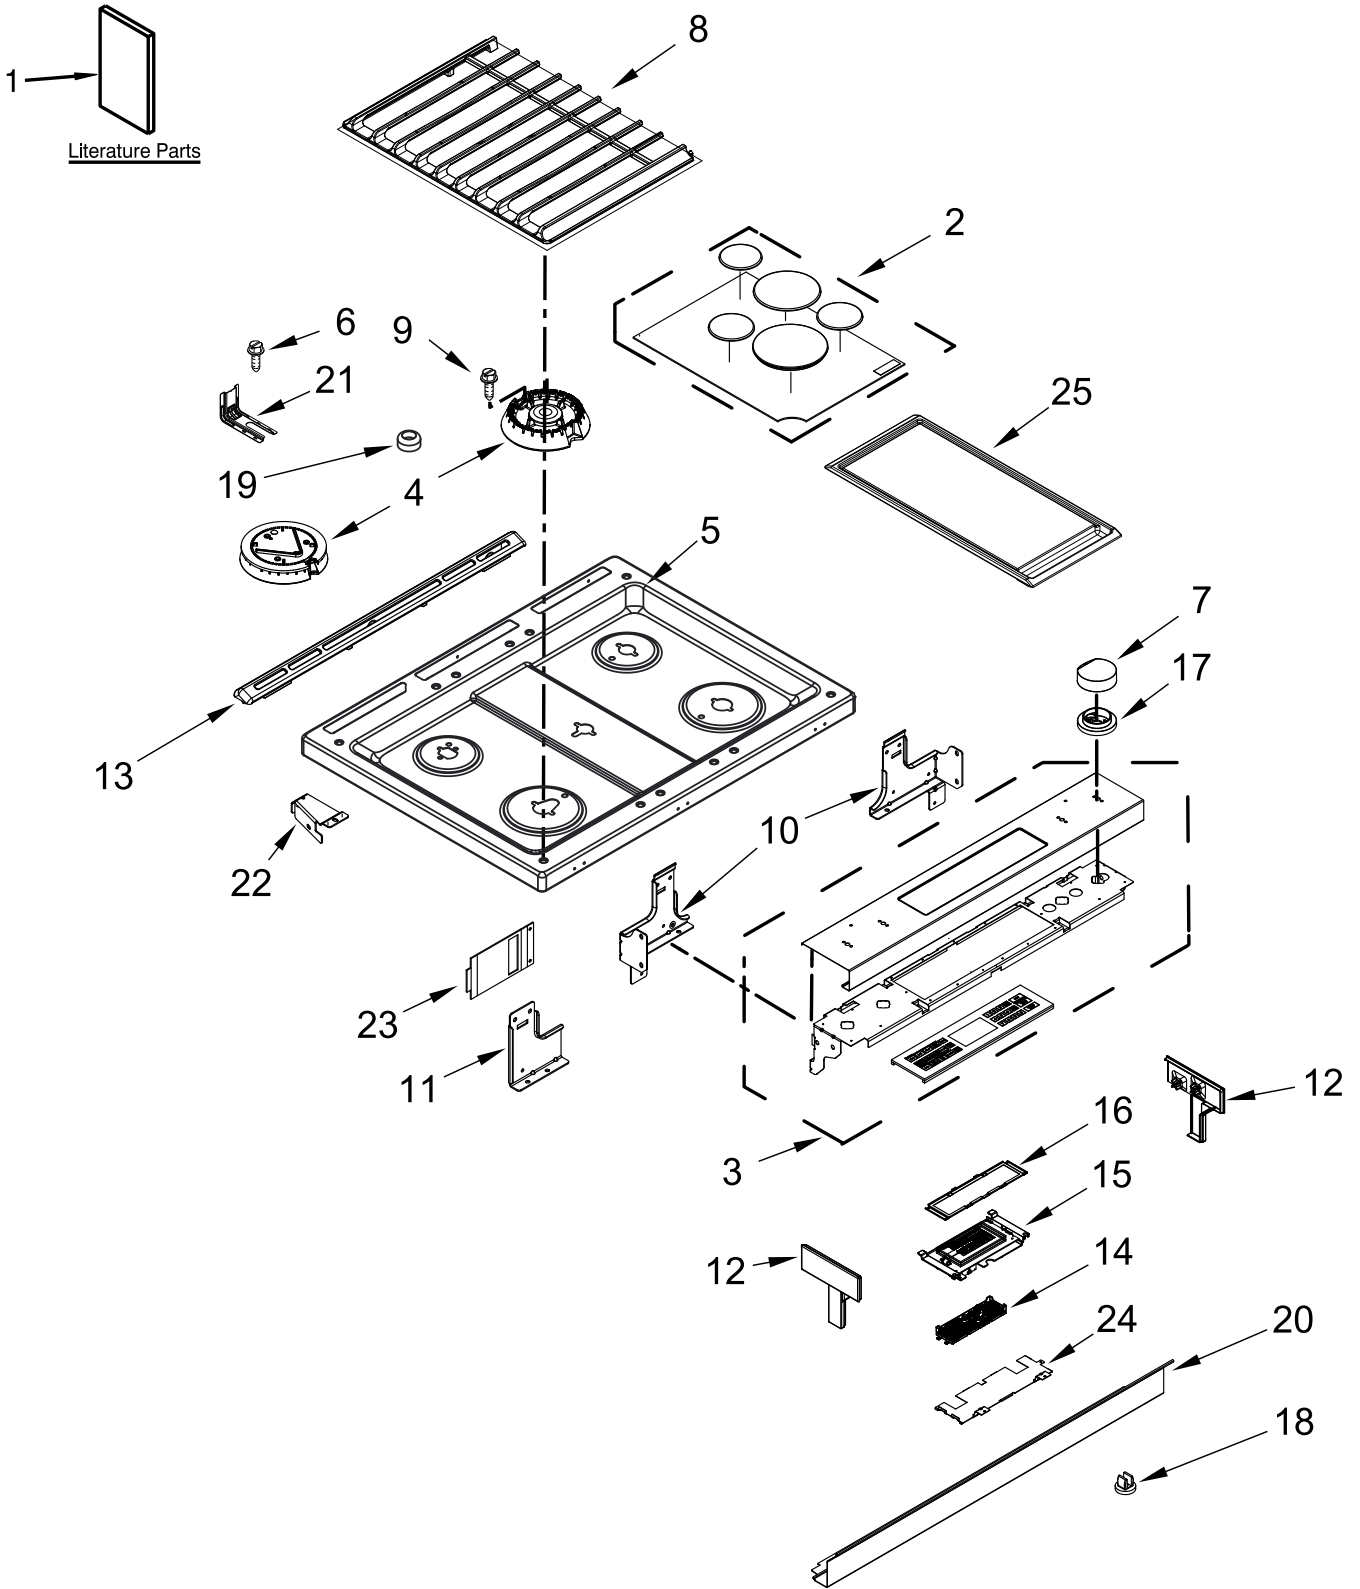

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5		Cooktop	16	W10555923	Bracket, User Interface
	W10665259	Instructions, Installation		W10588278	Stainless	17		Bezel
	W10722061	Use and Care Guide	6	7101P485-60	Screw, Anti-Tip Kit		W10785119	Stainless
	W10665227	Sheet, Tech	7		Knob	18	W10645947	Grommet
	9762761	Tips, Safe Cooking (English)		W10579760	Stainless (Right Front, Right Rear, Left Rear and Center)	19	W10664705	Bumper
	W10065852	Tips, Safe Cooking (French)		W10579761	Stainless (Left Front)	20		Panel, Lower Console
	W10400066	Guide, Quick Start (English)	8		Set, Grate		W10555934	Stainless
	W10400067	Guide, Quick Start (French)		W10432520	Black	21	W10606241	Bracket, Anti-Tip
	W10703185	Wiring Diagram	9	3196169	Screw	22	W10162253	Brace, Corner (Left)
2		Set, Burner Cap	10	W10289170	Support, Cooktop (Left)		W10162252	Brace, Corner (Right)
	W10479989	Black		W10289169	Support, Cooktop (Right)	23	W10757531	Keypad, Shield
3		Console	11	W10598048	Bracket, Console (Center)	24	W10558372	Bracket, Control
	W10697324	Stainless	12		Endcap	25	W10432544	Griddle
4	W10495853	Spreader, Flame (20K) (Left Front)		W10555937	Stainless (Left)			FOLLOWING PARTS NOT ILLUSTRATED
	W10464795	Spreader, Flame (Left Rear)		W10555940	Stainless (Right)		W10580314	Harness, Main
	W10256028	Spreader, Flame (Right Front)	13		Trim, Vent		W10575120	Harness, Keypad
	W10256025	Spreader, Flame (Right Rear & Center)		W10636529	Stainless		W10598169	Harness, Display
			14	W10453977	Control, MRC2		W10580316	Harness, Bake Drawer
			15	W10603094	Assembly, Display		313438	Clip, Harness
							3196520	Clip, Wire


# CHASSIS PARTS

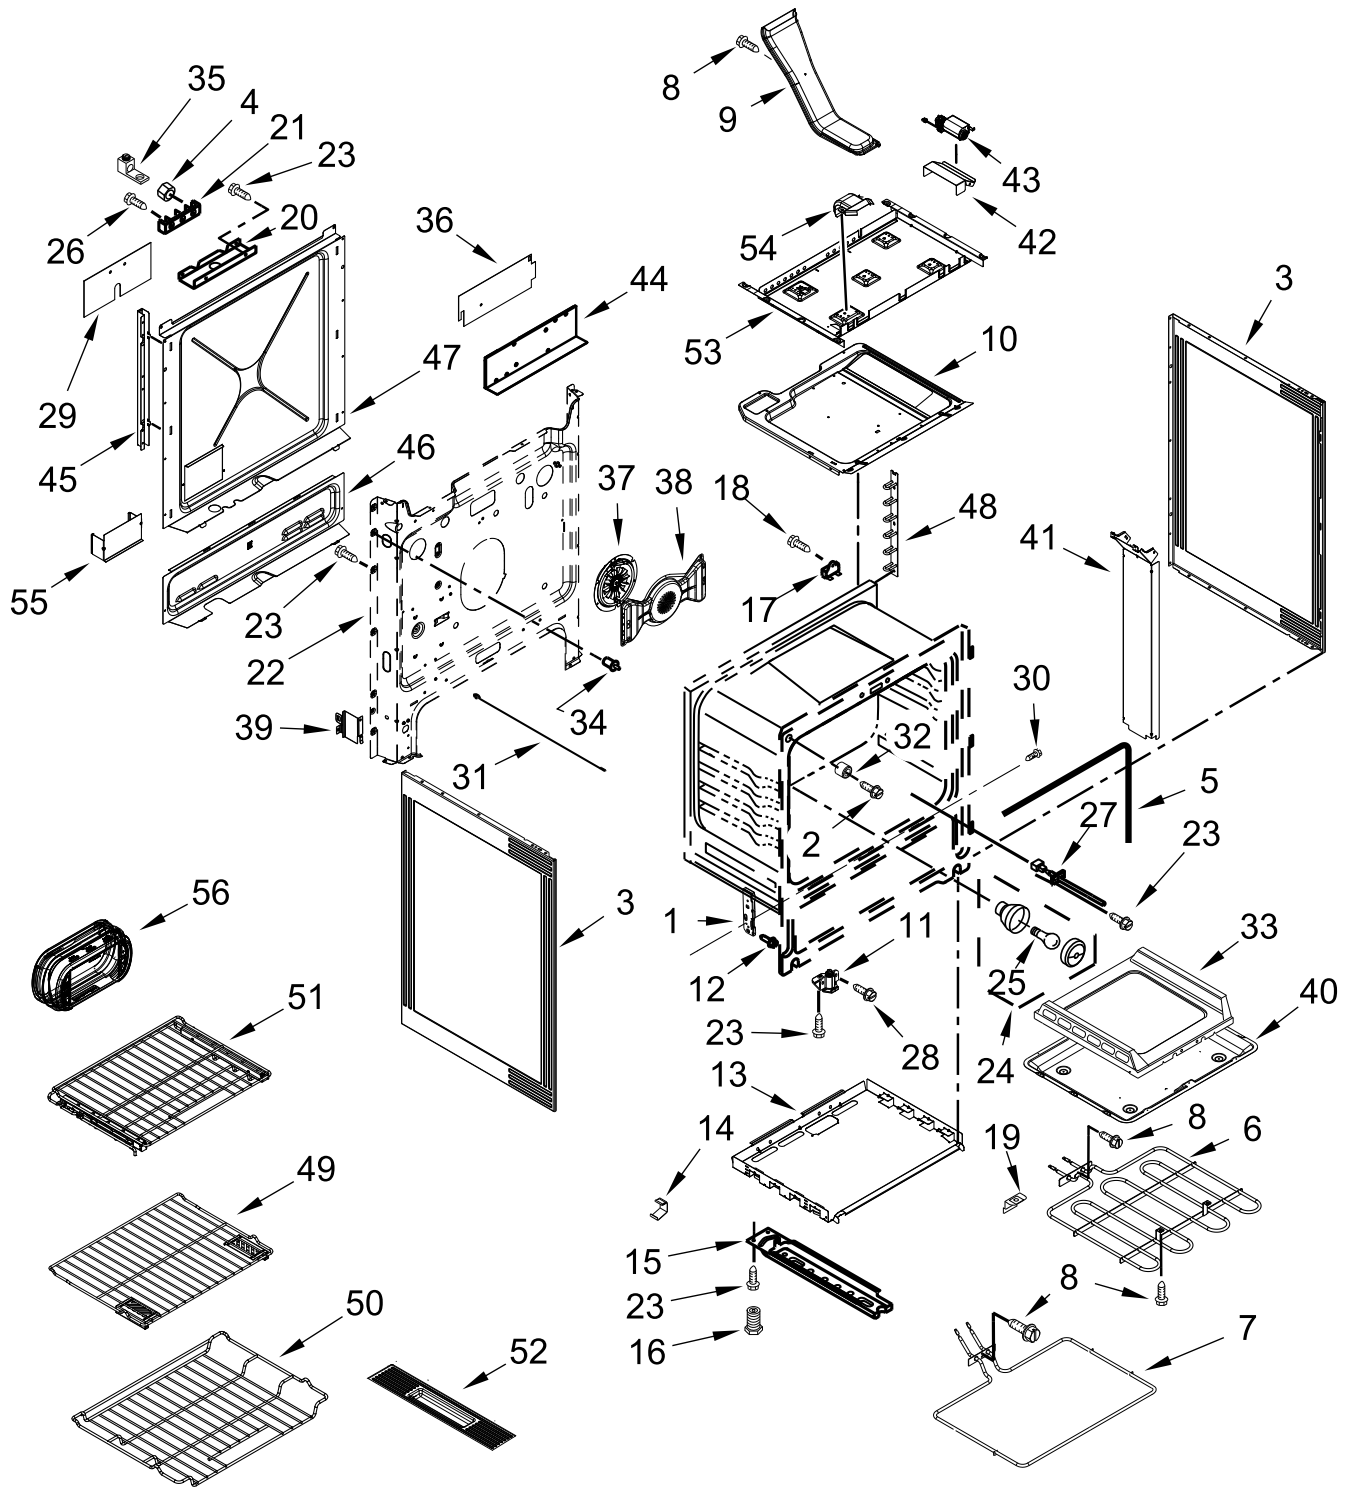

# CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10289077	Receiver, Hinge	26	3400016	Screw	52	W10686408	Kit, Reservoir (Steam Rack)
2	W10362924	Screw	27	W10586204	Sensor	53	W10558276	Box, Burner
3		Panel, Side	28	3196169	Screw	54	W10162257	Duct, Cooktop
	W10162245	Black	29	W10655441	Shield, Power Cord	55	W10162258	Cover, Regulator
4	3400029	Nut	30	W10031780	Screw	56		The wireless meat probe is a licensed product and covered by the manufacturer total replacement warranty. If the customer has any questions or concerns regarding the accessory please have them call KitchenAid Customer Satisfaction Center toll-free at 1-800-541-6390 or visit our web site at <a href="http://www.KitchenAid.com">www.KitchenAid.com</a> . No warranty claims will be paid for the wireless meat probe or will this be a service part.
5	W10162385	Gasket, Door	31	W10273192	Rod, Door Switch			INSULATION
6	W10544952	Element, Broil	32	9758701	Spacer, Door	W10655489		Insulation, Wrapper
7	W10774342	Element, Bake	33	W10774446	Bottom, Oven	W10655490		Insulation, Main Back
8	W10362924	Screw	34	W10627802	Switch, Door	W10575374		Insulation, Bottom
9	W10613792	Assembly, Flue	35	W10281322	Kit, Bare Wire Adapter Block	W10716764		Insulation, Burner Box
10	W10289168	Box, Burner	36	W10655485	Shield, Wire	4820F015-59		Insulation, Strap
11	W10341186	Assembly, Front Foot	37	W10563084	Assembly, Convection	W10655442		Insulation, Heat Shield
12	W10067840	Screw	38	W10346153	Baffle, Full Convection	7111P017-60		Clamp, Wire
13	W10541959	Shield, Bake	39	W10273002	Bracket, Oven Support			
14	W10137382	Clip, Panel	40	W10346147	Pan, Bake			
15	W10390008	Assembly, Base Rail (Left)	41	W10162255	Duct, Cover			
	W10390007	Assembly, Base Rail (Right)	42	W10162254	Duct, Cooling			
16	W10058460	Foot, Leveling	43	W10162259	Assembly, Cooling Fan			
17	3196548	Fuse, Thermal	44	W10162260	Shield, Heat			
18	3196172	Screw	45	W10162241	Channel, Rear			
19	W10035900	Support, Oven Bottom	46	W10575377	Cover, Wire			
20	3186034	Bracket, Service	47	W10289172	Cover, Back			
21	W10245259	Block, Terminal	48	W10603482	Rack, Ladder			
22		Back, Main	49	W10554007	Rack, Steam			
23	3196178	Screw	50	W10554006	Rack, Maximum Capacity			
24	W10454648	Assembly, Light	51	W10554008	Rack, Sliding			
25	311255	Bulb, Oven Light						


# MANIFOLD PARTS

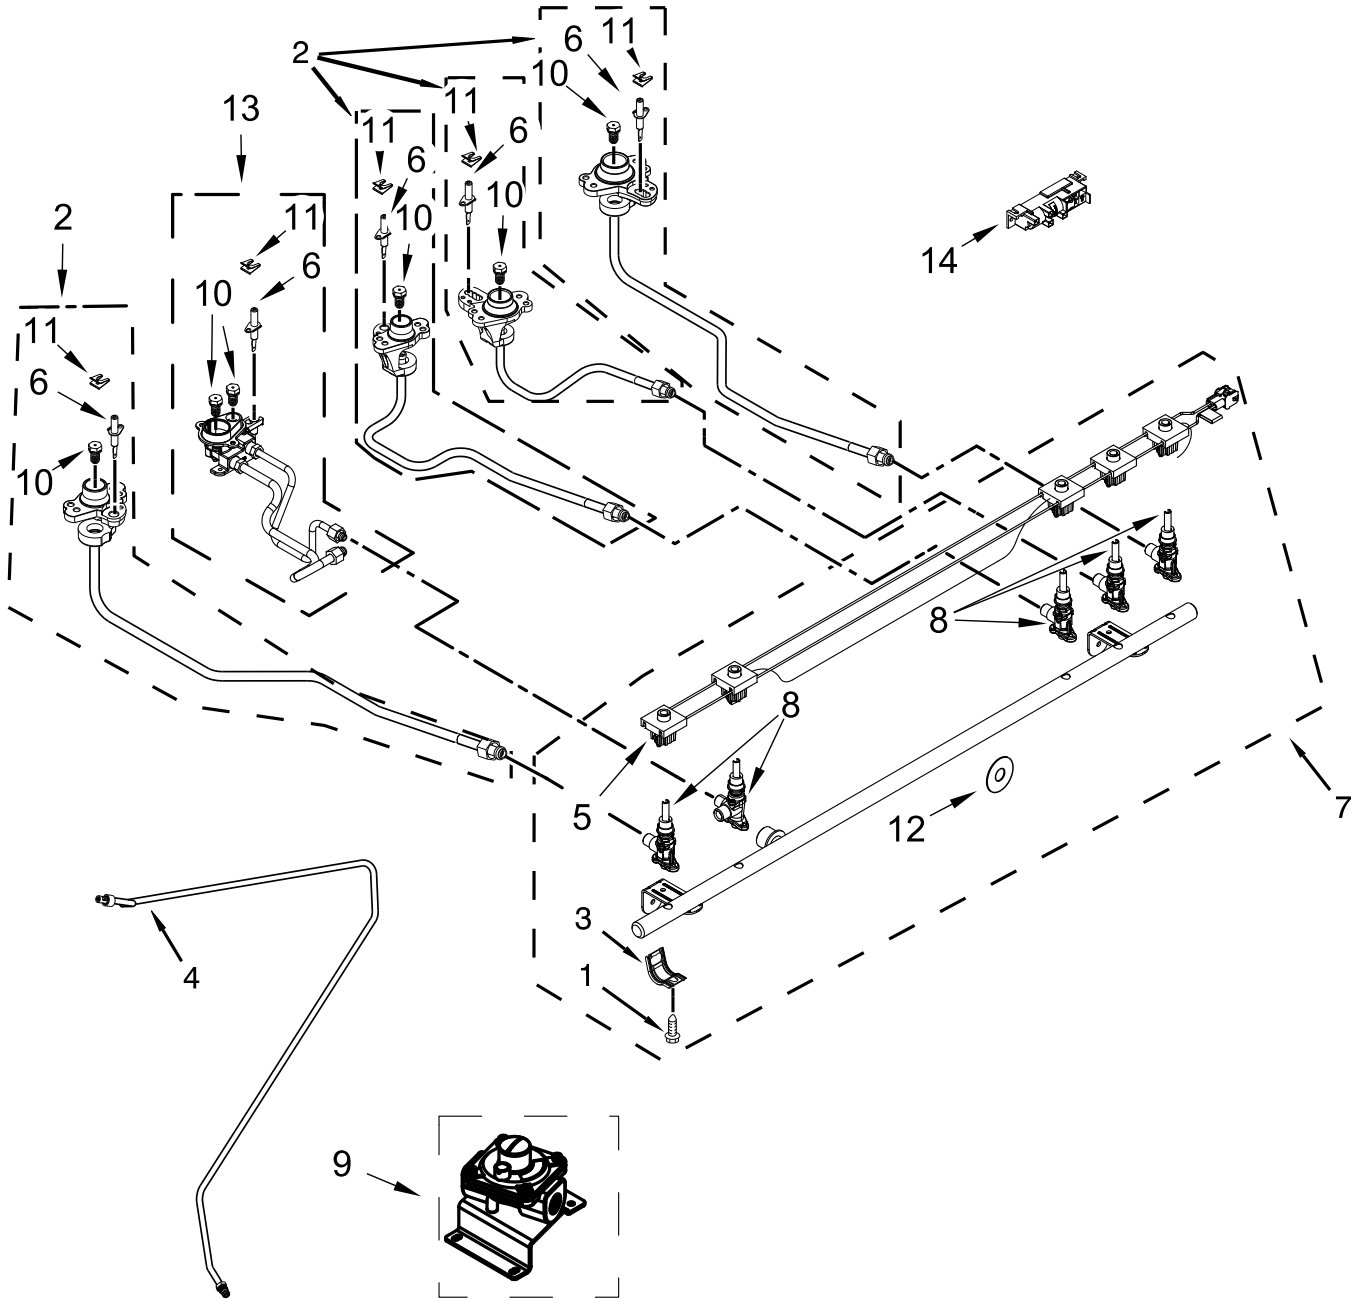

# MANIFOLD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10295997	Screw, Valve	8	W10566057	Valve, Gas (Right Rear & Center)	13	W10552122	Orifice, Assembly (Left Front)
2	W10552120	Orifice, Assembly (Right Front)		W10566062	Valve, Gas (Right Front)	14	W10475149	Module, Spark (5+0) Following Parts Not Illustrated
	W10552119	Orifice, Assembly (Right Rear)		W10566055	Valve, Gas (Left Rear)		W10681410	Kit, LP Conversion
	W10552121	Orifice, Assembly (Left Rear)		W10432224	Valve, Gas Duel (Left Front)		W10566534	Kit, Bake & Broil
	W10552124	Orifice, Assembly (Center)	9	W10661850	Assembly, Regulator & Bracket			
3	W10295996	Bracket, Saddle Valve	10	W10434277	Orifice (Right Front)			
4	W10552945	Tube, Supply		W10657949	Orifice (Right Rear)			
5	W10432517	Harness, Switch Spark		W10256132	Orifice, 1.2K (Left Front)			
6	W10496872	Electrode (Right Rear)		W10566082	Orifice, 19K (Left Front)			
	W10496870	Electrode (Right Front and Center)		W10657947	Orifice (Center)			
	W10464799	Electrode (Left Rear)		W10515054	Orifice (Left Rear)			
	W10496874	Electrode (Left Front)	11	W10575401	Clip, Spring Electrode			
7	W10475026	Assembly, Manifold	12	W10140571	Seal, Switch Shaft			

# DOOR PARTS

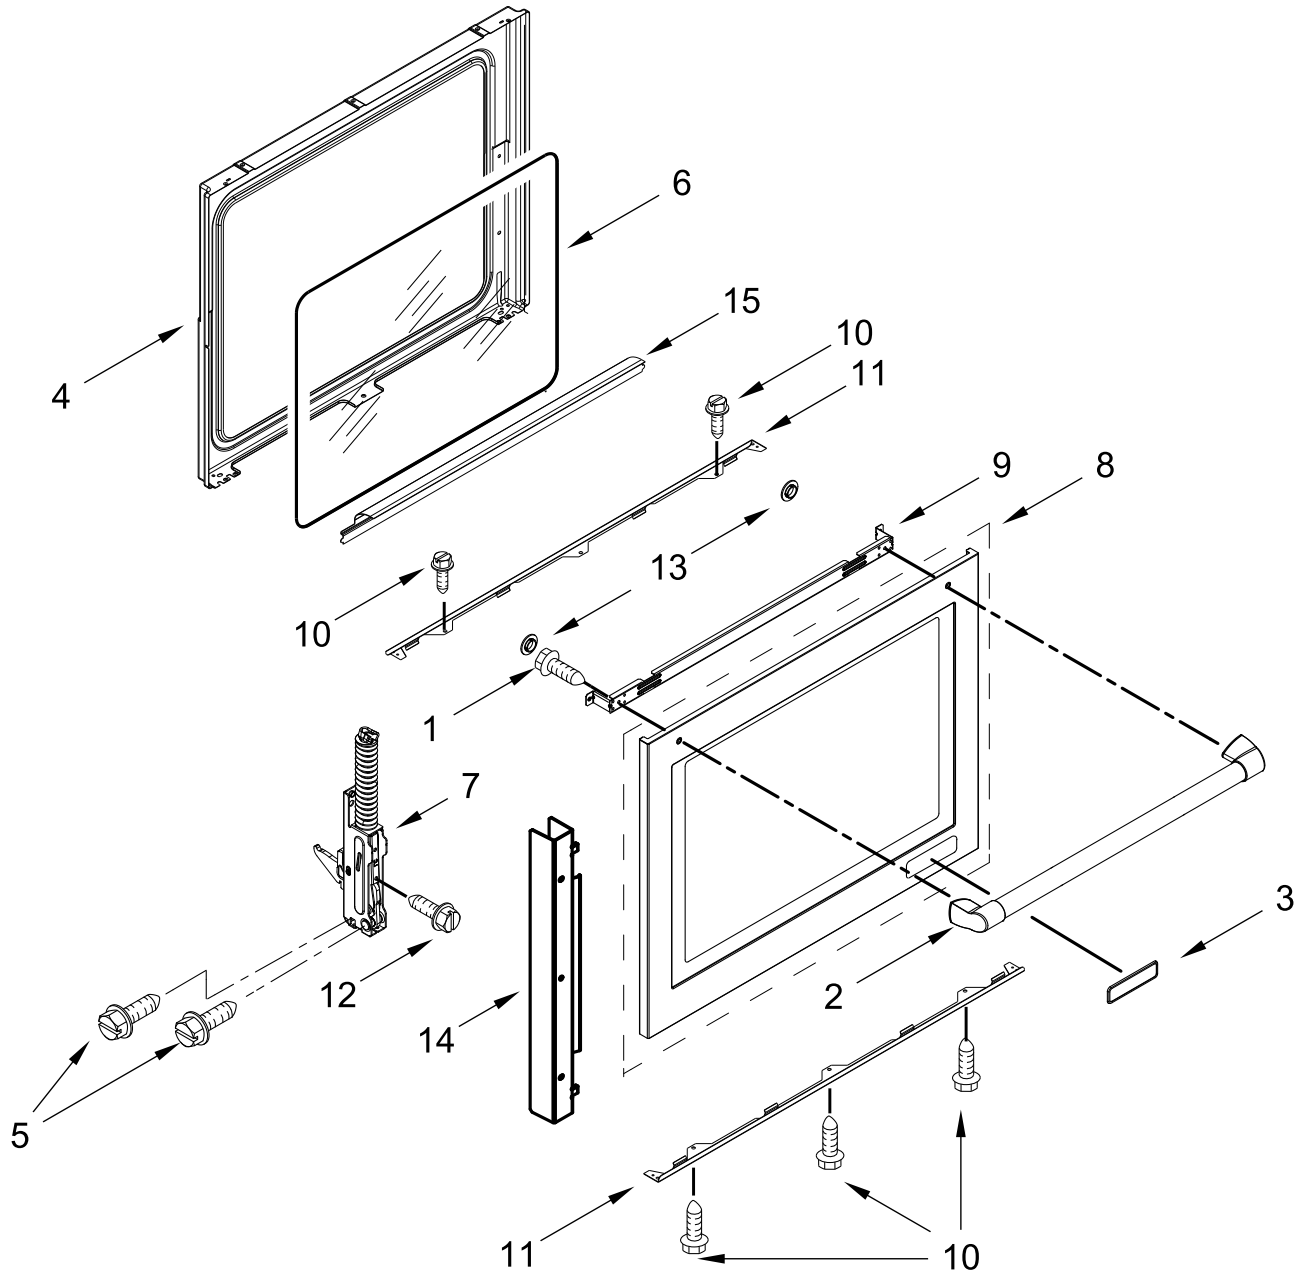




# DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	9780274	Screw
2		Handle, Door
	W10551000	Stainless
3		Badge
	W10518672	Grey
4	W10541882	Liner, Door
5	W10031790	Screw
6	W10541888	Glass, Inner

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	W10388635	Hinge, Door (Active)
8		Panel, Door
	W10634271	Stainless
9	W10541911	Bracket, Glass Upper
		Handle
10	W10327235	Screw
11	W10541885	Support, Glass
12	W10031780	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
13	W10319024	Washer, Door
14	W10541883	Hinge, Support Rail
15		Scoop, Door
	W10551024	Stainless

# DRAWER PARTS

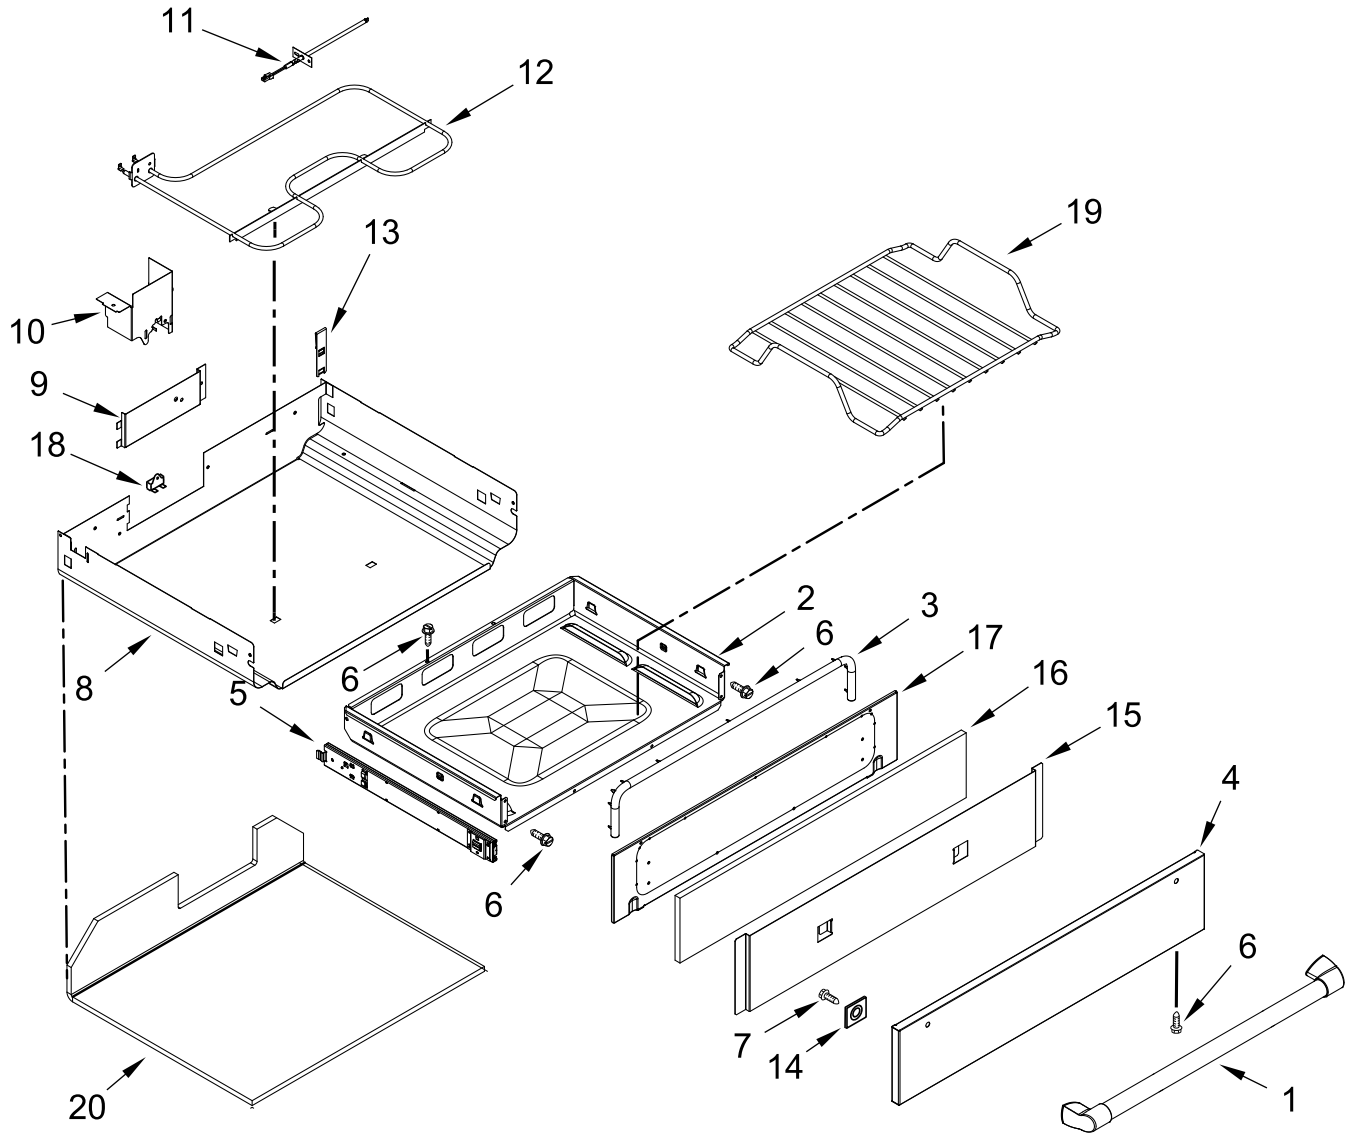

# DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Handle, Drawer
	W10551000	Stainless
2	W10634257	Drawer, Bake
3	W10550987	Seal, Drawer
4		Panel, Drawer Front
	W10541954	Stainless
5	W10541946	Slide, Drawer (Left)
	W10541945	Slide, Drawer (Right)
6	W10327235	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
7	3400882	Screw
8	W10634260	Enclosure, Warming
9	W10727084	Cover, Gas Valve
10	W10634259	Cover, Wire
11	W10720530	Sensor
12	W10541944	Element, Bake
13	W10551019	Cover, Side
14	3823F017-45	Spacer, Handle
15	W10551018	Insulation, Drawer Front

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
16	W10550982	Insulation, Drawer
17	W10541947	Panel, Front Inner
18	W10729897	Fuse, Thermal
19	W10602493	Rack, Bake Drawer
20	W10551011	Insulation, Bake Drawer Bottom

# OPTIONAL PARTS (NOT INCLUDED)

## PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

## PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	4392901	Biscuit/Bisque

## PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

## REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

## INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

## ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		CLEANERS / POLISHES
	31605	Kit, Cooktop Care
	31463A	Protectant, Cooktop
	W10355051	Cleaner, Cooktop
	W10355016	Cleaner, Stainless Steel
	WA906B	Scraper, Cooktop
	W10355049	Wipes, Stainless Steel Cleaning
	W10355010	Cleaner, Kitchen & Appliance
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	W10432019	Alt Cleaning Kit
	W10391473	Pad, Cooktop Cleaning
		MISCELLANEOUS
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan & Roasting
	W10432539	Griddle
	W10432545	Kit, Grill
	242905	Kit, Canning Unit
		TRIM KITS
	W10675026	Black
	W10675027	White
	W10675028	Stainless
		BACKSPLASH ASSEMBLY
	W10655449	Black
	W10655448	White
	W10655450	Stainless