

5KMT2116A
5KMT4116A

 


KitchenAid


PARTS AND FEATURES

PARTS AND ACCESSORIES

2-Slice

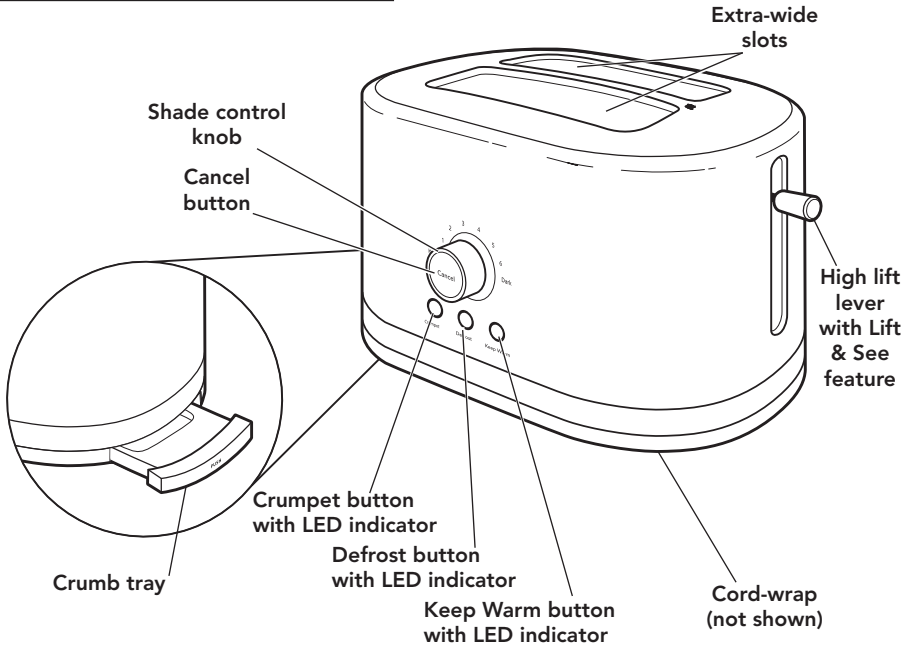

Long slot (4-slice)

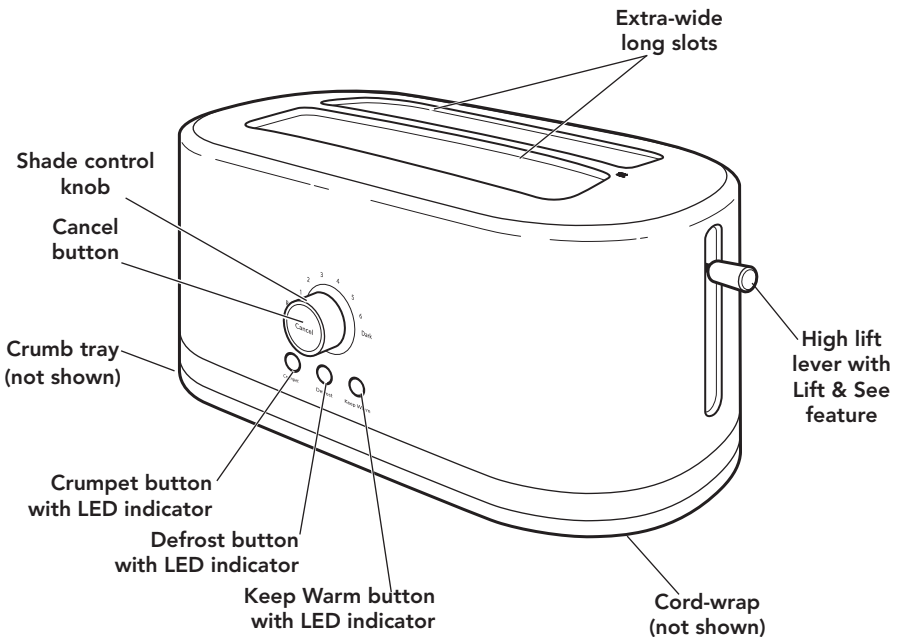 

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

 **DANGER**

You can be killed or seriously injured if you don't immediately follow instructions.

 **WARNING**

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions. Misuse of appliance may result in personal injury.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs, or Toaster in water or other liquid.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
5. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest Authorised Service Facility for examination, repair or adjustment.

6. Unplug Toaster from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts. Detail for cleaning of the appliance, please refer to the “Care and Cleaning” section.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, press “Cancel” then remove plug from outlet.
12. Do not use Toaster for other than intended use.
13. Oversize foods, metal foil packages, or utensils must not be inserted in Toaster as they may involve a risk of fire or electric shock.
14. A fire may occur if Toaster is covered with or touching flammable material, including curtains, draperies, walls and the like, when in operation.
15. Do not attempt to dislodge food when Toaster is plugged in.
16. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices, or other working environments;
 - farm houses;
 - by clients in hotels, motels, and other residential type environments;
 - bed and breakfast type environments.
17. The appliances are not intended to be operated by means of an external timer or separate remote-control system.
18. The bread may burn, therefore do not use the Toaster near or below combustible material, such as curtains.

SAVE THESE INSTRUCTIONS

TOASTER SAFETY

ELECTRICAL REQUIREMENTS

! WARNING



Electrical Shock Hazard

Plug into a grounded outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

Voltage: 220-240 Volts A.C. only

Frequency: 50/60 Hz

NOTE: Your Toaster has a grounded plug. To reduce the risk of electrical shock, this plug will fit in an outlet only one way. If the plug does not fit in the outlet, contact a qualified electrician. Do not modify the plug in any way.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.

The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

FOR DETAILED INFORMATION ON USING THE TOASTER

Visit kitchenaid.com.au or kitchenaid.co.nz for additional Instructions with videos, inspiring recipes, and tips on how to use your Toaster.

USING THE TOASTER

BEFORE FIRST USE

! WARNING



Electrical Shock Hazard

Plug into a grounded outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

Before using your Toaster, check the extra-wide slots and remove any packing or printed material that might have fallen inside during shipping or handling. To avoid damage to the Toaster, do not probe inside the Toaster slots with any metal objects.

 
Shorten cord, if necessary, by wrapping cord under the base. The Toaster's feet are tall enough to allow the cord to exit from under any side of the Toaster.

Plug into a grounded outlet. Plug will vary by region.


NOTE: You may see light smoke the first time you use the Toaster. This is normal. The smoke is harmless and will soon dissipate.

USING THE TOASTER

TOASTING

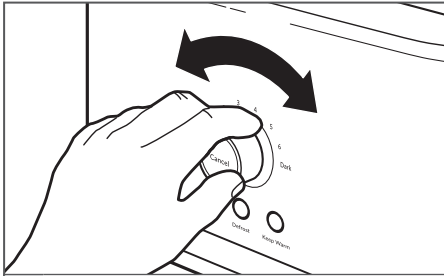

 
- 1** Select your desired shade by turning the shade control knob to the right for darker toasting or to the left for lighter toasting. To reheat toast that has cooled, turn the shade control knob to the far left of the shade control settings.

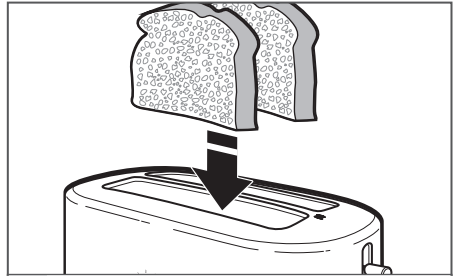


- 2** Insert bread or other food to be toasted into the slot(s).

NOTE: The age, type, and moisture level of different breads may require different shade settings. For example, dry bread will brown more rapidly than moist bread and will require a lighter setting.

 NOTE: For even toasting, toast only one bread type and thickness at a time. If toasting crumpets, be sure to press the Crumpet button. See the “Toasting crumpets” section.

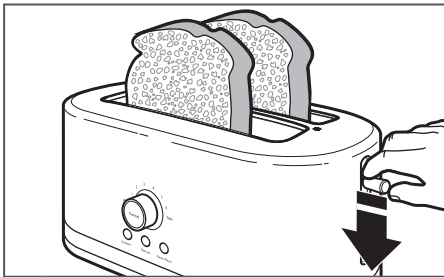

 - 3** Press down on lift lever to start the toasting cycle. If Keep Warm isn't selected, the toast will rise automatically at the end of the cycle and the Toaster will turn off.

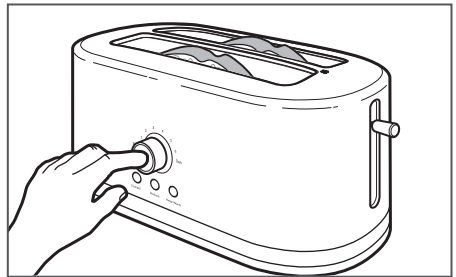

- 4** To cancel toasting at any time, press CANCEL. The Toaster will raise the toast and turn off.

NOTE: To activate the Keep Warm function, press down on the lift lever, then press the KEEP WARM button.

TIP: For smaller items, lift up on the lift lever to raise toast above the top of the Toaster.

FOR DETAILED INFORMATION ON USING THE TOASTER

Visit kitchenaid.com.au or kitchenaid.co.nz for additional Instructions with videos, inspiring recipes, and tips on how to use your Toaster.

 
SPECIAL TOASTING FUNCTIONS

SIMPLE START TO FINISH TOASTING


Simple start-to-finish toasting: Select any, or all, of the three special toasting functions (Defrost, Crumpet, or Keep Warm), and the Toaster will automatically move from one step to the next without any additional effort on your part.

TOASTING CRUMPETS


Your Toaster features a special setting for crumpets, ensuring optimal heating time for the best results. The heating elements will adjust to nicely toast the inside of a cut crumpet without burning the outside surface.

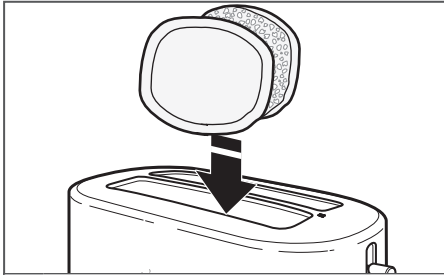

 - 1** Insert crumpets with the cut side facing in, as shown.

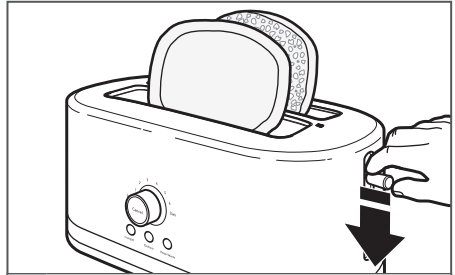

 - 2** With the shade control knob set to your desired shade, press down on the lift lever to start the toasting cycle.

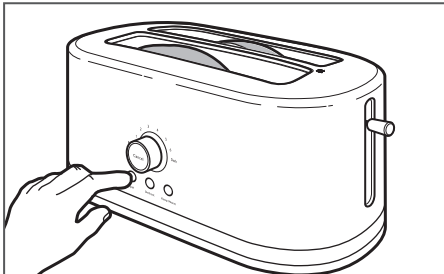


- 3** Press CRUMPET. The Crumpet indicator light will glow. If Keep Warm isn't selected, the crumpet(s) will rise automatically at the end of the cycle and the Toaster will turn off.

TIP: The Crumpet function can be used at the same time as the Defrost and Keep Warm functions.


SPECIAL TOASTING FUNCTIONS

DEFROSTING

 
The Defrost function adds additional time to the toasting cycle to defrost frozen bread before toasting it.

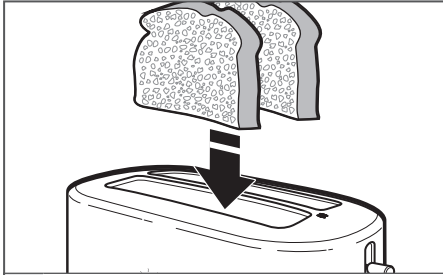

 - 1** Insert bread or other food to be toasted into the slot(s).

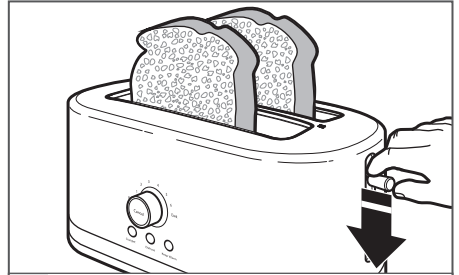

 - 2** With the shade control knob set to your desired shade, press down on the lift lever to start the toasting cycle.

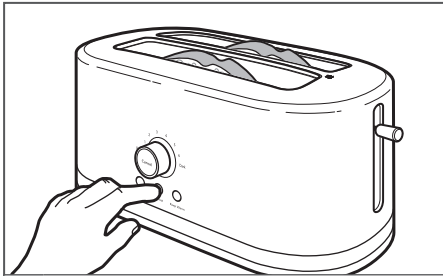


- 3** Press DEFROST. The Defrost indicator light will glow. If Keep Warm isn't selected, the toast will rise automatically at the end of the cycle and the Toaster will turn off.

TIP: The Defrost function can be used at the same time as the Crumpet and Keep Warm functions.


SPECIAL TOASTING FUNCTIONS

KEEP WARM

 
The Keep Warm function holds toast in low, gentle heat for 3 minutes after toasting.

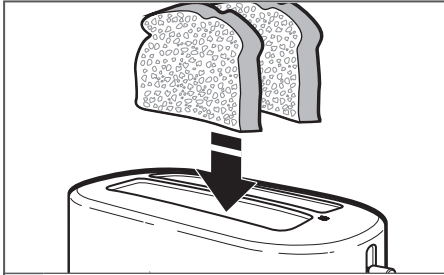

 
- 1** Insert bread or other food to be toasted into the slot(s).

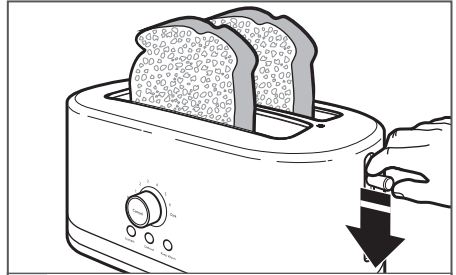

 - 2** With the shade control knob set to your desired shade, press down on the lift lever to start the toasting cycle.

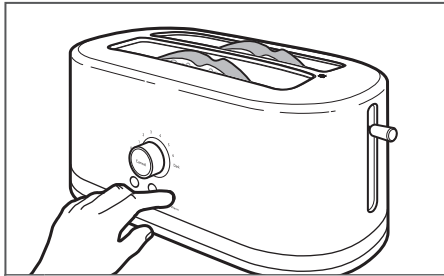

 - 3** Press the KEEP WARM button. The Keep Warm indicator light will blink slowly.

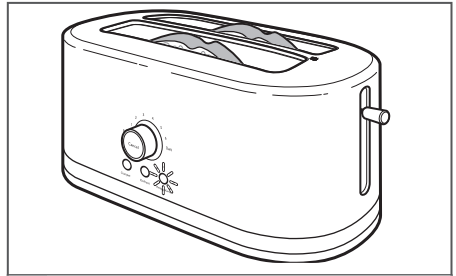


- 4** When the toasting cycle is complete, the Keep Warm indicator light will stop blinking and glow continuously while the Toaster keeps the toast warm for 3 minutes after toasting.

TIP: The Keep Warm function can be used at the same time as the Defrost and Crumpet functions.


SPECIAL TOASTING FUNCTIONS

LIFT & SEE

 With the Lift & See feature, you can check toasting progress without stopping the toasting cycle.

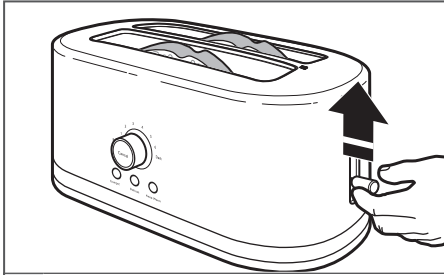

 - 1** Raise the lift lever any time during the toasting cycle to view the toast's progress.

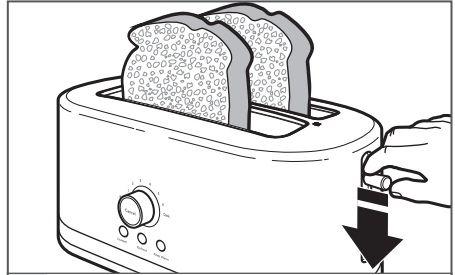


- 2** Press down on lift lever to lower the toast back into the Toaster.


TIP: For smaller items, lift up on the lift lever to raise toast above the top of the Toaster.

CARE AND CLEANING

 IMPORTANT: The tray will be hot immediately following a toasting cycle. Allow Toaster to cool before emptying the crumb tray.

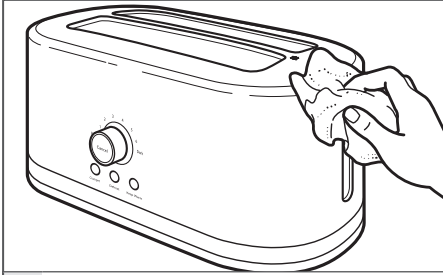


 - 1** Unplug the Toaster and let it cool before cleaning. Plug will vary by region. Wipe the Toaster with a soft, damp cotton cloth. Do not use paper towels, abrasive cleansers or liquid cleaning products. Do not immerse the Toaster in water.

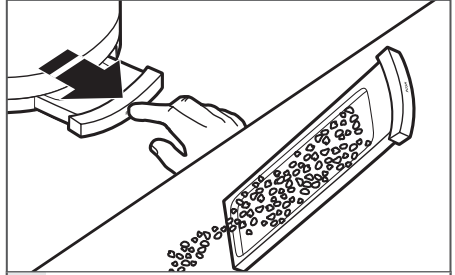

- 2** Press "PUSH" (located in center of the crumb tray) so that it opens slightly, then slide it out of the Toaster. Shake the crumbs into a waste container. For consistent browning results, empty the crumb tray after each use. Crumb tray is hand wash only.

 NOTE: If grease or oil splatters on the Toaster, wipe splatters away immediately using a clean, damp cotton cloth.

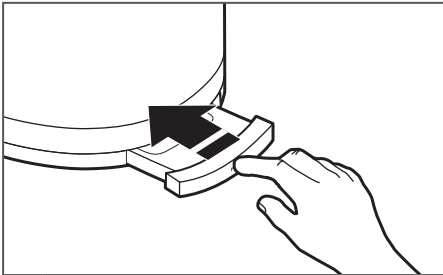

- 3** Return crumb tray to Toaster. Press in on the center of the crumb tray until it clicks into position. Do not use the Toaster without the crumb tray fully in place.

NOTE: KitchenAid does not recommend the use of a toaster cover.

FOR DETAILED INFORMATION ON CLEANING THE TOASTER

Visit kitchenaid.com.au or kitchenaid.co.nz for additional Instructions with videos, inspiring recipes, and tips on how to use your Toaster.

TROUBLESHOOTING

⚠ WARNING



Electrical Shock Hazard

Plug into a grounded outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

If your Toaster should fail to operate, check the following:

- 1.** Check that the Toaster is plugged into a grounded electrical outlet. If it is, unplug the Toaster.
- 2.** Plug in Toaster.
- 3.** If the Toaster still does not work, check the household fuse or circuit breaker.

KitchenAid

© 2015. All rights reserved.
Specifications subject to change without notice.