INSTALLATION INSTRUCTIONS FOR P5402-718-L


For LED Pendant

READ AND SAVE THESE INSTRUCTIONS

WARNING!SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER AVERTISSEMENT!COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DO DISJONCTEU

ASSEMBLING THE FIXTURE (Fig.1)

- 1. Shut off power at the fuse box or circuit breaker. Remove the old fixture including the mounting hardware.
- 2. Carefully remove the fixture from the carton and check that all parts are included as show in Figure 1.
- 3. Unscrew screws (G) to remove mounting plate (A) from canopy (F). Mark location of the four mounting holes for plastic anchors (B1). Drill the appropriate size holes on the ceiling and insert the plastic anchors (B1). Attach the mounting plate (A) to the junction box (not included) using the mounting screws (C). The side of the mounting plate marked "GND" must face out. Screw woodscrews (M1) through the holes into the plastic anchors (B1) to secure mounting plate (A) to the ceiling as shown in Fig.1&2 (The next page is the installation in which the ceiling is solid, please refer to Fig.2. If the ceiling is hollow, please refer to Fig.3.)
- 4. The length of the power cord can be adjusted by loosening set screw (S), then tighten set screw (S) to secure.
- 5. The support cable is provided to support the weight of the fixture while wiring. Align the fixture to mounting plate (A) and attach hook (N) on the end of support cable (O) into a slot located on mounting plate (A). Carefully allow the support cable (O) to support the weight of the fixture while wiring (Fig.1).

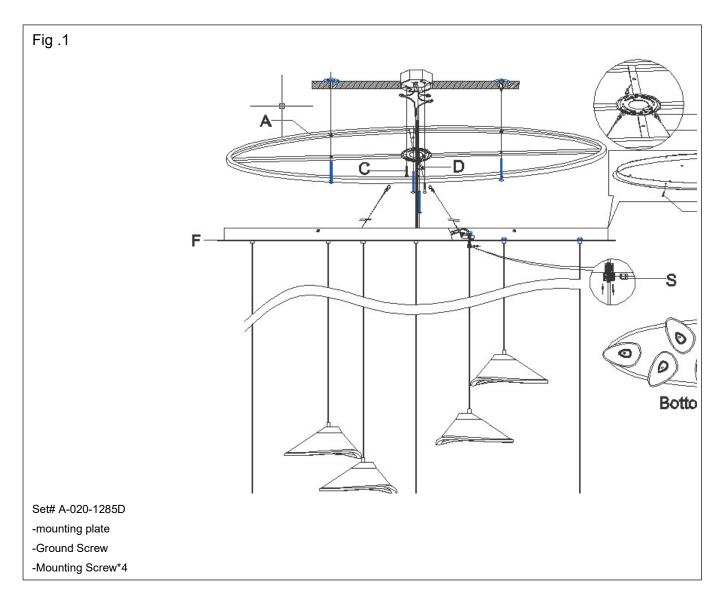

INSTALLATION INSTRUCTIONS FOR P5402-718-L

For LED Pendant

READ AND SAVE THESE INSTRUCTIONS

WARNING!SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER AVERTISSEMENT!COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DO DISJONCTEU

Fig. 2(FOR SOLID CEILING)

- a. Drill four (10mm) diameter holes in the proper position on the ceiling according to the mounting location of the fixture, insert plastic anchors (B1).(Fig.2-A)
- b. Secure mounting plate (A) to ceiling using woodscrews (M1). (Fig.2-B)

Fig.3(FOR HOLLOW CEILING)

- a. Drill four (18mm) diameter holes in the proper position on the ceiling according to the mounting location of the fixture. (Fig.3-A)
- b. Pass crown bolts (M2) and toggle bolt anchor (B2) through the keyhole on mounting plate (A), then carefully push the toggle bolt anchor (B2) into the hole in the ceiling. Screw crown bolt (M2) which will tighten mounting plate (A) to the ceiling. (Fig.3-B)

CONNECTING THE WIRES (Fig. 4)

6.Connect the electrical wire as show in Fig.4. Making sure that all the connectors are secured. If your junction box has a ground wire (green or bare copper), connect the ground wire from the fixture to it. Otherwise connect fixture ground wire directly to mounting plate (A) using green screw (D) provided. Tuck the wire connections neatly into the junction box

FINISHING THE INSTALLATION (Fig.1)

- 7.Slide canopy (F) over mounting plate (A) and secure with screws (G).
- 8.Unscrew finial (J). Slide glass shade (E), acrylic diffuser (H), and gold decorative piece (I) to lamp body (L) and secure with finial (J).
- 9. Finally, tear off the protective film at the bottom of canopy (F).

Your installation is now complete. Return power to the junction box and test the fixture.

CAUTION/ATTENTION: When handling the fixture, do not apply pressure to the LEDs. Hold the fixture by the frame only. IMPORTANT: Fixtures should be installed by a qualified electrician to ensure proper wiring and installation.

Dimmable with ELV and/or LED compatible wall dimmer switches.

