## **LED Exterior Wall Sconce**

ES49604


## START FROM HERE

- Make sure **POWER** is **COMPLETELY OFF** at the fuse box
- Have your fixture installed by a qualified licensed electrician
- · Prepare everything in a clear area
- Wear gloves at all time during this installation
- · Read instructions carefully before you start assembly
- Keep this installation sheet for future reference

**Technical Support:** 1-855-855-8926

- **1.** Remove fixture from its original package.
- 2. Separate fixture (2a) from backplate (1f) by removing set screws with allen key (2f).
- **3.** Separate backplate (1f) from mounting plate (1c) by removing screws (1g).
- **4.** Attach mounting plate **(1c)** to electrical junction box **(1a)** using junction box screws provided **(1e)** in hardware package.
- **5.** Make proper electrical connections (black to hot "L", white to neutral "N", ground to "GND") with wire nuts **(1b)** provided in hardware package.

- Please Note:
- This Kuzco LED fixtures come with pre-wired LED module(s)
- Unless instructed, Do Not touch any part of the LED module(s) as any unnecessary contact with the module could cause permanent damage
- · Must be installed on a covered ceiling
- 120-277V input
  - **6.** Attach backplate (1f) to mounting plate (1c) with screws (1g).
  - **1.** Attach fixture (2a) to backplate (1f) with set screws and allen key (2f).
  - **8.** To prevent moisture from entering the electrical junction box (1a) and causing a short, seal around the top and side perimeter between the fixture and the wall surface with weather resistant caulking (Illustration 1). The space at the bottom should be left un-caulked to prevent moisture build up.

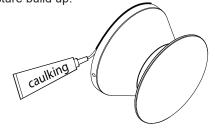

1a. 1b. 1c. Illustration 1

1e. 1f. 1g. 2a. 2f.

PRODUCT ID	PART
1c.	XHBCS401-GV
1e.	XHCS832-8
1g.	XHPPM4-5
2f.	XHSSM5-14
LED Driver	XDR-HEP-LSC9-350-UNV-ND
Allen Key	XHAK-M5



19054 28th Avenue Surrey, BC Canada V3Z 6M3 T: 604 538 7162 TF: 1-855 85 KUZCO F: 604 538 7196 W: kuzcolighting.com 20200107