

# Paperweight

HS349\_ 1.4




## GENERAL PRODUCT INFORMATION:




This product is ETL listed and suitable only for indoor dry locations and approved for use at any height above the finished floor.




## Adjust the Fixture Height

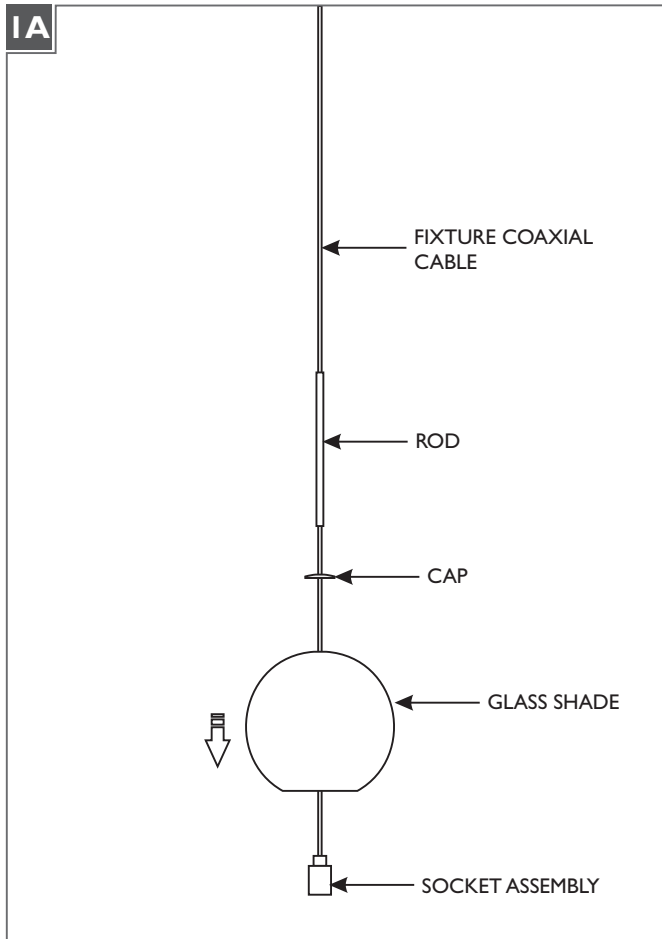


- 1** Feed the fixture coaxial cable through the glass shade. Slide the glass shade down the cord and rest it onto the socket assembly.
- 2** Cut the coaxial cable to the desired length.

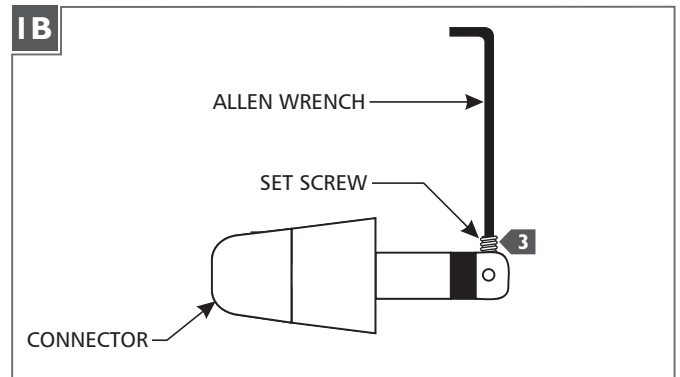


- 3** Back out (do not remove) the set screw on tip of the connector with the provided Allen wrench.

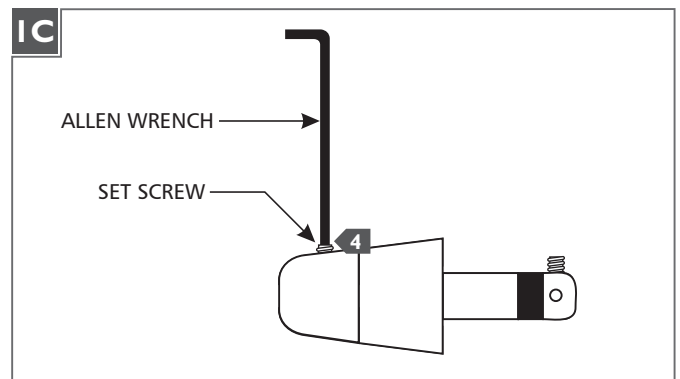


- 4** Back out (do not remove) the set screw on the conical connector with the provided Allen wrench.

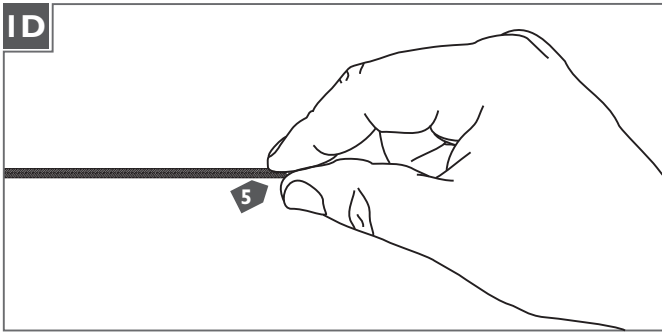


**5** Gently twist the end of the coaxial cable between thumb and forefinger.

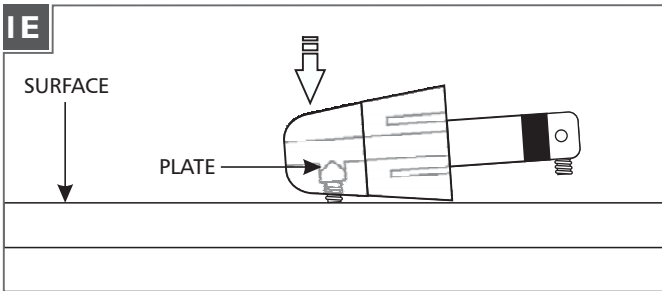


**6** Tap the conical connector on a hard surface with the set screw facing down, so the plate inside drops into place.

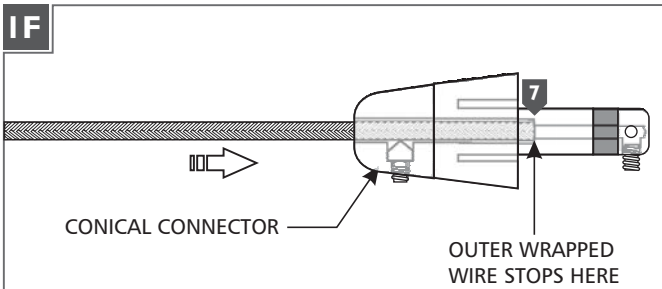

**7** Feed and push the coaxial cable into the conical connector. The coaxial cable will come to a stop point after being inserted 3/4" into the conical connector.

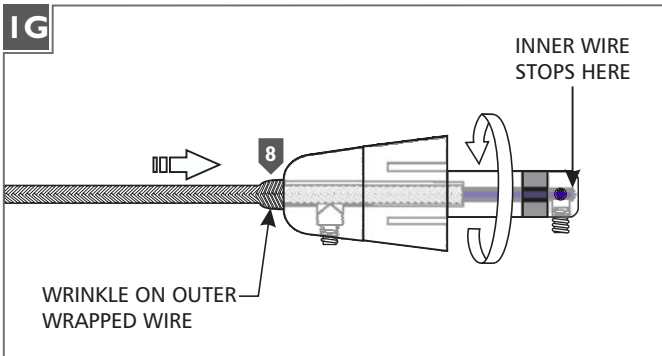


**8** Keep pushing the coaxial cable into the connector while rotating the connector to ease feeding the inner wire into the tip of the connector. The outer wrapped wire will start wrinkling while being inserted another 1/2" into the connector.

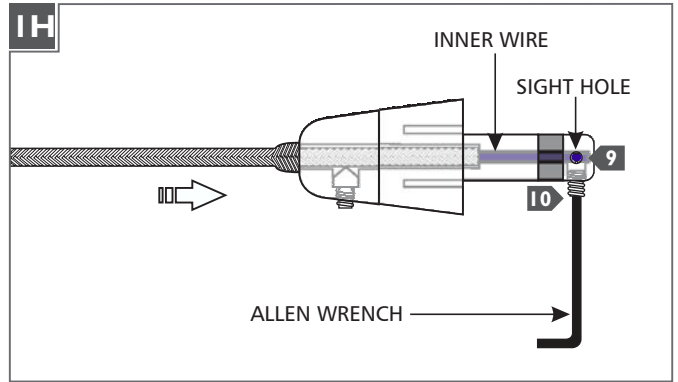


**9** Look into the sight hole on the top of the connector to make sure that the inner wire is contacting the end of the connector.

**10** Hold the coaxial cable in place and tighten the set screw on top of the connector with the provided Allen wrench. Make sure this set screw connection is tight.

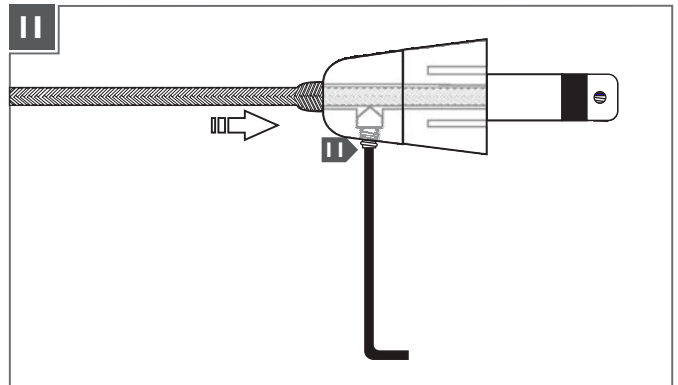


**11** Firmly tighten the set screw on the conical connector.

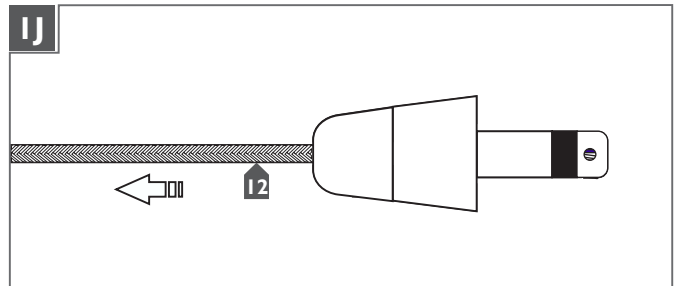

**12** Pull the coaxial cable toward the fixture to smooth the wrinkles.

## Install the Lamp

**NOTE:** To reduce the risk of a burn or electric shock during relamping, disconnect the power to the fixture.

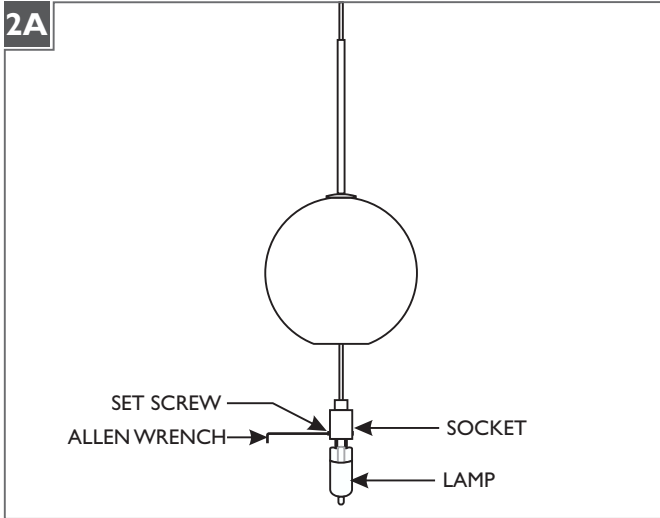

**NOTE:** Use only your fingers and soft cloth to replace the lamp.


Use **MAX 35 Watt** Type Xenon Bi-Pin Lamp.



- 1** Lift the glass shade to expose socket.
- 2** Push the lamp pins completely into the socket holes and tighten the two set screws using the provided Allen wrench. **Make sure the set screw connections are very tight to avoid heat build up and corrosion.**

### **WARNING: RISK OF FIRE**

Never replace a Xenon lamp with a regular Halogen lamp. A regular Halogen lamp requires a protective glass shield.

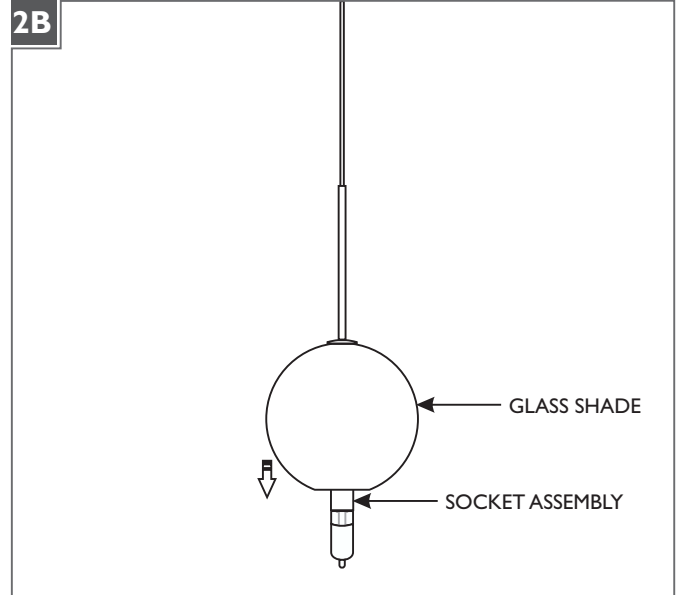

- 3** Lower the glass shade onto the socket.

**SAVE THESE INSTRUCTIONS!**

**LBL**

7400 Linder Ave, Skokie, IL 60077

800.323.3226 - 847.626.6300

**[www.lblighting.com](http://www.lblighting.com)**

© 2013 LBL Lighting. All rights reserved. The "LBL Lighting" graphic is a registered trademark of LBL Lighting. LBL Lighting reserves the right to change specifications for product improvements without notification.

A Generation Brands Company