 
 


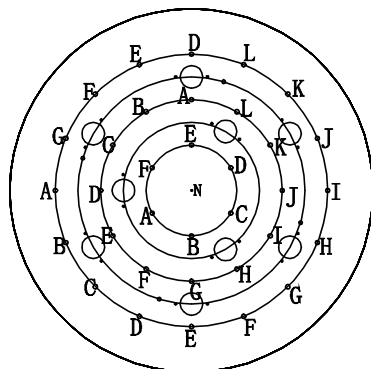

1. Turn breaker off for circuit on outlet where fixture is to be installed.
2. Remove X bracket from fixture and install to electrical box
3. Mark 4 holes on outer slots of bracket for hollow wall anchors
4. Remove X bracket from outlet
5. Drill 4 x 1/8" holes and insert hollow wall anchors
6. Reinstall X bracket to outlet and secure bracket to ceiling using 4 screws included into hollow wall anchors
7. Wire fixture to wires in outlet box. Green wire is for Ground.
8. Install fixture to bracket and tighten 4 nuts so that fixture meets the ceiling.
9. Install GU10 light bulb by inserting into socket and twist lock into place.
10. Install strings of glass onto pan. Suggested placement of glass strings are on directions by row.

GU10 halogen bulbs can be dimmed using standard triac dimmers. It is recommended that GU10 LED bulbs be dimmed using Lutron CL dimmers.

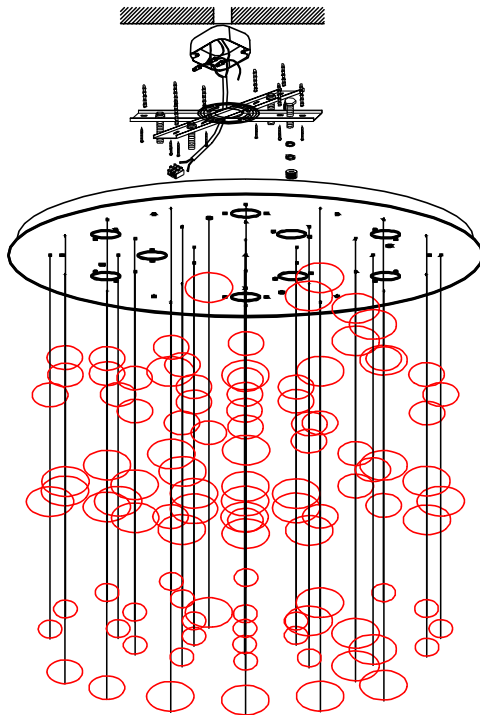


CRY Code	MAXIM CRY#
A	CRS39853PCA
B	CRS39853PCB
C	CRS39853PCC
D	CRS39853PCD
E	CRS39853PCE
F	CRS39853PCF
G	CRS39853PCG
H	CRS39853PCH
I	CRS39853PCI
J	CRS39853PCJ
K	CRS39853PCK
L	CRS39853PCL
N	CRS39853PCN




Installation Instructions

 
Model 39853PCPC

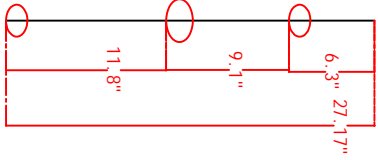


CRS39853PCA*3PCS
L: 27.17"

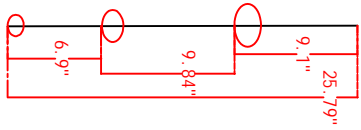 


CRS39853PCB*3PCS
L: 25.79"

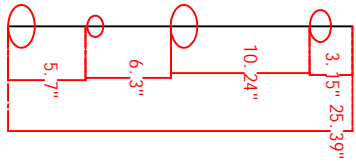 


CRS39853PCC*3PCS
L: 25.39"

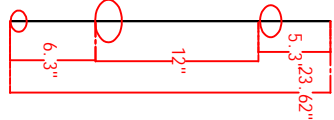 


CRS39853PCD*4PCS
L: 23.62"

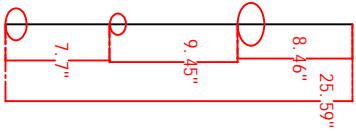 


CRS39853PCE*4PCS
L: 25.59"

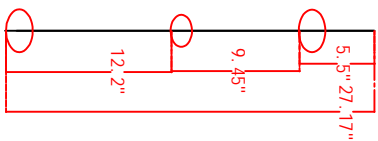 


CRS39853PCF*4PCS
L: 27.17"

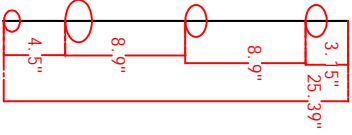 


CRS39853PCG*3PCS
L: 25.39"

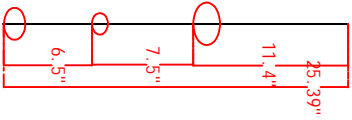 


CRS39853PCH*2PCS
L: 25.39"

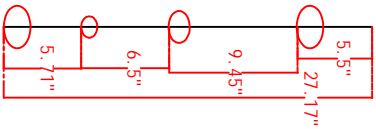 


CRS39853PCI*2PCS
L: 27.17"

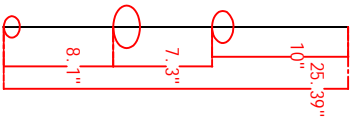 


CRS39853PCJ*2PCS
L: 25.39"

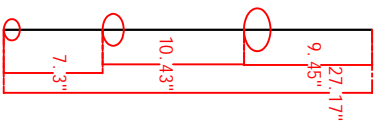 

CRS39853PCK*2PCS
L: 27.17"

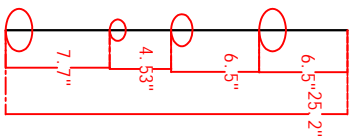 

CRS39853PCL*2PCS
L: 25.2"

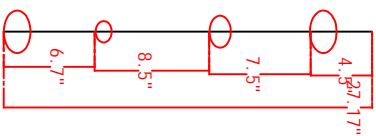 

CRS39853PCN*1PC
L: 27.17"