








- Please check your product packaging to make sure the included accessories are in the list of standard accessories. If any parts are missing please contact your dealer immediately.
- Do not allow any sharp objects to come into contact with the cabinet, as it will scratch the surface.
- Continuous and prolonged exposure to direct sunlight may cause discoloration to the wood.
- Do not put any hot appliances directly on or near the cabinet.
- Please avoid using cleaning products that contain bleach or ammonia.
- Wood surfaces should only be cleaned with wood care products such as soapy water or furniture polish.

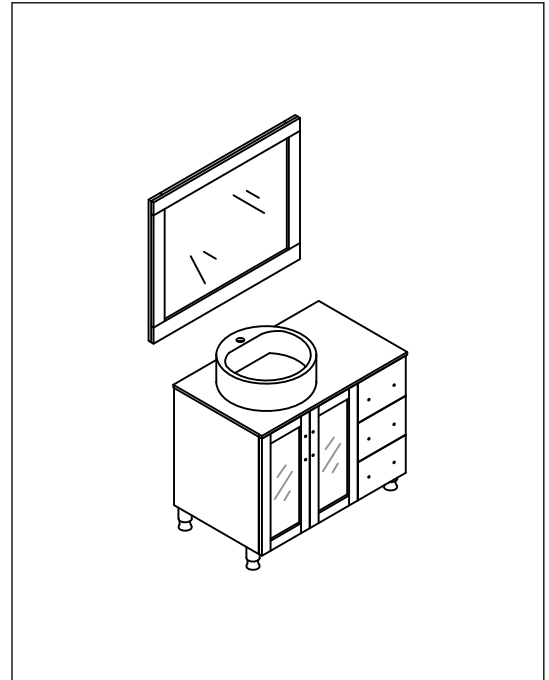

## INSTALLATION

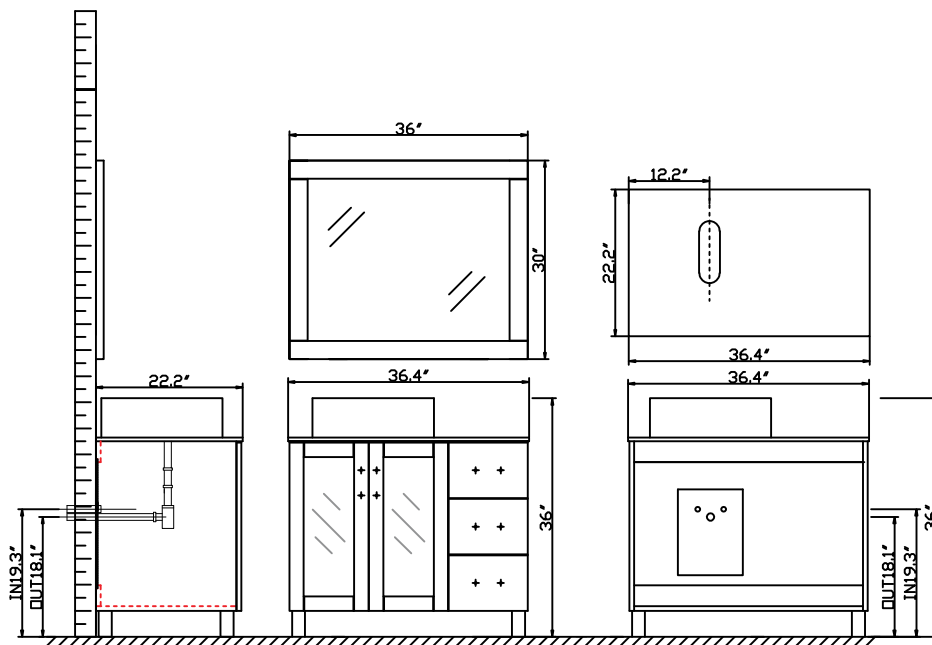


## MAIN BODY PARTS

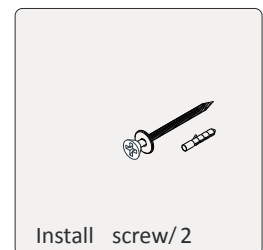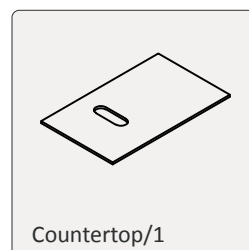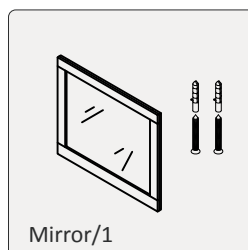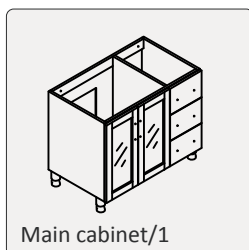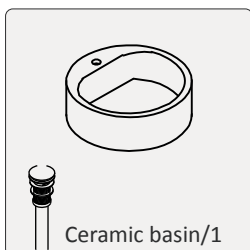


## INSTALLATION PARTS

## INSTALLATION TOOLS

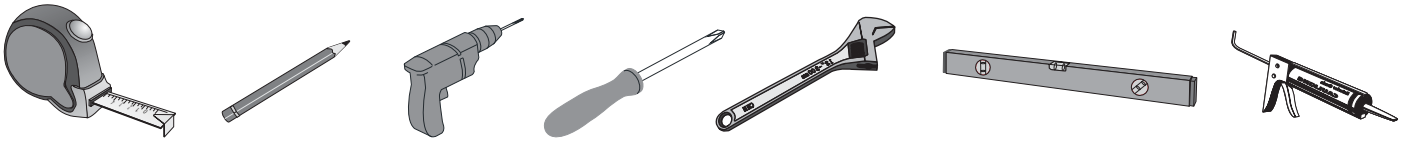

## INSTALLATION, REMOVAL, ADJUSTMENT OF TOP FAST-LOADING HINGE

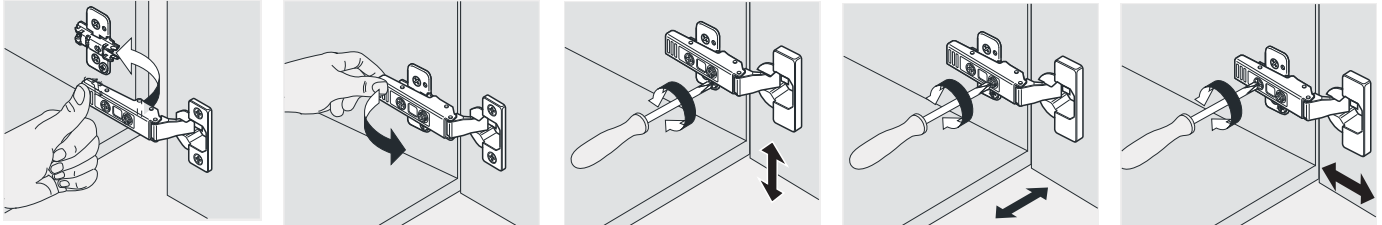

install


remove

adjust the height

adjust the lateral

adjust the deep

## DRAWER ADJUSTMENT

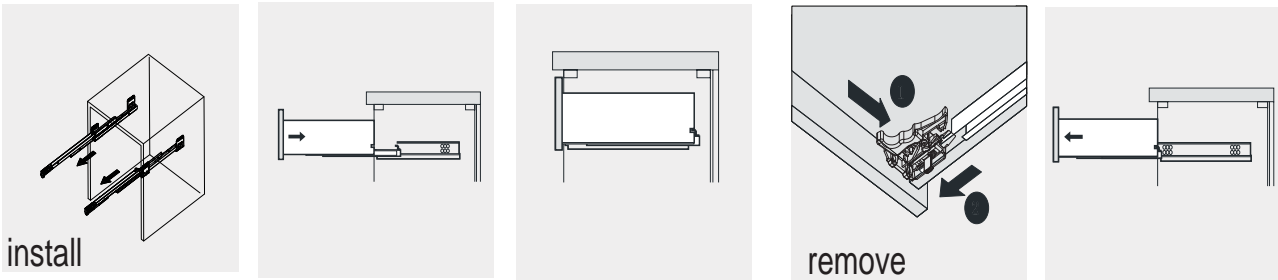

install

remove

## INSTALLATION INSTRUCTIONS

