

INSTALLATION INSTRUCTIONS: STONE VESSEL SINKS

ASSEMBLY

Please note:

- Review and abide by all building and plumbing codes.
- Miseno sinks need to be installed by a professional or skilled do-it-yourselfer.
- Some counters require different cutting methods; seek the details of your chosen countertop material.
- Check to make sure the sink is sealed watertight.

Miseno's vessel sinks can be installed sitting on the countertop or recessed down up to a third or even half of its height. You may want to figure out the ideal sink height you would like your vessel sink to be at. The finished height is a personal preference. Most vanity heights are set at 30"-32". After a vessel sink is mounted on the counter the vessel height will be 34"-36".

- **Layout and place** the sink and faucet of your choice in the desired location. Using a pencil, mark the bottom of the sink hole and faucet base. Consider the flow of the faucet when marking the location.

- **Drill the countertop** for the sink drain opening with a 1-5/8" drill bit.


- **Place the vessel** on top of the counter and make sure the drain fits down inside of the counter. To lower the height of the sink, simply enlarge the hole.

- **Use a bead** of clear silicone to seal between the sink and counter.



- **Use a level** to ensure the vessel is level in every direction and install the drain.

- **Secure the vessel** to the counter with the fastener on the drain. Be sure to not overtighten the drain assembly. Hand-tightening will be sufficient.

When cleaning up after installation, do not use abrasive cleaners. Use soft soap and warm water with a washcloth to clean the surface.

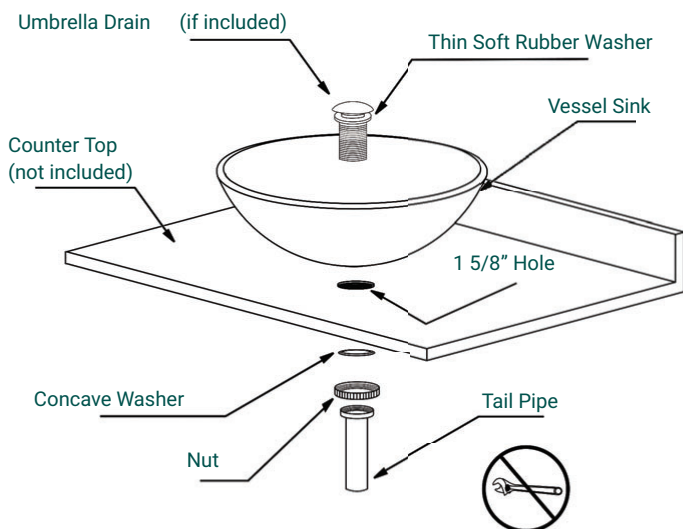

DO NOT OVER TIGHTEN THE DRAIN!

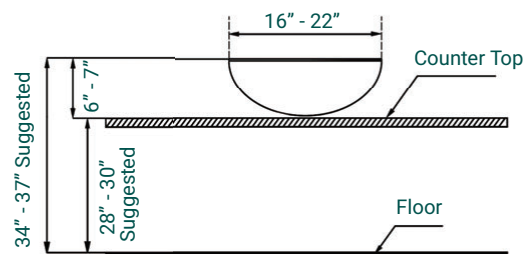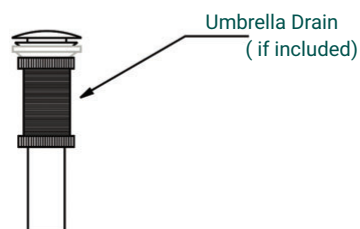

TOOLS NEEDED FOR ASSEMBLY

(not included)



Questions, problems, missing parts? Before returning to your retailer, call our customer service department at 855.480.2915, 7am-5pm PST, Monday-Friday, or email us at infoservice@miseno.com

TROUBLESHOOTING TIPS

Issue	Reason	Solution
Sink wobbles or is loose	Drain is loose	Use silicone; tighten Umbrella drain
Does not completely drain	Umbrella drain is too high; wrong seal used	Make sure correct seal is used and is below bevel
Leakage under sink	Drain has come loose	Tighten the fastener under the countertop