MISENO

SINGLE HANDLE PRE-RINSE KITCHEN FAUCET

Model: MNO500LCP MNO500LZSS MNO500LFB MNO500LCG



CAUTION-TIPS FOR REMOVAL OF OLD FAUCET:

Always turn off water supply before removing existing faucet or replacing any part of the faucet. Open the faucet handle to relieve water pressure and ensure that water is completely shut off.

CARE INSTRUCTIONS:

To preserve the finish of your faucet, apply non-abrasive wax. Any cleaners should be rinsed off immediately Do not use abrasive cleaners on the faucet.





Screw bolts to the escutcheon.

Insert escutcheon assembly through the base plate and the holes of the sink.



Insert faucet through hole in escutcheon. From underneath sink, attach rubber washer (1A), metal washer (1B), and nut (1C). Lock nut (1C) into position by tightening screws (1D).



Insert faucet through hole in sink or countertop. From underneath sink, attach rubber washer (2A), metal washer (2B), and nut (2C). Lock nut (2C) into position by tightening screws (2D).



Making the waterline connections.

Threaad the nut (3A) on supply line onto outlet of water supply valve (3B) and tighten with wrench. Do not over tighten.



Important: After installation is completed, to prevent damage to the nternal parts of your faucet from debris that may have collected in the water lines, it will be necessary to flush the faucet. Turn on hot/cold water supplies and remove spray head. Hold the end of the hose down into the sink and turn the faucet on to the warm position so hot and cold water are mixed. Flush water lines for one minute. Check for leaks and re-tighten any connections if necessary. Reinstall spray head by screwing onto end of hose by hand.

Maintenance: If faucet leaks underneath handle or water does not completely shut off: replace cartridge.



