
mr.steam[®]

104216, 104217, 104218

- Linear Steamhead
- Quiet, even distribution of steam
- No field assembly required
- No moving parts
- Minimal profile



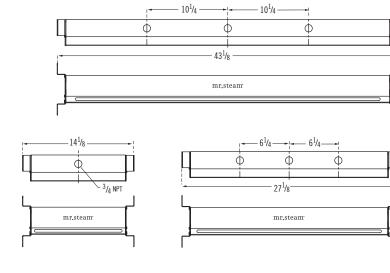

Installing the Linear Steamhead


STEAMHEAD INSTALLATION (3/4" NPT)

IMPORTANT: Do not disassemble steamhead. Mr.Steam's steam head is shipped fully assembled and requires no additional assembly.

CAUTION Because the steamhead and direct steam emissions are very hot, locate the steamhead where incidental contact by bather with the steamhead or direct steam emission cannot occur.

Locate steamhead 6-12 inches above floor, except for tub/shower enclosures; install 6 inches above tub top edge.

CAUTION Consult local building codes when installing 104217 and 104218. Codes may require the use of headers, jack studs, king studs and/or cripple studs.

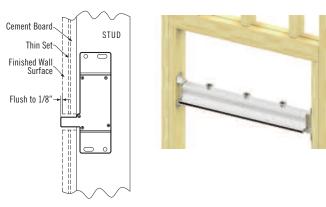

FOR ILLUSTRATIVE PURPOSES ONLY. IMPORTANT NOTE: FOR SAFE AND TROUBLE FREE INSTALLATION

visit mrsteam.com or scan the QR code before installation to download the Installation, Operation and Maintenance Manual or refer to the manual provided with the unit.



MODEL	PROJECT INFORMATION
104216: For MS90 thru Super 3	Location:
104217: CU360 thru CU1400	Architect:
104218: CU2000 thru CU4500	Engineer:
Notes:	Contractor:
	Submitted By:
	Date:

m1.Steam® Sussman-Automatic Corp® hello@mrsteam.comwww.mrsteam.com43-20 34th Street, Long Island City, NY 11101 TEL: 1 800 76 STEAMFAX: 718 472 32569410 S. La Cienega Blvd. Inglewood CA 90301 TEL: 1 800 72 STEAMFAX: 310 216 2944

TS0067 REV 1.16